

Remote Controls

Foot, Hand and Fingertip Remote Controls 

Foot Controls



RFCS-14 HD shown.

RFCS-14 HD (14-pin plug)* #194 744
RFCS-5 HD (5-pin plug) #195 218**
 Heavy-duty foot pedal current and contactor control provides increased stability and durability from larger base and heavier cord. Maximum flexibility is accomplished with a reconfigurable cord that can exit the front, back or either side of the pedal. Includes 20-foot (6 m) cord with plug.



RFCS-14 shown.

RFCS-14 (14-pin plug)* #043 554
RFCS-5 (5-pin plug) #043 716**
 Foot pedal current and contactor control. Includes 20-foot (6 m) cord with plug.

RFCS-6M (6-pin plug)
#195 183 13.25 ft. (4 m) cord
#195 504 20 ft. (6 m) cord
 Same as above, but for Maxstar® 150 STL, Maxstar 150 STH, and Multimatic® 200.

* For Miller solid-state power sources AFTER serial number JK674521.

** For Miller solid-state power sources BEFORE serial number JK674521.



HD Conversion Kit #194 743
 Kit provides the needed hardware to convert your existing RFCS-14 foot control to the heavy-duty version.



RFC-23 #242 199 020
 For Dialarc® 250 AC/DC. Foot pedal current and contactor control. Includes 20-foot (6 m) cords with plugs.
 Note: Adapter no longer available.



RFC-RJ45 #300 432
 For Diversion™ 165 and 180. Foot pedal current and contactor control. Includes 14-foot (4.3 m) cord with plug.

Hand Controls



RHC-14 (14-pin plug)*
#242 211 020 20 ft. (6 m) cord
#242 211 100 100 ft. (30.5 m) cord
 Miniature hand current and contactor control. Dimensions: 4 x 4 x 3.25 inches (102 x 102 x 83 mm). Includes cord with plug.



RHC-3 #242 210 020
 For Dialarc 250 AC/DC. Hand amperage control. Includes 20-foot (6 m) cord with plug.
 Note: Adapter no longer available.



RHC-3GD34A #041 122
 For Big Blue® 400 CC and 500 CC. Hand amperage or voltage control. Includes 20-foot (6 m) cord with plug.



PRHC-14 #195 511
 Complete current or voltage control brings 120 volts of GFCI power to work area in a single cord. Housed in a durable and light aluminum case and includes 125-foot (38 m) cord with plugs.



Miller Electric Mfg. Co.
 An ITW Welding Company
 1635 West Spencer Street
 P.O. Box 1079
 Appleton, WI 54912-1079 USA

Equipment Sales US and Canada
 Phone: 866-931-9730
 FAX: 800-637-2315
 International Phone: 920-735-4554
 International FAX: 920-735-4125

MillerWelds.com
   



Fingertip Controls



RCC-14 (14-pin plug)* #151 086

RCC-5 (5-pin plug) #157 365**

East/west rotary-motion fingertip current and contactor control attaches to TIG torch using two hook-and-loop fasteners. Great for production or contractors that need quick ramp-up. Includes 26.5-foot (8 m) cord with plug.

RCC-6M (6-pin plug) #301 118

Same as above, but for Maxstar® 150 STL, Maxstar 150 STH and Multimatic® 200.

Includes 13.25-foot (4 m) cord with plug.



RCCS-14 (14-pin plug)* #043 688

RCCS-5 (5-pin plug) #043 718**

North/south rotary-motion fingertip current and contactor control attaches to TIG torch using two hook-and-loop fasteners. Great for applications that require a finer amperage control. Includes 26.5-foot (8 m) cord with plug.

RCCS-6M (6-pin plug)

#195 184 13.25 ft. (4 m) cord

#195 503 26.5 ft. (8 m) cord

Same as above, but for Maxstar® 150 STL, Maxstar 150 STH and Multimatic® 200.

RCCS-RJ45 #301 146

Same as above, but for Diversion™ 165 and 180. Includes 13.25-foot (4 m) cord with plug.



RMLS-14 (14-pin plug)* #129 337

Momentary- and maintained-contact rocker switch for contactor control. Push forward for maintained contact and backward for momentary contact. Includes 26.5-foot (8 m) cord with plug.



RMS-14 (14-pin plug)* #187 208

Momentary-contact switch for contactor control. Rubber-covered pushbutton dome switch ideal for repetitive on-off applications. Includes 26.5-foot (8 m) cord with plug.

RMS-6M (6-pin plug) #195 269

Same as above, but for Maxstar 150 STL and Maxstar 150 STH.



RPBS-14 (14-pin plug)* #300 666

Attaches to the TIG torch to remotely start and stop the TIG welding process. Includes 25-foot (7.6 m) cord with plug.

Wireless Remote Controls



Wireless Remote Foot Control and Receiver #300 429

For remote current and contactor control.

Receiver plugs directly into the 14-pin receptacle of Miller machine. 90-foot (27.4 m) operating range. See literature Index No. AY/6.5 for more information.



Wireless Remote Hand Control and Receiver #300 430

For remote current and contactor control. Receiver plugs directly into the 14-pin

receptacle of Miller machine. 300-foot (91.4 m) operating range. See literature Index No. AY/6.6 for more information.

Extension Cables

Extension Cables

#242 208 010 10 ft. (3 m)

#242 208 025 25 ft. (7.6 m)

#242 208 050 50 ft. (15.2 m)

#242 208 080 80 ft. (24.4 m)

#242 208 100 100 ft. (30.5 m)

For 14-pin remote controls/24 VAC wire feeders. 14-pin plug to a 14-pin socket. (Not for 115-volt XR™ or 50 Series feeders.)

Adapter Cords



14-Pin to 6-Pin Adapter Cord #300 507

For Maxstar 150 STL, Maxstar 150 STH and Multimatic 200. 12-inch (305 mm) cord adapts Miller 14-pin foot control or fingertip control to a 6-pin plug.

14-Pin to 5-Pin Adapter Cord #130 003

18-inch (457 mm) cord adapts Miller 14-pin foot control or fingertip control to a 5-pin plug.

5-Pin to 14-Pin Adapter Cord #041 947

18-inch (457 mm) cord adapts Miller 5-pin foot control or fingertip control to a 14-pin plug.

RJ45 to 14-Pin Adapter Cord #300 688

12-inch (305 mm) cord adapts Miller RJ45 foot control or fingertip control to a 14-pin plug.

* For Miller solid-state power sources AFTER serial number JK674521.

** For Miller solid-state power sources BEFORE serial number JK674521.

Distributed by:

 **Miller**
The Power of Blue®