


Write your serial # here:

**IMPORTANT:** Please write down serial # located on back of terminal before mounting.

0PPDLAUBKN12236FFE



**Software Requirements**

- Single User installation, Local Area Network (LAN) only
- TimeTrax™ Time & Attendance software does not operate on server PCs. Pyramid Time Systems does not support the use of TimeTrax™ software on a server PC.
- For Multi User Upgrade, call 888.479.7264 Ext. 1.
- DHCP enabled network
- Windows 7 or above
- All Windows updates must be installed prior to software installation
- User Profile with Admin rights
- English
- Regional settings & hardware input in English

**What you will need.**

- Tape Measure
- Pencil
- Phillips Head Screw Driver
- Power Drill (Optional)

**Contents**

- Terminal
- Software CD
- TTElite Series Software Guide & TTElite Quick Start
- Mounting Hardware
- Power Supply
- Ethernet Cable (CAT5)
- Security Bracket & Key



**TIMETRAX™ Elite • Bio ek**  
**Biometric Time Clock System**  
**TTEliteEK**



**Quick Start Guide**  
**SIMPLE • SMART®**



Call us  
888.479.7264 EXT 1

 


Chat online  
pyramidthimesystems.com




Send us an email  
customersupport@ptitime.com

## Connect & Mount Terminal

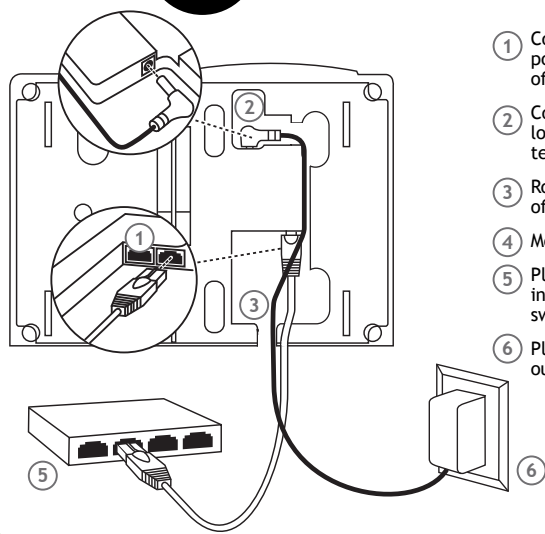

- 1 Connect Ethernet cable into Ethernet port located in compartment on back of terminal.
- 2 Connect power supply into power port located in compartment on back of terminal.
- 3 Route the cables through channel at base of terminal.
- 4 Mount terminal (see instructions below).
- 5 Plug free end of enabled Ethernet cable into a DHCP network jack, router or switch.
- 6 Plug free end of power supply into outlet.

### To mount terminal.

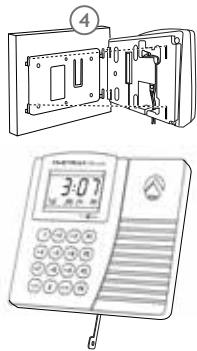 

- Hold mounting bracket flush against wall with cable access cutout towards floor. Note: The bottom of bracket should be approximately 45 inches from floor. Allow for 6ft long cable.
- Level bracket & mark four screw holes close to corner tabs.
- Drill holes as marked and insert included anchors if needed.
- Screw mounting bracket to wall with included screws.
- Drill hole centered in rectangular opening of bracket for cables. The hole should be large enough to route cables through wall.
- Push terminal onto mounting bracket aligning four tabs on bracket with four matching slots on back of terminal. **Be sure to write down the terminal serial number before mounting.**

- Slide terminal downward until locking tab clicks into place. When properly mounted, terminal cannot be slid up and off bracket without using included wall bracket release key to disengage locking tab.

### To detach terminal.

- Hold wall bracket release key with pointed end up & diagonally cut side away from you.
- Insert key into narrow slot located on bottom of terminal to right of cable access cutout.
- Push key all the way up into slot. Key will slide easily until last 1/2 inch until some resistance from locking tab is felt.
- With key fully pushed into slot, slide the terminal up and off mounting bracket.

## Setup Cont.



Click "Pay Class" from "Setup" drop down menu. A default Pay Class has been set up. Click "Edit" to choose your settings. Click "Save & Close". If additional Pay Classes are needed, click "Add Pay Class" and complete required fields (\*). Click "Save & Close". **It is very important that this information is correct before you continue.**



 
Click "Employee Group" from the "Setup" drop down menu. Click "Add Employee Group" and complete required fields (\*). Click "Save & Close". Repeat if additional Employee Groups are needed.

Start time should be one hour after last Out punch of previous pay period and one hour before first In punch of current pay period.

## Install TimeTrax™ Software



Insert TimeTrax™ DVD into CD-ROM drive. Run Install Wizard and click "Finish" when installation is complete. **Installation may take 15 minutes or longer to complete depending upon other installed applications.**  
Password may be changed after Setup is complete by clicking Administration/User Accounts from tool bar.

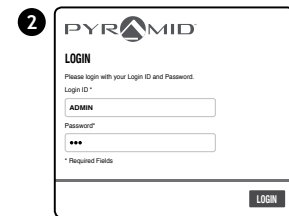

Enter Login ID "ADMIN". Enter Password "PTI" (case sensitive). Click "LOGIN".

## Setup



**IMPORTANT: Click "Help" from the main toolbar to access index of help topics, or click "F1" for help on a specific screen. Click on "Company" from the "Setup" drop down menu. Complete required fields (\*) then click "Save & Close".**

Required fields (\*) must be completed during initial Setup. Optional fields can be completed at any time.

## Setup Cont.



Click "Employee Profile" from the "Setup" drop down menu. Click "Add Employee" and complete required fields (\*). Click "Add Card" to enter a unique # up to 8 digits in the "Card #1" field. Click "Save" then click "Save & Close". Repeat to add employees.

## Using Time Clock

**IMPORTANT: Before using time clock, please register employee fingerscans at the time clock terminal. Instructions may be accessed by clicking "HELP" from main toolbar, or click "F1" for help on a specific screen. Please reference "Fingerscan Registration (TTELETEEK)" section.**

Place finger on red lit finger pad. If employee finger scan is successfully read, the red light will briefly go out, the time clock terminal will beep and the employee number will be displayed on terminal screen.

Employee punches generated from finger scans are stored within the terminal. The terminal stores the last 6,000 punches before download is required. Depending upon usage, punches can be retrieved on a more or less frequent basis.

