




54 Second Ave  
Chicopee, MA 01020  
413-594-4400

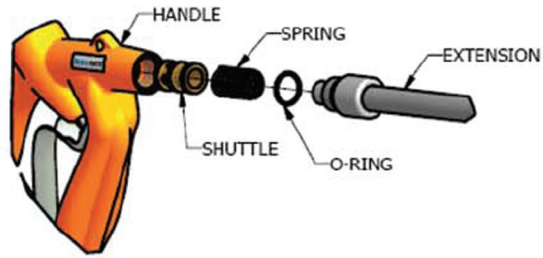


#### Maintenance Instructions

1. Unscrew extension from handle. Thread locker was applied to threads at factory therefore heat may be required to loosen thread locker.
2. Remove spring and shuttle from handle using provided tool.
3. Remove o-ring from extension.
4. Thoroughly clean threads of extension and threads and ID of handle.  
Use of acetone or equivalent evaporating solvent recommended.
5. Install new o-ring onto extension. Lubricate with o-ring lube.
6. Lubricate o-rings of shuttle with o-ring lube. Do not scratch ID of handle, this is an o-ring surface.
7. Install shuttle and then spring into handle.
9. Thread extension into handle. Gun can be used immediately.



54 Second Ave  
Chicopee, MA 01020  
413-594-4400

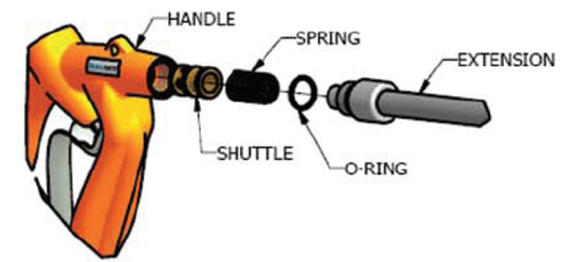


#### Maintenance Instructions

1. Unscrew extension from handle. Thread locker was applied to threads at factory therefore heat may be required to loosen thread locker.
2. Remove spring and shuttle from handle using provided tool.
3. Remove o-ring from extension.
4. Thoroughly clean threads of extension and threads and ID of handle.  
Use of acetone or equivalent evaporating solvent recommended.
5. Install new o-ring onto extension. Lubricate with o-ring lube.
6. Lubricate o-rings of shuttle with o-ring lube. Do not scratch ID of handle, this is an o-ring surface.
7. Install shuttle and then spring into handle.
9. Thread extension into handle. Gun can be used immediately.



54 Second Ave  
Chicopee, MA 01020  
413-594-4400

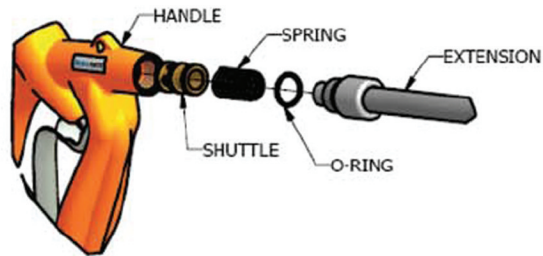


#### Maintenance Instructions

1. Unscrew extension from handle. Thread locker was applied to threads at factory therefore heat may be required to loosen thread locker.
2. Remove spring and shuttle from handle using provided tool.
3. Remove o-ring from extension.
4. Thoroughly clean threads of extension and threads and ID of handle.  
Use of acetone or equivalent evaporating solvent recommended.
5. Install new o-ring onto extension. Lubricate with o-ring lube.
6. Lubricate o-rings of shuttle with o-ring lube. Do not scratch ID of handle, this is an o-ring surface.
7. Install shuttle and then spring into handle.
9. Thread extension into handle. Gun can be used immediately.



54 Second Ave  
Chicopee, MA 01020  
413-594-4400

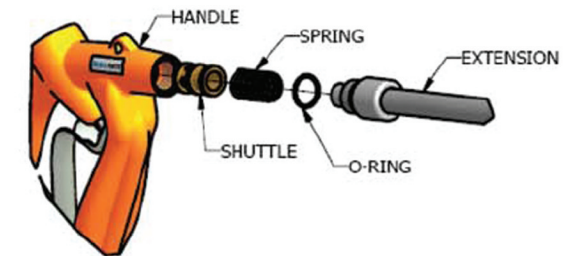

#### Maintenance Instructions

1. Unscrew extension from handle. Thread locker was applied to threads at factory therefore heat may be required to loosen thread locker.
2. Remove spring and shuttle from handle using provided tool.
3. Remove o-ring from extension.
4. Thoroughly clean threads of extension and threads and ID of handle.  
Use of acetone or equivalent evaporating solvent recommended.
5. Install new o-ring onto extension. Lubricate with o-ring lube.
6. Lubricate o-rings of shuttle with o-ring lube. Do not scratch ID of handle, this is an o-ring surface.
7. Install shuttle and then spring into handle.
9. Thread extension into handle. Gun can be used immediately.