

Used in combination with all metal or plastic drain systems.

A pipe wrench is needed to install this product and to remove old drain parts.



#### INSTALLATION:


Remove old flanged tailpiece.

1. Loosen slip nuts **A** and **B** on drain bend, do not remove.
2. Remove slip nut **C** from sink strainer **D**.
3. Swivel drain bend and drain trap to remove old tailpiece.

Install new tailpiece.

1. Place flanged tailpiece washer **E** on top and slip nut **C** from bottom up (threads upward) onto new tailpiece **F**.
2. Insert new tailpiece **F** into drain bend through slip nut **B**.
3. Swivel drain bend back to original installed position.
4. Push tailpiece upwards with flanged washer **E** flush to bottom of sink strainer **D**. Engage and tighten slip nut **C**.
5. Re-tighten slip nuts **A** and **B**.

Tighten all connections with pipe wrench. Turn on water and check for leaks. If leak occurs, tighten nuts slightly.

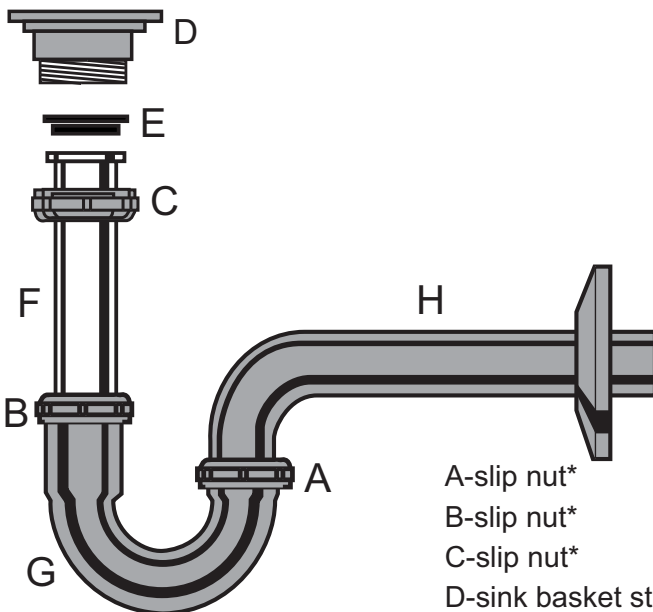

- A-slip nut\*
- B-slip nut\*
- C-slip nut\*
- D-sink basket strainer\*
- E-washer\*
- F-tailpiece
- G-drain bend\*
- H-wall tube\*