

## EXTENSION TUBE

Used in combination with all metal or plastic drain systems.

A pipe wrench is needed to install this product and to remove old drain parts.



## INSTALLATION:


Remove old extension tube.

1. Loosen slip nuts **A** and **B** on drain bend, do not remove.
2. Remove slip nut **C** from tailpiece.
3. Push old extension **E** down into drain bend **F** enough to disengage it from bottom of tailpiece **D**.
4. Swivel drain bend enough to remove old extension tube **E**.

Install new extension tube.

1. Remove slip nut and washer from new extension tube **E**.
2. Insert new extension tube **E** into drain bend through slip nut **B**.
3. Slip nut (threads down) and washer onto tailpiece **D**.
4. Swivel drain bend **F** back to original installed position.
5. Pull extension tube **E** upwards to insert tailpiece.
6. Engage slip nut **C** onto extension tube **E** and tighten.
7. Re-tighten slip nuts **A** and **B**.

Tighten all connections with pipe wrench. Turn on water and check for leaks. If leak occurs, tighten nuts slightly.

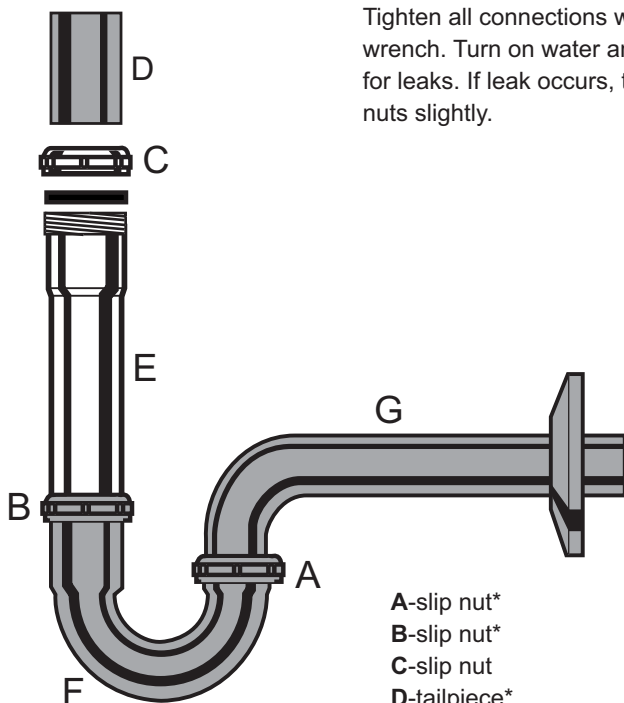

- A**-slip nut\*
- B**-slip nut\*
- C**-slip nut
- D**-tailpiece\*
- E**-extension tube
- F**-drain bend\*
- G**-wall tube\*

\*not included