

1TTY9 Instructions Ver00.doc



Step 1



Step 2



Step 3

To remove mop head follow steps 1 through 3.
To install mop head follow steps in reverse order.