


Replacement Ribbon Model 5000R : Instructions SIMPLE 8 SMART™

- ① CAUTION - Unplug time clock before installing ribbon.
- ② To remove old ribbon, lift ribbon cartridge straight up using the tab located on top of cartridge.
- ③ Remove new ribbon cartridge from packaging & turn the manual ribbon advance knob clockwise to straighten ribbon.
- ④ Holding the tab, install ribbon cartridge into print carriage by aligning retaining pins to rear of carriage clips making certain the ribbon is between print head & metal print mask.
- ⑤ Gently push down cartridge until it snaps into carriage while turning the manual ribbon advance knob clockwise.
- ⑥ Turn manual ribbon advance knob clockwise a few rotations to ensure ribbon is positioned correctly in front of print head. CAUTION: Moving parts. Be sure to install cover before printing.

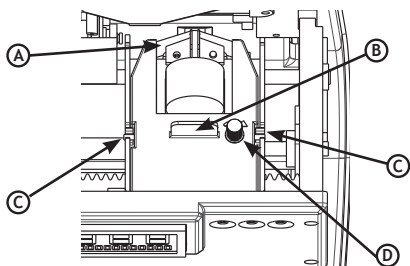

A - Ribbon C - Retaining Pins
B - Tab D - Manual Advance Knob

RIBBON SHOULD BE CHANGED EVERY 6 MONTHS.

For assistance please contact customer service at 888.479.7264 ext 1




To watch a video on how to change a ribbon visit our knowledge base at pyramidthesystems.com or scan this QR code using a smart phone.



45 Gracey Avenue : Meriden, CT 06451 : 888.479.7264 : pyramidthesystems.com I2241 Rev. C

Replacement Ribbon Model 5000R : Instructions SIMPLE 8 SMART™

- ① CAUTION - Unplug time clock before installing ribbon.
- ② To remove old ribbon, lift ribbon cartridge straight up using the tab located on top of cartridge.
- ③ Remove new ribbon cartridge from packaging & turn the manual ribbon advance knob clockwise to straighten ribbon.
- ④ Holding the tab, install ribbon cartridge into print carriage by aligning retaining pins to rear of carriage clips making certain the ribbon is between print head & metal print mask.
- ⑤ Gently push down cartridge until it snaps into carriage while turning the manual ribbon advance knob clockwise.
- ⑥ Turn manual ribbon advance knob clockwise a few rotations to ensure ribbon is positioned correctly in front of print head. CAUTION: Moving parts. Be sure to install cover before printing.

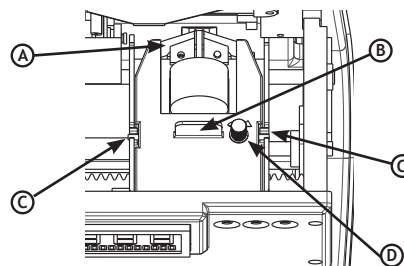

A - Ribbon C - Retaining Pins
B - Tab D - Manual Advance Knob

RIBBON SHOULD BE CHANGED EVERY 6 MONTHS.

For assistance please contact customer service at 888.479.7264 ext 1




To watch a video on how to change a ribbon visit our knowledge base at pyramidthesystems.com or scan this QR code using a smart phone.



45 Gracey Avenue : Meriden, CT 06451 : 888.479.7264 : pyramidthesystems.com I2241 Rev. C

Replacement Ribbon Model 5000R : Instructions SIMPLE 8 SMART™

- ① CAUTION - Unplug time clock before installing ribbon.
- ② To remove old ribbon, lift ribbon cartridge straight up using the tab located on top of cartridge.
- ③ Remove new ribbon cartridge from packaging & turn the manual ribbon advance knob clockwise to straighten ribbon.
- ④ Holding the tab, install ribbon cartridge into print carriage by aligning retaining pins to rear of carriage clips making certain the ribbon is between print head & metal print mask.
- ⑤ Gently push down cartridge until it snaps into carriage while turning the manual ribbon advance knob clockwise.
- ⑥ Turn manual ribbon advance knob clockwise a few rotations to ensure ribbon is positioned correctly in front of print head. CAUTION: Moving parts. Be sure to install cover before printing.

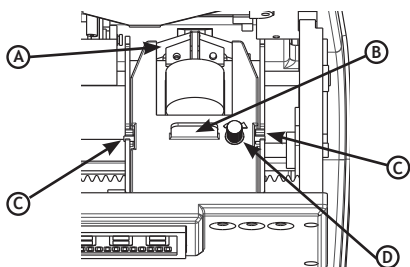

A - Ribbon C - Retaining Pins
B - Tab D - Manual Advance Knob

RIBBON SHOULD BE CHANGED EVERY 6 MONTHS.

For assistance please contact customer service at 888.479.7264 ext 1




To watch a video on how to change a ribbon visit our knowledge base at pyramidthesystems.com or scan this QR code using a smart phone.



45 Gracey Avenue : Meriden, CT 06451 : 888.479.7264 : pyramidthesystems.com I2241 Rev. C

Replacement Ribbon Model 5000R : Instructions SIMPLE 8 SMART™

- ① CAUTION - Unplug time clock before installing ribbon.
- ② To remove old ribbon, lift ribbon cartridge straight up using the tab located on top of cartridge.
- ③ Remove new ribbon cartridge from packaging & turn the manual ribbon advance knob clockwise to straighten ribbon.
- ④ Holding the tab, install ribbon cartridge into print carriage by aligning retaining pins to rear of carriage clips making certain the ribbon is between print head & metal print mask.
- ⑤ Gently push down cartridge until it snaps into carriage while turning the manual ribbon advance knob clockwise.
- ⑥ Turn manual ribbon advance knob clockwise a few rotations to ensure ribbon is positioned correctly in front of print head. CAUTION: Moving parts. Be sure to install cover before printing.

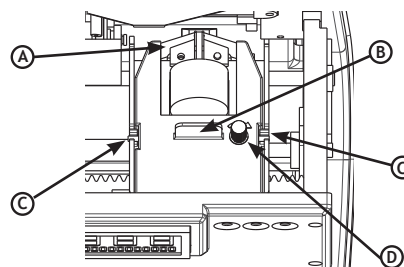

A - Ribbon C - Retaining Pins
B - Tab D - Manual Advance Knob

RIBBON SHOULD BE CHANGED EVERY 6 MONTHS.

For assistance please contact customer service at 888.479.7264 ext 1



To watch a video on how to change a ribbon visit our knowledge base at pyramidthesystems.com or scan this QR code using a smart phone.



45 Gracey Avenue : Meriden, CT 06451 : 888.479.7264 : pyramidthesystems.com I2241 Rev. C