

RATCHET INSTRUCTION:

- 1. Attach hooks to stable attachment points.
- 2. Insert free end of the webbing through the center slot of the ratchet reel (FIG 1) and pull to take up slack (FIG 2)
- 3. Move ratchet handle back and forth to tighten webbing, minimum of two wraps on ratchet reel (FIG 3)
- 4. Hooks and webbing should be in line with direction of pull. 5. Close Ratchet Handle to lock
- in place.
- 6. Squeeze spring release bar to open ratchet 180° for adjustments or webbing removal. (FIG 4)
- 7. Loads settle. Check tie-down and ratchet every 20-30 miles (32km/48km)-Adjust as necessary.

CAUTION READ BEFORE USE

- 1. DO NOT USE FOR LIFTING.
- 2. Area of attachment on vehicle or trailer must be sufficient strength to hold load.
- 3. Protect webbing from sharp edges and heat. Replace if webbing is cut, worn or damaged.
- 4. Warranty VOID if strap is cut or damaged.

CAUTION:

Your ratchet tie-down exerts great tension. Do not overtighten to avoid damage to your load.

FEATURES:

- Adjusts from 1' to 15'
- For loads up to 400 lb.
- (182 kg)
- Maximum breaking strength
- is 1200 lb. (545kg.) vinyl coated steel hooks
- Quick release ratchet
- Tight locking ratchet mechanism













Manufactured for: Grainger International, Inc. Lake Forest, IL 60045 PK-2 1 2VKP3 Made In Taiwan