American Standard

MONTERREY

SPREAD LAVATORY FAUCETS

Installation Instructions 6530.173 6540.180 6545.Series




Certified to comply with ANSI A112.18.1M M965046 Rev. 1.2

11

Thank you for selecting American-Standard... the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly—please read these instructions carefully before you begin.

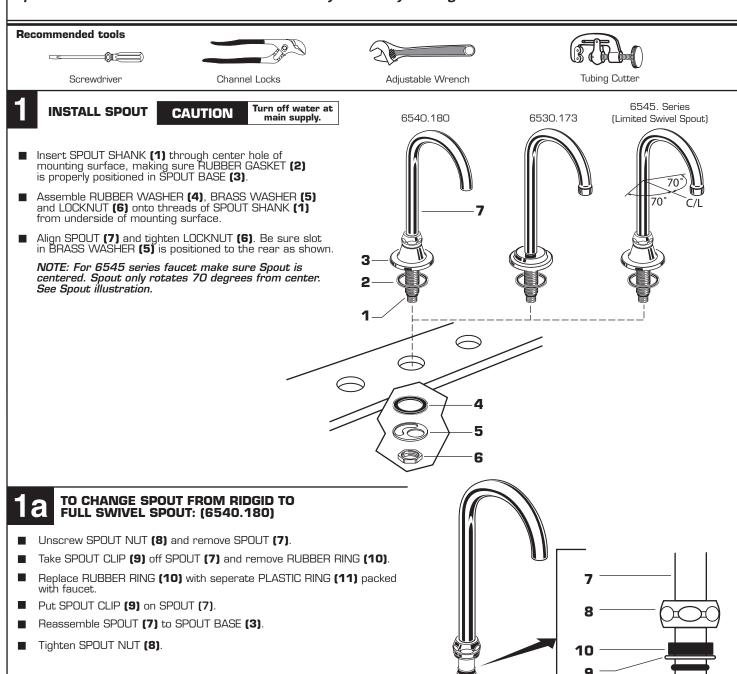



VALVE ASSEMBLY

Install LOCKNUTS (1), BRASS WASHERS (2) and RUBBER WASHERS (3) onto valve shanks.

Push TUBING (4) ends into VALVE (5) side outlets. Insert VALVES (5) into mounting holes from underside of ledge.


- Press TEE (6) onto SPOUT SHANK (7) making certain that the O-RING (8) is properly seated on SHANK (7). Push COUPLING (9) into TEE (6) and attach to SPOUT SHANK (7) and tighten. (6540.180)
- Push 3RD WATER COUPLING (15) into TEE (6) and attach to SPOUT SHANK (7) for third water supply connection. Thighten COUPLING (15). (6530.173)
- Place RUBBER RING (11) into ESCUTCHEON (10) and thread onto valves until snug against internal stop.
- Tighten LOCKNUT (1) to secure VALVE (5) position.
- Slide FERRULE (13) and COUPLING NUT (14) to outlet of VALVE (5) and tighten COUPLING NUT (14) firmly.
- Connect HOT water supply to inlet of left VALVE and COLD water supply to inlet of right VALVE using appropriate connector.

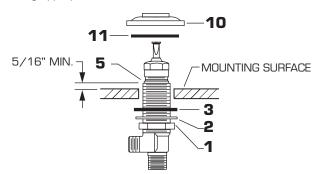

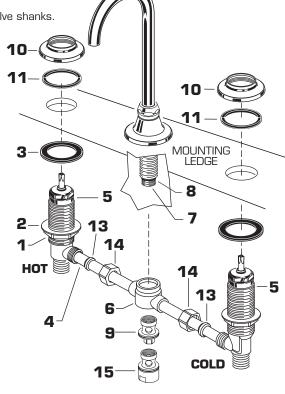

INSTALL HANDLES

- Turn VALVES (1) to off position.
- Insert ADAPTOR (7) with larger diameter over the VALVE STEM (4).
- Align LEVER (2) or WRIST BLADE HANDLE (3) and install onto VALVE STEM (4).
- Insert BLUE INDEX (5) into cold valve (right side) and red INDEX (6) into hot valve (left side).
- Insert HANDLE SCREW (6) into HANDLES and tighten with screwdriver.

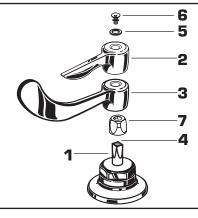

TEST INSTALLED FAUCET

- Remove AERATOR.
- With handle in OFF position, turn on water supplies and check all connections for leaks.
- Operate both handles to flush water lines thoroughly. Check spout mounting and hose connections for leaks.
- Turn handles into OFF position and replace AERATOR.

SERVICE




- To change direction of handle rotation, proceed as follows:

 - Turn valve to OFF position.
 Remove HANDLE and BONNET NUT.
 Remove SPRING CLIP.

 - Lift STOP WASHER, turn 90° and replace. Replace SPRING CLIP.
 - Replace BONNET NUT, HANDLE, SCREW, and INDEX.
- AERATOR may accumulate dirt causing distorted and reduced water flow. Remove AERATOR and rinse clean.

- If spout drips, operate handles several times from OFF to ON position. Do not force handles turn only 90°.
- Plastic SCREEN in CARTRIDGE may accumulate dirt causing reduced water flow. To clean, first turn off hot and cold water supplies, then:
 - Remove HANDLE and BONNET NUT.

 - Remove CARTRIDGE by pulling up. Thoroughly rinse plastic SCREEN at base of CARTRIDGE.
 - Replace CARTRIDGE until flange is
 - tight against valve body. Turn valves OFF.
 - Replace BONNET NUT, HANDLE, SCREW and INDEX

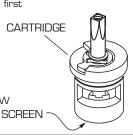

CARE INSTRUCTIONS:

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH. DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE. M965046 Rev. 1.2