



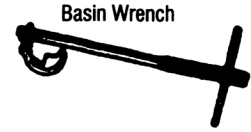

INSTALLATION INSTRUCTIONS


Tools you will need:

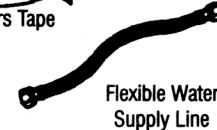


Refer to this if unit is a
Single Handle Faucet Base

Refer to this if unit is a
Dual Handle Faucet Base


Refer to this if unit is a
6" to 8" Spread Faucet

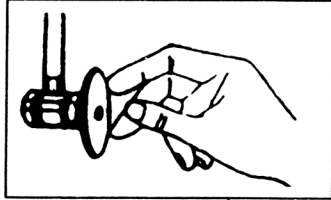


1) Shut off hot and cold water supply under sink. Plug sink drain with cloth to avoid losing small parts. Remove old faucet.

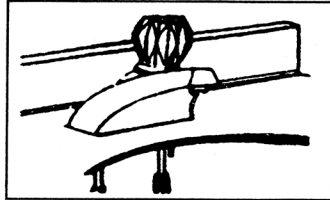


2) Lead supply lines carefully through holes. Place black base gasket that seals faucet to surface or sink, on fixture. Press faucet and gasket firmly into position.

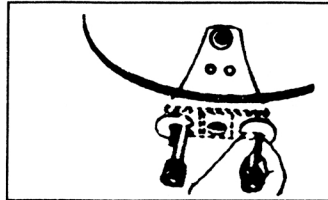


3a) Place mounting washers between mounting nuts. Tighten with basin wrench or adjustable wrench. Using basin wrench makes job easier.

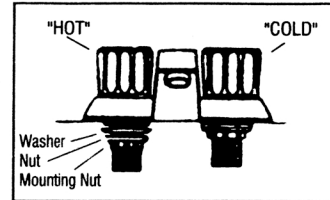


3b) Place faucet into position on sink. Place cold handle on right and hot handle on left. From under the sink, thread washer, nuts and mounting nuts onto the faucet tailpiece. Tighten with basin wrench or adjustable wrench.

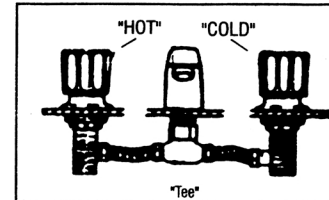


3c) Place separate handles and spout assemblies into position on sink. Thread washer, nuts and mounting nuts onto spout tailpiece and handle stems. Tighten using adjustable wrench or basin wrench. Connect "Tee" connector and flexible water supply lines.

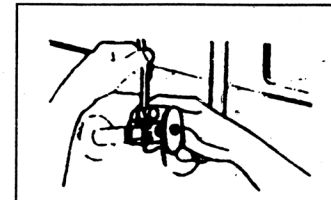


4) Connect hot and cold water supplies. Note: If additional adaptors or supply lines are required, you can purchase them from the store where you bought the faucet. Use Teflon tape when attaching water lines to faucet and supply stops.

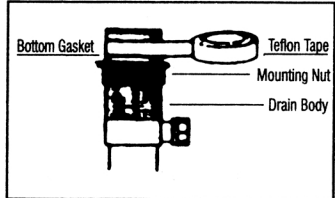


5) Thread mounting nut and bottom gasket onto drain body. Wrap top threaded end of the drain body with Teflon tape.

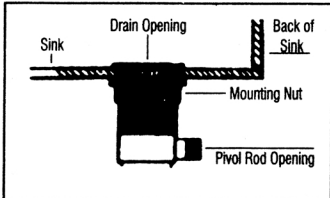


6) Slip the drain up through the drain opening and screw flange onto drain body. Holding the drain body in position with pivot rod opening facing the back of the sink, tighten the mounting nut securely with a wrench.

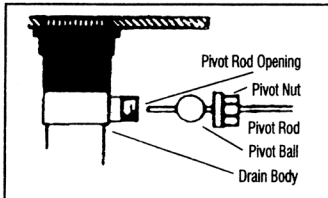


7) Place pivot rod in pivot rod opening. Slide pivot nut over pivot rod and thread it on the drain body. Tighten snugly, being careful not to over-tighten.

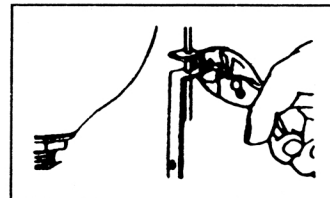

8) With the lift rod in position on the faucet, insert lift rod through lift rod strap and secure with the set screw.

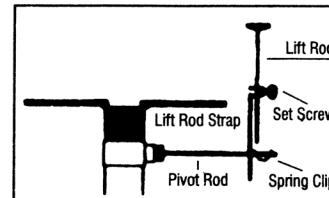


9) Guide the pivot rod through one of the holes on the lift rod strap and secure it with the spring clip, then adjust the height of the lift rod by resetting the set screw.

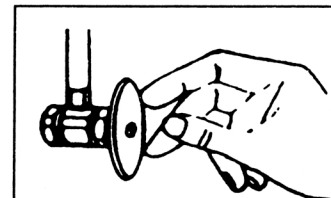

10) Turn on the hot and cold water. Check for any leaks, especially at hook-ups to supply lines.

IMPORTANT Before Turning Water On

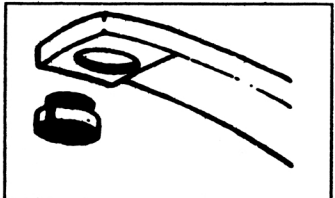

11) Remove aerator from end of spout. Flush both water lines allowing water to run for one minute. Replace aerator.