

[®]
WESTWARD



Oil Control Gun

Models 48UJ82, 48UJ83,
48UJ84, 48UJ85 and 48UJ86

®
WESTWARD

**PLEASE READ AND SAVE
THESE INSTRUCTIONS.**

**READ CAREFULLY
BEFORE ATTEMPTING
TO ASSEMBLE, INSTALL,
OPERATE OR MAINTAIN THE
PRODUCT DESCRIBED.**

**PROTECT YOURSELF AND
OTHERS BY OBSERVING ALL
SAFETY INFORMATION. FAILURE
TO COMPLY WITH INSTRUCTIONS
COULD RESULT IN PERSONAL
INJURY AND/OR PROPERTY DAMAGE!
RETAIN INSTRUCTIONS FOR FUTURE
REFERENCE.**

**PLEASE REFER TO BACK COVER
FOR INFORMATION REGARDING
WESTWARD'S WARRANTY AND OTHER
IMPORTANT INFORMATION.**

Model #: _____

Serial #: _____

Purch. Date: _____

Printed in India

Version 04/ 2016

© 2015 W.W. Grainger, Inc.

All Rights Reserved

**Tools needed:**

- 27mm spanner for hose and swivel connection

Protection equipment (PPE) requirements:

- Goggles, Safety Gloves, Safety Helmet, and Safety Boots

UNPACKING**Contents:**

- 1 Oil control gun with flexible hose and manual non drip nozzle



- See General Safety Instructions on page 2, and Cautions and Warnings as shown.



GENERAL SAFETY INSTRUCTIONS

⚠ WARNING

Control gun must be handled with care and must not be dropped or thrown.

⚠ WARNING

Thread sealant such as PTFE tape must be used between threaded connection to ensure a leak proof connection.

SPECIFICATIONS

Description **48UJ82, 48UJ83, 48UJ84, 48UJ85 and 48UJ86**

Flow rate Up to 8 GPM (Up to 30 LPM)

Max. Working pressure 1000 PSI (70 BAR)

Working temperature range -14°C to 55°C (7°F to 131°F)

Inlet threads 1/2" NPT (F)

In-line swivel 1/2" (F)

Outlet diameter of steel spout 1/2" (12.7 mm)

Inside diameter of hose extension 1/2" (12.7 mm)

ASSEMBLY INSTRUCTIONS

- 1 Ensure that the pump which is to be connected to the gun, is in switched off mode.
- 2 Connect one end of the hose to the pump outlet and other end to the swivel inlet on the gun body.



- 3 Outlet extension is fitted with a manual non drip nozzle. A manual non drip needs manual opening & closing to start or stop dispensing by rotating the nozzle in clockwise or counter clockwise direction.



- 4 With the nozzle facing an empty container, switch on the pump and open the manual non drip nozzle
- 5 Press the trigger to start dispensing
- 6 For continuous / un-attended dispensing; press the trigger and then lock the trigger by pressing the continuous flow switch
- 7 To stop the continuous dispensing, simply release the trigger
- 8 To switch to manual dispense, first release the trigger and then press it again



OPERATING INSTRUCTIONS

How to operate manual Non-drip Nozzle?

Manual non drip nozzle is used to prevent the dripping of oil after using.

1. To open the nozzle, rotate the nozzle in counter clockwise direction
2. To close the nozzle, rotate it in clockwise direction





TROUBLESHOOTING (REFER "PARTS ILLUSTRATION FOR PUMP" ON PAGE 12)

Symptom	Possible Cause(s)	Corrective Action
Oil leakage	Loose connection	Check all the threaded connection and use PTFE tape to make them leak proof
Little or no discharge	Blocked or soiled inlet filter	Clean the filter
	Blocked hose	Remove the hose and then operate the trigger if there is appropriate discharge then hose is blocked. Now clean the hose or change it.

GETTING STARTED


SAFETY /
SPECIFICATIONS

ASSEMBLY /
INSTALLATION


OPERATION

TROUBLESHOOTING


MAINTENANCE /
REPAIR

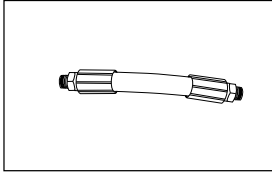WESTWARD®**PARTS ILLUSTRATION**


(Fig.1) Extension

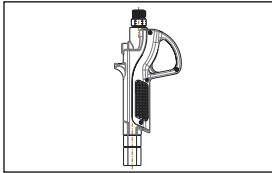

(Fig.2) Gun Handle

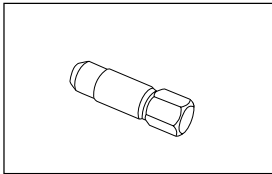

(Fig.3) Manual Non Drip Nozzle

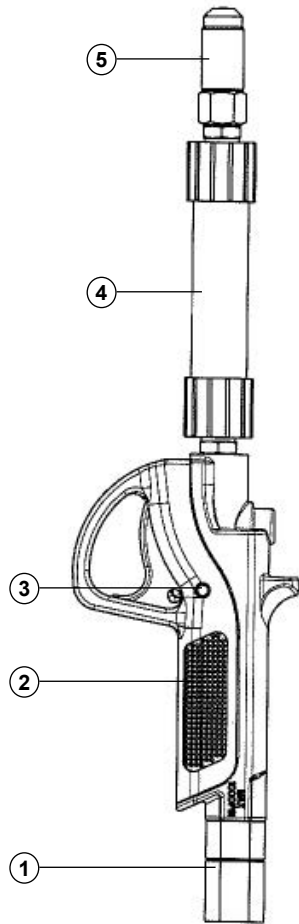

For Repair Parts, call 1-800-323-0620
24 hours a day – 365 days a year

Please provide following information:

- Model number
- Serial number (if any)
- Part description and number as shown in parts list



PARTS LIST

	Parts Description	Qty.
1	Straight Swivel	1
2	Body	1
3	Lock (Trigger)	1
4	Hose Assembly	1
5	Non Drip Nozzle	1

GETTING STARTED

SAFETY /
SPECIFICATIONS

ASSEMBLY /
INSTALLATION

OPERATION

TROUBLESHOOTING

MAINTENANCE /
REPAIR

WESTWARD ONE-YEAR LIMITED WARRANTY

WESTWARD ONE-YEAR LIMITED WARRANTY. All Westward® product models covered in this manual covered by this Limited Warranty are warranted by W.W. Grainger, Inc. ("Grainger") to the original user against defects in workmanship or materials under normal use for one year after date of purchase. If the Product is part of a set, only the portion that is defective is subject to this warranty. Any Product or part which is determined to be defective in material or workmanship and returned to an authorized service location, as Grainger or Grainger's designee designates, shipping costs prepaid, will be, as the exclusive remedy, repaired or replaced with a new or reconditioned product or part of equal utility or a full refund given, at Grainger's or Grainger's designee's option, at no charge. For limited warranty claim procedures, see "Warranty Service" below.

COVERED PRODUCTS. This Limited Warranty covers the product model(s) identified in this manual. This Limited Warranty does not cover normal wear and tear of Products or portions of them, or products or portions of them which are consumable in normal use. This warranty is void if there is evidence of misuse, mis-repair, mis-installation, abuse or alteration.

WARRANTY DISCLAIMERS AND LIMITATIONS OF LIABILITY RELATING TO ALL CUSTOMERS FOR ALL PRODUCTS

LIMITATION OF LIABILITY. TO THE EXTENT ALLOWABLE UNDER APPLICABLE LAW, GRAINGER'S LIABILITY FOR CONSEQUENTIAL AND INCIDENTAL DAMAGES IS EXPRESSLY DISCLAIMED. GRAINGER'S LIABILITY IN ALL EVENTS IS LIMITED TO AND SHALL NOT EXCEED THE PURCHASE PRICE PAID.

WARRANTY DISCLAIMER. A DILIGENT EFFORT HAS BEEN MADE TO PROVIDE PRODUCT INFORMATION AND ILLUSTRATE THE PRODUCTS IN THIS LITERATURE ACCURATELY; HOWEVER, SUCH INFORMATION AND ILLUSTRATIONS ARE FOR THE SOLE PURPOSE OF IDENTIFICATION, AND DO NOT EXPRESS OR IMPLY A WARRANTY THAT THE PRODUCTS ARE MERCHANTABILITY, OR FIT FOR A PARTICULAR PURPOSE, OR THAT THE PRODUCTS WILL NECESSARILY CONFORM TO THE ILLUSTRATIONS OR DESCRIPTIONS. EXCEPT AS PROVIDED BELOW, NO WARRANTY OR AFFIRMATION OF FACT, EXPRESSED OR IMPLIED, OTHER THAN AS STATED IN THE "LIMITED WARRANTY" ABOVE IS MADE OR AUTHORIZED BY GRAINGER.

PRODUCT SUITABILITY. MANY JURISDICTIONS HAVE CODES AND REGULATIONS GOVERNING SALES, CONSTRUCTION, INSTALLATION, AND/OR USE OF PRODUCTS FOR CERTAIN PURPOSES, WHICH MAY VARY FROM THOSE IN NEIGHBORING AREAS. WHILE ATTEMPTS ARE MADE TO ASSURE THAT PRODUCTS COMPLY WITH SUCH CODES, GRAINGER CANNOT GUARANTEE COMPLIANCE, AND CANNOT BE RESPONSIBLE FOR HOW THE PRODUCT IS INSTALLED OR USED. BEFORE PURCHASE AND USE OF A PRODUCT, REVIEW THE SAFETY/SPECIFICATIONS, AND ALL APPLICABLE NATIONAL AND LOCAL CODES AND REGULATIONS, AND BE SURE THAT THE PRODUCT, INSTALLATION, AND USE WILL COMPLY WITH THEM.

CONSUMERS ONLY. CERTAIN ASPECTS OF DISCLAIMERS ARE NOT APPLICABLE TO CONSUMER PRODUCTS SOLD TO CONSUMERS; (A) SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU; (B) ALSO, SOME JURISDICTIONS DO NOT ALLOW A LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU; AND (C) BY LAW, DURING THE PERIOD OF THIS LIMITED WARRANTY, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE APPLICABLE TO CONSUMER PRODUCTS PURCHASED BY CONSUMERS, MAY NOT BE EXCLUDED OR OTHERWISE DISCLAIMED.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. THIS LIMITED WARRANTY ONLY APPLIES TO PRODUCTS PURCHASED BY UNITED STATES PURCHASERS FOR DELIVERY IN THE UNITED STATES.

WARRANTY SERVICE

To obtain warranty service if you purchased the covered product directly from Grainger, (i) write or call or visit the local Grainger branch from which the product was purchased or another Grainger branch near you (see www.grainger.com for a listing of Grainger branches); or (ii) contact Grainger by going to www.grainger.com and clicking on the "Contact Us" link at the top of the page, then clicking on the "Email us" link; or (iii) call Customer Care (toll free) at 1-888-361-8649. To obtain warranty service if you purchased the covered product from another distributor or retailer, (i) go to www.grainger.com for Warranty Service; (ii) write or call or visit a Grainger branch near you; or (iii) call Customer Care (toll free) at 1-888-361-8649. In any case, you will need to provide, to the extent available, the purchase date, the original invoice number, the stock number, a description of the defect and anything else specified in this Westward One-Year Limited Warranty. You may be required to send the product in for inspection at your cost. You can follow up on the progress of inspections and corrections in the same ways. Title and risk of loss pass to buyer on delivery to common carrier, so if product was damaged in transit to you, file claim with carrier, not the retailer or Grainger. For warranty information for purchasers and/or delivery outside the United States, please contact:

Canada: www.westwardtools.ca

Mexico: Grainger.com.mx

Location not listed, contact: +1-888-361-8649 (or 1-800-GRAINGER)