


## SPEEDAIRE 4ZL14A STANDARD & HEAVY-DUTY AUTOMATIC FILTER DRAIN INSTALLATION INSTRUCTIONS

for

**4ZK94A, 4ZK96A, 4ZK98A, 4ZL43A, 4ZL45A, 4ZL47A, 4ZL49A &  
4ZL51A Standard & 4ZL53A & 4ZL54A Standard (High Flow)**  
Metal Bowl (with Sight Glass) General Purpose Air Line,  
Filter/Regulator & Oil Removal (Coalescing) Filters

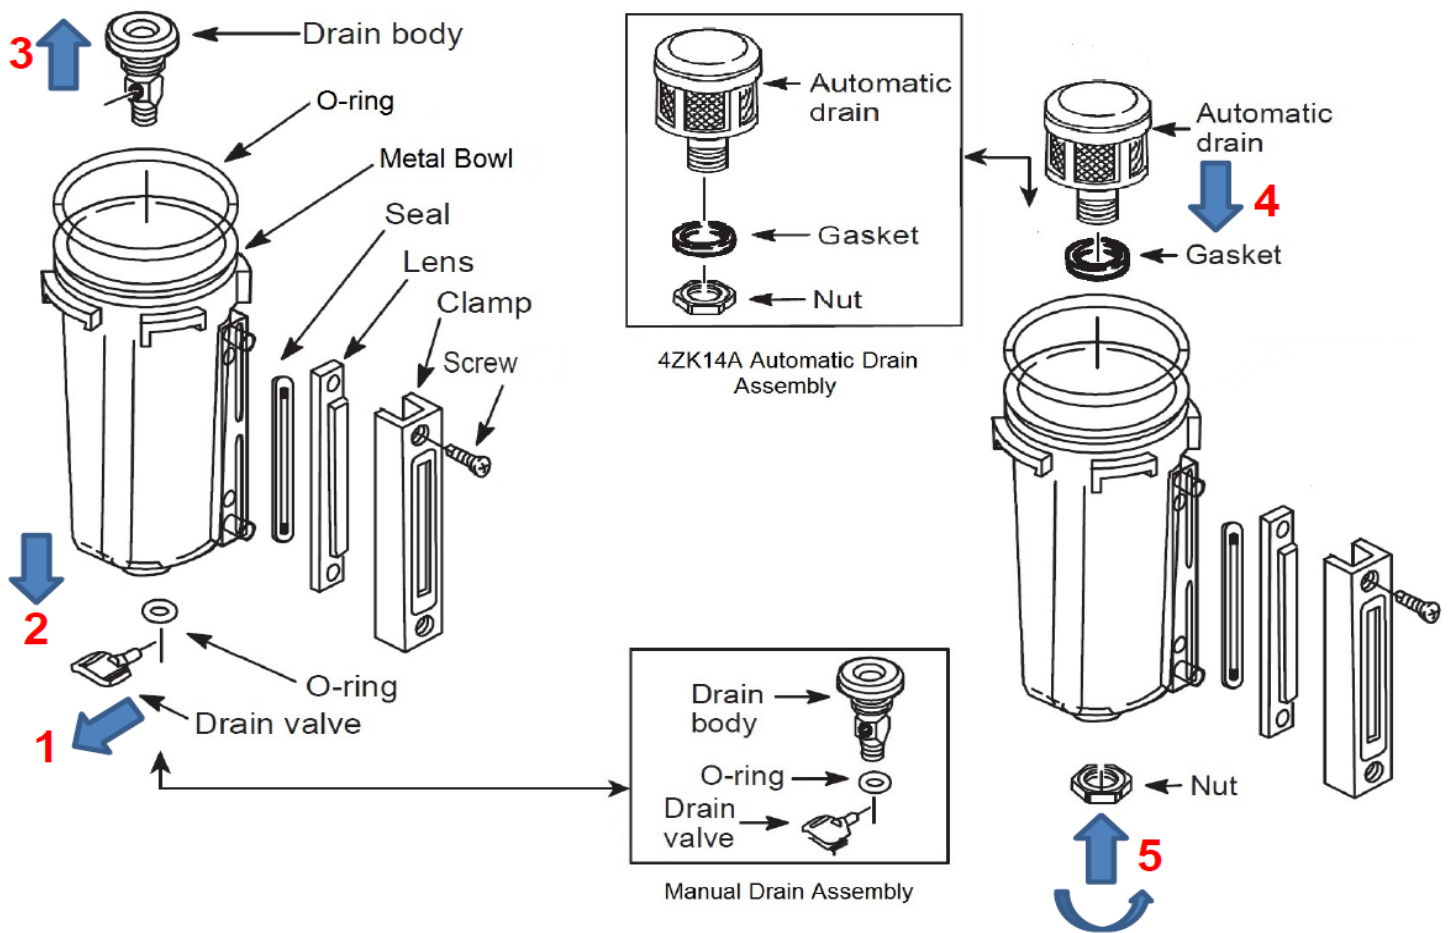

1. Remove the drain valve petcock with pliers.
2. Remove the O-ring from the drain stem with a screwdriver.
3. Lift the manual drain body up until it is completely out of the metal bowl.
4. Place the automatic drain body with gasket into the metal bowl and push it through until the threads are exposed out the bottom of the bowl.
5. Install the automatic drain nut. Tighten the nut until snug (do not over-tighten).