



INSTALLATION INSTRUCTIONS:

- A- INSTALL THE THREADED ROD (1) FROM THE HARDWARE PACKAGE TO THE FAUCET ASSEMBLY (2).
- B- APPLY TEFLON TAPE TO THE 1/4" NPT FITTING
 (3) THEN INSTALL INTO THE FAUCET ASSEMBLY.
- C- FEED THE FAUCET ASSEMBLY WIRES THROUGH THE CENTER HOLE AND MOUNT FAUCET ASSEMBLY

 (2) AND GASKET ON THE BASIN AND FASTEN USING THE PROVIDED STEP WASHER (4), FLAT WASHER (5), LOCK WASHER (6) AND HEX NUT (7).
- D- CONNECT THE 1/4" POLYETHYLENE WATER LINE TO THE VALVE ASSEMBLY; HAND TIGHTEN FERRULE NUT.
- E- CONNECT THE WHITE ELECTRICAL CONNECTORS

 (9) AND (0) TOGETHER. CONNECT THE RED
 ELECTRICAL CONNECTORS (11) AND (12)
 TOGETHER.
- F- AFTER THOROUGHLY FLUSHING SUPPLY LINES, MAKE UP CONNECTIONS TO VALVE ASSEMBLY (USE FLEXIBLE INLET HOSE) CONNECT TO 1/2" NPT SUPPLY.



LIGATURE RESISTANT FAUCET *WH3375-SO/-BATT

MAY 2016

TO PRESENT

DATE ISSUED

05/06/16

DATE REVISED

05/30/18

DRAWING NUMBER

9918-071-001