


CORRECT

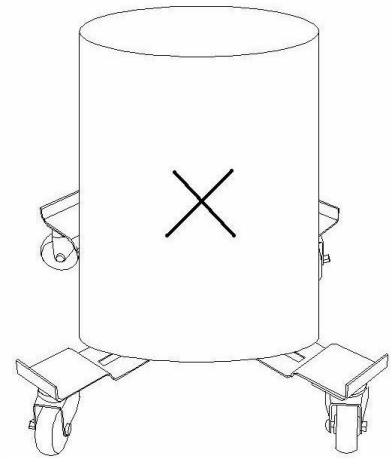

INCORRECT

**WARNING: PLEASE KEEP THE EDGE OF THE DRUM ON THE SUPPORT PLATE, AS SHOWN IN THE ABOVE DIAGRAMS, TO PREVENT DAMAGE TO THE DOLLY.**