
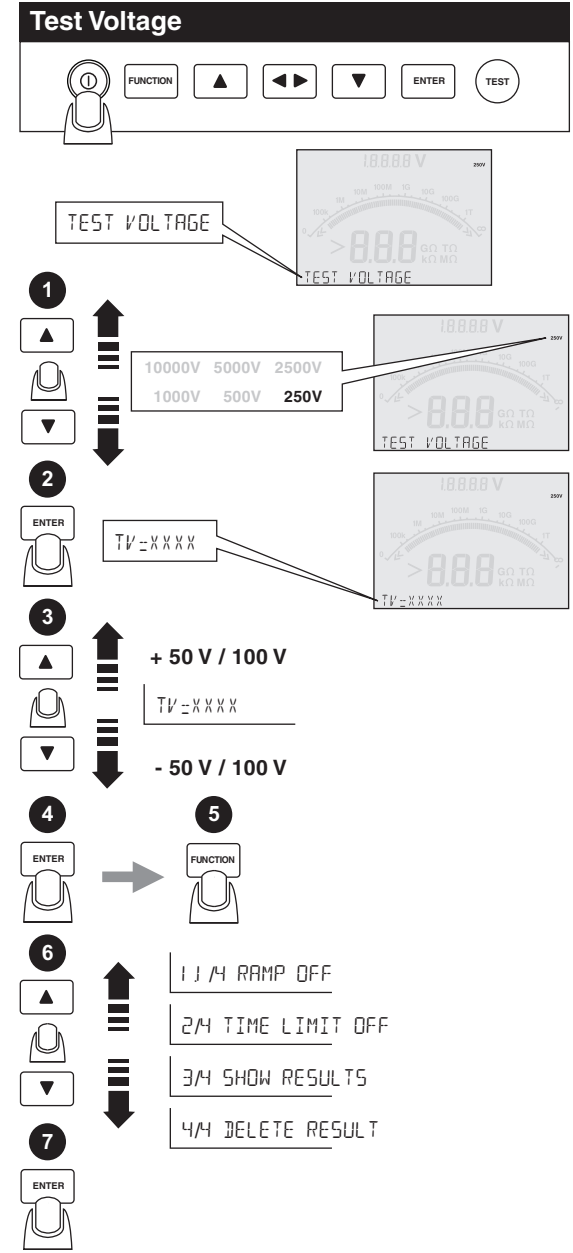


1550C/1555 Insulation Tester

 


Quick Reference Guide

⚠ Warning




- Read the 1550C/1555 Users Manual before using the Tester.
- Avant d'utiliser le testeur, veuillez consulter le mode d'emploi du 1550C/1555.
- Leggere il manuale dell'utente di 1550C/1555 prima di utilizzare il Tester.
- Lesen Sie das 1550C/1555-Handbuch, bevor Sie das Messgerät verwenden.
- Lea el Manual de Usuario 1550C/1555 antes de utilizar el tester.
- Leia o manual do utilizador 1550C/1555 antes de utilizar o testador.
- Lees de gebruikershandleiding voor 1550C/1555 voordat u de tester gebruikt.
- Les brukerhåndboken for 1550C/1555 før du bruker testeren.
- Læs 1550C/1555-brugervejledningen, inden du bruger Tester.
- Lue 1550C/1555-käyttöopas ennen testauslaitteen käyttöä.
- Läs igenom användarhandboken för 1550C/1555 innan du använder testinstrumentet.
- 使用测试机之前, 请阅读 1550C/1555 用户手册。
- Прочитайте руководство пользователя 1550C/1555 перед использованием измерителя сопротивления изоляции.
- Test Cihazını kullanmadan önce 1550c/1555 Kullanım Kilavuzunu okuyun.
- Przed użyciem testera zapoznaj się z instrukcją użytkownika urządzenia 1550C/1555.
- Před použitím si přečtěte uživatelskou příručku přístroje 1550C/1555.

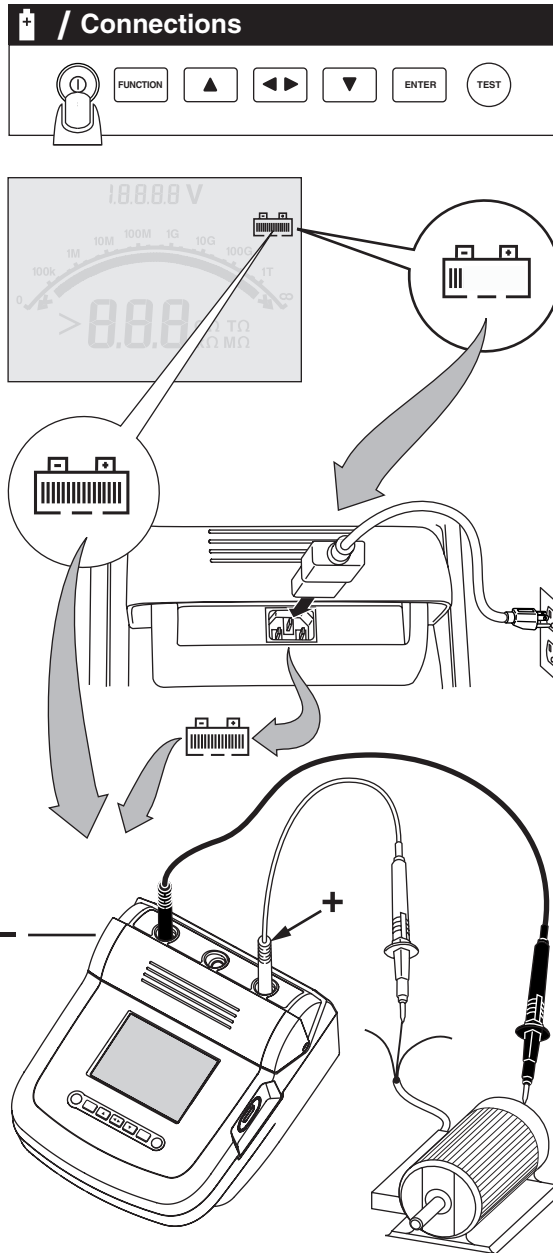


Time Limit

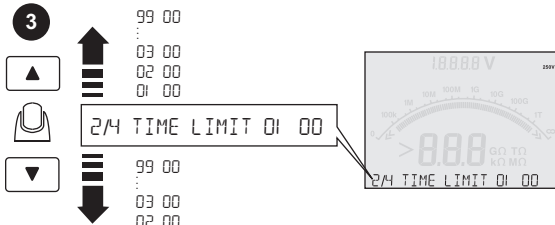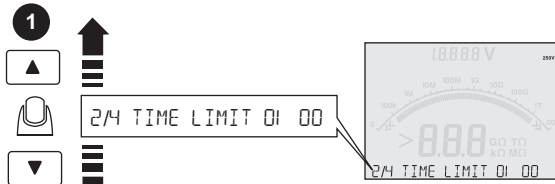



Ramp Test

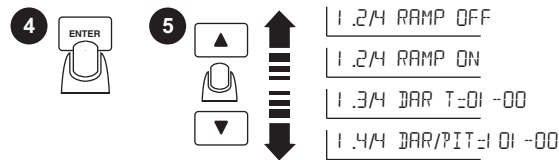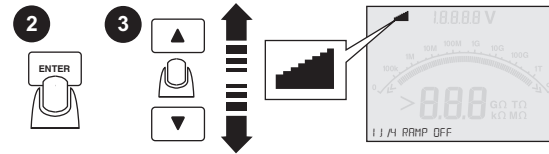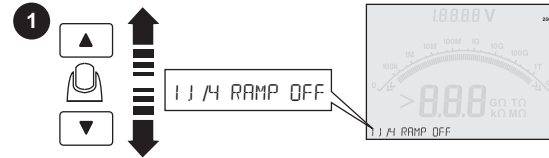

IR

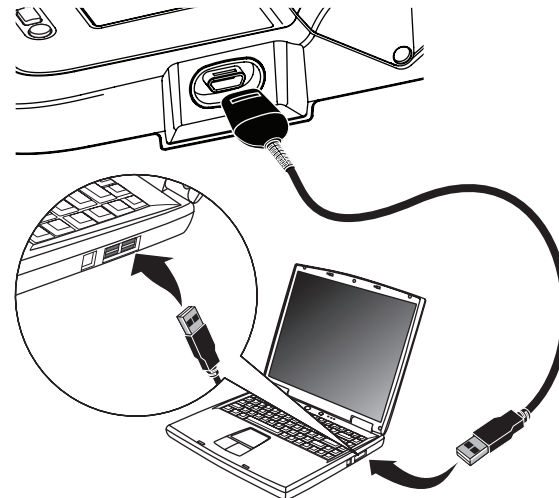

Results

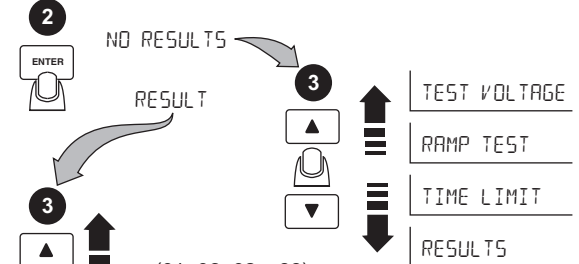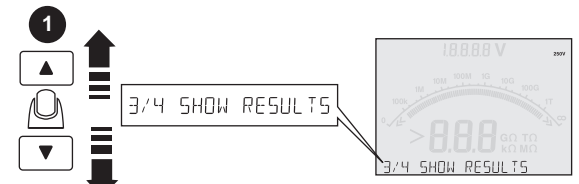

(01, 02, 03 .. 99)
or
(01, 02, pump, .. 99)

