

Reconditioning Kits Cross-Reference Materials

	Pages
Reconditioning Kits	3-12
<ul style="list-style-type: none">List of available reconditioning kits by product code number and description. Use as a reference for the available reconditioning kits.	
Cross-Reference – Discontinued Parts to Suggested Replacements	13-40
<ul style="list-style-type: none">List of discontinued parts by product code number and description and a suggested replacement. Use to determine a suggested replacement for a specific discontinued part.	
Cross-Reference – Supported Valves to Appropriate Spring and Reconditioning Kits	41-52
<ul style="list-style-type: none">List of currently supported valves by product code number, size, actuator, and spring range and their related spring and reconditioning kits. Use to select an appropriate spring and reconditioning kit for a specific valve.	

Important Notice – 2-1/2 in. or Larger Pneumatic Non-Encapsulated Valve and Actuator Assemblies

Repair parts are not available for old-style Johnson Controls 2-1/2 in. or larger iron-bodied, flanged valves with pneumatic, non-encapsulated spring and diaphragm actuators because of a safety issue that exists during repair when disassembling and exposing the actuator spring. Repair parts found in this cross-reference **should not** be used for 2-1/2 in. or larger iron-bodied, flanged valves with pneumatic, non-encapsulated spring and diaphragm actuators.

To reduce the cost burden that normally results from having to replace these entire valve and actuator assemblies rather than simply repair them, a trade-in policy is available for all Johnson Controls Branches and Authorized Distributors. This policy provides a 30% trade-in allowance for the replacement of complete old-style valve and actuator assemblies. The 30% trade-in policy is applicable only to Johnson Controls 2-1/2 in. or larger iron-bodied, flanged valves with old-style, non-encapsulated spring actuators from the following product families: V-4510, V-4710, V-5250, V-5460, V-5820, and V-5840. Johnson Controls Publication 2716 gives full details of this policy.

Reconditioning Kits

Table 1: Reconditioning Kits

Code No.	Description
V-3752-6016	Reconditioning Kit, 3/4 in. N.O., Union Angle, Cv = 3.7; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3752-6017	Reconditioning Kit, 1 in. N.O., Union Angle, Cv = 7.0; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3752-6018	Reconditioning Kit, 1-1/4 in. N.O., Union Angle, Cv = 12.0; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3752-6019	Reconditioning Kit, 1-1/4 in. N.O., Globe/Union Globe, Cv = 12.0; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3752-6020	Reconditioning Kit, 1-1/2 in. N.O., Union Angle, Cv = 20.0; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3752-6021	Spring Kit, 9 to 13 psig, 3/8 in. Stroke, for V-3011, V-3020, V-3212, V-3752, V-3755, V-3970, V-4322, (1 and 1-1/4 in.) and V-5416, V-7416 (3/4 in.) Valves with V-3000-1 or V-3000-2 Actuator
V-3752-6022	Spring Kit, 9 to 13 psig, 5/16 in. Stroke for V-3011, V-3020, V-3212, V-3752, V-3755, V-3970, V-4322 (1/2 and 3/4), V-4332, V-4333, V-4334, V-5416, V-7416 (1/2 in.), V-6143 (3/8 and 3/4 in.) and VT Valves with V-3000-1 or V-3000-2 Actuator
V-3752-6023	Spring Kit, 3 to 6 psig, 5/16 in. Stroke, for V-3011, V-3020, V-3752, V-3755, V-4510, V-5250 (1/2 and 3/4 in.), V-5216, V-7216, (1/2 in.) and VT Valves with V-3000-1 or V-3000-2 Actuator
V-3752-6024	Spring Kit, 3 to 6 psig, 3/8 in. Stroke, for V-3011, V-3020, V-3752, V-3755, V-4510, V-5250 (1 and 1-1/4 in.), V-5216, V-7216 (3/4 in.) and VT Valves with V-3000-1 or V-3000-2 Actuator
V-3752-6027	Reconditioning Kit, 3/4 in. N.O., Globe/Union Globe, Cv = 3.8; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3752-6028	Reconditioning Kit, 1 in. N.O., Globe/Union Globe, Cv = 7.0; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3752-6030	Reconditioning Kit, 1-1/2 in. N.O., Globe/Union Globe, Cv = 20.0; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3752-6031	Reconditioning Kit, 2 in. N.O., Globe/Union Globe, Cv = 26.0; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3752-6034	Reconditioning Kit, 2 in. N.O., Union Angle, Cv = 35.0; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3752-6050	Reconditioning Kit, 1/2 in. N.O., Globe/Union Globe, Cv = 0.9; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
Continued on next page . . .	

Code No. (Cont.)	Description
V-3752-6051	Reconditioning Kit, 1/2 in. N.O., Globe/Union Globe, Cv = 1.8; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3752-6052	Reconditioning Kit, 1/2 in. N.O., Union Angle, Cv = 2.5; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3754-6001	Reconditioning Kit, 3/4 in. N.O. Cage Trim Valve, Cv = 8.6; Includes Cage with O-Ring, Stem and Plug Subassembly, Bonnet and Packing Assembly, and Grease Packet
V-3754-6002	Reconditioning Kit, 1 in. N.O. Cage Trim Valve, Cv = 13.9; Includes Cage with O-Ring, Stem and Plug Subassembly, Bonnet and Packing Assembly, and Grease Packet
V-3754-6003	Reconditioning Kit, 1/2 in. N.O. Cage Trim Valve, Cv = 0.2; Includes Cage with O-Ring, Stem and Plug Subassembly, Bonnet and Packing Assembly, and Grease Packet
V-3754-6004	Reconditioning Kit, 1/2 in. N.O. Cage Trim Valve, Cv = 0.4; Includes Cage with O-Ring, Stem and Plug Subassembly, Bonnet and Packing Assembly, and Grease Packet
V-3754-6005	Reconditioning Kit, 1/2 in. N.O. Cage Trim Valve, Cv = 1.2; Includes Cage with O-Ring, Stem and Plug Subassembly, Bonnet and Packing Assembly, and Grease Packet
V-3754-6006	Reconditioning Kit, 1/2 in. N.O. Cage Trim Valve, Cv = 2.2; Includes Cage with O-Ring, Stem and Plug Subassembly, Bonnet and Packing Assembly, and Grease Packet
V-3754-6007	Reconditioning Kit, 1/2 in. N.O. Cage Trim Valve, Cv = 4.4; Includes Cage with O-Ring, Stem and Plug Subassembly, Bonnet and Packing Assembly, and Grease Packet
V-3754-6008	Spring Kit, 9 to 13 psig, 3/4 in. Stroke, for V-3754, V-3974 and V-4324 (1 and 1-1/2 in.) Valves with V-3000-1 or V-3000-2 Actuator
V-3754-6009	Spring Kit, 9 to 13 psig, 1/2 in. Stroke, for V-3011, V-3020, V-3212, V-3752, V-3755, V-3970, V-4322 (1-1/2 and 2 in.), V-3974, V-3966, V-6139 (1/2 in.), V-3754, V-3974, V-4324 (1/2 and 3/4 in.) Valves with V-3000-1 or V-3000-2 Actuator
V-3754-6010	Spring Kit, 3 to 6 psig, 1/2 in. Stroke, for V-3011, V-3020, V-3752, V-3755, V-4510, V-5250, (1-1/2 and 2 in.), V-3754 (1/2 and 3/4 in.), and V-3766 (1/2 in.) Valves with V-3000-1 or V-3000-2 Actuator
V-3754-6011	Spring Kit, 3 to 6 psig, 3/4 in. Stroke, for V-3754 (1 and 1-1/2 in.) Valves with V-3000-1 or V-3000-2 Actuator
V-3754-6012	Spring Kit, 3 to 6 psig, 1/2 in. Stroke, for V-3754, V-3974, and V-4324 (1/2 in.) Valves with V-3802 or V-4000 Actuator
V-3754-6013	Spring Kit, 9 to 13 psig, 1/2 in. Stroke, for V-3754, V-3974, and V-4324 (1/2 in.) Valves with V-3802 or V-4000 Actuator
V-3755-6002	Reconditioning Kit, 3/4 in. N.O., Union Globe, Cv = 5.2; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3755-6003	Reconditioning Kit, 1 in. N.O., Union Globe, Cv = 8.2; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3755-6004	Reconditioning Kit, 1-1/4 in. N.O., Union Globe, Cv = 13.0; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
Continued on next page . . .	

Code No. (Cont.)	Description
V-3755-6005	Reconditioning Kit, 1-1/2 in. N.O., Union Globe, Cv = 21.0; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3755-6007	Reconditioning Kit, 3/4 in. N.O., Union Angle, Contoured Plug, Cv = 9.0; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3755-6008	Reconditioning Kit, 1 in. N.O., Union Angle, Contoured Plug, Cv = 17.0; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3755-6009	Reconditioning Kit, 1-1/4 in. N.O., Union Angle, Contoured Plug, Cv = 24.0; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3755-6011	Reconditioning Kit, 3/4 in. N.O., Union Globe, Cv = 6.0; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3755-6012	Reconditioning Kit, 1 in. N.O., Union Globe, Cv = 10.0; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3755-6013	Reconditioning Kit, 1-1/4 in. N.O., Union Globe, Cv = 15.0; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3755-6014	Reconditioning Kit, 1-1/2 in. N.O., Globe, Cv = 23.0; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3755-6015	Reconditioning Kit, 2 in. N.O., Globe, Cv = 35.0; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3755-6017	Reconditioning Kit, 3/4 in. N.O., Union Angle, Flat Disk, Cv = 9.0; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3755-6018	Reconditioning Kit, 1 in. N.O., Union Angle, Flat Disk, Cv = 17.0; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3755-6019	Reconditioning Kit, 1-1/4 in. N.O., Union Angle, Flat Disk, Cv = 25.0; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3755-6020	Reconditioning Kit, 1-1/2 in. N.O., Union Angle, Cv = 41.0; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3755-6021	Reconditioning Kit, 2 in. N.O., Union Angle, Cv = 60.0; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3755-6050	Reconditioning Kit, 1/2 in. N.O., Union Globe, Cv = 3.0; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3800-6001	Reconditioning Kit, 3/4 in. N.O., Union Angle, Cv = 3.7; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3800-6002	Spring Kit, 3 to 6 psig, 5/16 in. Stroke, for V-3100 and V-3800 (1/2 and 3/4 in.) Valves with V-3802 or V-4000 Actuator
V-3800-6003	Spring Kit, 9 to 13 psig, 5/16 in. Stroke for V-3100 and V-3800 (1/2 and 3/4 in.) Valves with V-3802 or V-4000 Actuator
V-3800-6006	Reconditioning Kit, 3/4 in. N.O., Union Globe, Cv = 3.8; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
Continued on next page . . .	

Code No. (Cont.)	Description
V-3800-6009	Reconditioning Kit, 3/4 in. N.O., Reverse Flow Union Angle, Cv = 3.9; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3800-6050	Reconditioning Kit, 1/2 in. N.O., Union Globe, Cv = 0.9; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3800-6051	Reconditioning Kit, 1/2 in. N.O., Union Globe, Cv = 1.8; Includes Stem and Disk Subassembly, and Bonnet and Packing Assembly
V-3854-6050	Reconditioning Kit, 1/2 in. N.O., Cage Trim, Cv = 1.2; Includes Stem and Plug Subassembly, and Bonnet and Packing Assembly
V-3854-6051	Reconditioning Kit, 1/2 in. N.O., Cage Trim, Cv = 2.2; Includes Stem and Plug Subassembly, and Bonnet and Packing Assembly
V-3854-6052	Reconditioning Kit, 1/2 in. N.O., Cage Trim, Cv = 4.4; Includes Stem and Plug Subassembly, and Bonnet and Packing Assembly
V-3970-6001	Reconditioning Kit, 1-1/2 in. N.C., Globe, Cv = 17.0; Includes Stem and Disk Subassembly, Bonnet and Packing Materials with Instructions, Grease, and Packing Tools
V-3970-6002	Reconditioning Kit, 2 in. N.C., Globe, Cv = 27.0; Includes Stem and Disk Subassembly, Bonnet and Packing Materials with Instructions, Grease, and Packing Tools
V-3970-6003	Reconditioning Kit, 1/2 in. N.C., Globe, Cv = 2.2; Includes Stem and Disk Subassembly, Bonnet and Packing Materials with Instructions, Grease, and Packing Tools
V-3970-6004	Reconditioning Kit, 1/2 in. N.C., Globe, Cv = 4.0; Includes Stem and Disk Subassembly, Bonnet and Packing Materials with Instructions, Grease, and Packing Tools
V-3970-6005	Reconditioning Kit, 3/4 in. N.C., Globe, Cv = 3.8; Includes Stem and Disk Subassembly, Bonnet and Packing Materials with Instructions, Grease, and Packing Tools
V-3970-6006	Reconditioning Kit, 3/4 in. N.C., Globe, Cv = 5.5; Includes Stem and Disk Subassembly, Bonnet and Packing Materials with Instructions, Grease, and Packing Tools
V-3970-6007	Reconditioning Kit, 1 in. N.C., Globe, Cv = 6.9; Includes Stem and Disk Subassembly, Bonnet and Packing Materials with Instructions, Grease, and Packing Tools
V-3970-6008	Reconditioning Kit, 1 in. N.C., Globe, Cv = 8.3; Includes Stem and Disk Subassembly, Bonnet and Packing Materials with Instructions, Grease, and Packing Tools
V-3970-6009	Reconditioning Kit, 1-1/4 in. N.C., Globe, Cv = 11.0; Includes Stem and Disk Subassembly, Bonnet and Packing Materials with Instructions, Grease, and Packing Tools
V-3970-6010	Reconditioning Kit, 1-1/4 in. N.C., Globe, Cv = 12.0; Includes Stem and Disk Subassembly, Bonnet and Packing Materials with Instructions, Grease, and Packing Tools
Continued on next page . . .	

Code No. (Cont.)	Description
V-3974-6001	Reconditioning Kit, 3/4 in. N.C. Cage Trim Valve, Cv = 8.6; Includes Cage with O-Ring, Stem and Plug Subassembly, Bonnet and Packing Assembly, and Grease Packet
V-3974-6002	Reconditioning Kit, 1 in. N.C. Cage Trim Valve, Cv = 13.9; Includes Cage with O-Ring, Stem and Plug Subassembly, Bonnet and Packing Assembly, and Grease Packet
V-3974-6003	Reconditioning Kit, 1/2 in. N.C. Cage Trim Valve, Cv = 0.2; Includes Cage with O-Ring, Stem and Plug Subassembly, Bonnet and Packing Assembly, and Grease Packet
V-3974-6004	Reconditioning Kit, 1/2 in. N.C. Cage Trim Valve, Cv = 0.4; Includes Cage with O-Ring, Stem and Plug Subassembly, Bonnet and Packing Assembly, and Grease Packet
V-3974-6005	Reconditioning Kit, 1/2 in. N.C. Cage Trim Valve, Cv = 1.2; Includes Cage with O-Ring, Stem and Plug Subassembly, Bonnet and Packing Assembly, and Grease Packet
V-3974-6006	Reconditioning Kit, 1/2 in. N.C. Cage Trim Valve, Cv = 2.2; Includes Cage with O-Ring, Stem and Plug Subassembly, Bonnet and Packing Assembly, and Grease Packet
V-3974-6007	Reconditioning Kit, 1/2 in. N.C. Cage Trim Valve, Cv = 4.4; Includes Cage with O-Ring, Stem and Plug Subassembly, Bonnet and Packing Assembly, and Grease Packet
V-3974-6008	Spring Kit, 4 to 8 psig, 1/2 in. Stroke, for V-3212, V-3970, V-4322 (1-1/2 and 2 in.), V-3774, V-4324 (1/2 and 3/4 in.) Valves with V-3000-1 or V-3000-2 Actuator
V-3974-6009	Spring Kit, 4 to 8 psig, 3/4 in. Stroke, for V-3974 (1 in.) and V-4324 (1 and 1-1/2 in.) Valves with V-3000-1 or V-3000-2 Actuator
V-4322-6001	Spring Kit, 4 to 8 psig, 3/4 in. Stroke, for V-3212, V-3970, V-4322 (1 and 1-1/4 in.) Valves with V-3000-1 or V-3000-2 Actuator
V-4322-6002	Reconditioning Kit, 1-1/2 in. Mixing Valve, Cv = 21.0; Includes Stem and Plug Subassembly, and Bonnet and Packing Assembly
V-4322-6003	Reconditioning Kit, 2 in. Mixing Valve, Cv = 30.0; Includes Stem and Plug Subassembly, and Bonnet and Packing Assembly
V-4322-6004	Reconditioning Kit, 1/2 in. Mixing Valve, Cv = 4.3; Includes Stem and Plug Subassembly, and Bonnet and Packing Assembly
V-4322-6005	Reconditioning Kit, 3/4 in. Mixing Valve, Cv = 5.3; Includes Stem and Plug Subassembly, and Bonnet and Packing Assembly
V-4322-6006	Reconditioning Kit, 1 in. Mixing Valve, Cv = 8.6; Includes Stem and Plug Subassembly, and Bonnet and Packing Assembly
V-4322-6007	Reconditioning Kit, 1-1/4 in. Mixing Valve, Cv = 13.0; Includes Stem and Plug Subassembly, and Bonnet and Packing Assembly
V-4324-6001	Reconditioning Kit, 3/4 in. Mixing Cage Trim Valve, Cv = 8.6; Includes Cage with O-Ring, Stem and Plug Subassembly, Bonnet and Packing Assembly, Lower Seat Ring with O-Ring, and Grease Packet
Continued on next page . . .	

Code No. (Cont.)	Description
V-4324-6002	Reconditioning Kit, 1 in. Mixing Cage Trim Valve, Cv = 13.9; Includes Cage with O-Ring, Stem and Plug Subassembly, Bonnet and Packing Assembly, Lower Seat Ring with O-Ring, and Grease Packet
V-4324-6003	Reconditioning Kit, 1/2 in. Mixing Cage Trim Valve, Cv = 1.2; Includes Cage with O-Ring, Stem and Plug Subassembly, Bonnet and Packing Assembly, Lower Seat Ring with O-Ring, and Grease Packet
V-4324-6004	Reconditioning Kit, 1/2 in. Mixing Cage Trim Valve, Cv = 2.2; Includes Cage with O-Ring, Stem and Plug Subassembly, Bonnet and Packing Assembly, Lower Seat Ring with O-Ring, and Grease Packet
V-4324-6005	Reconditioning Kit, 1/2 in. Mixing Cage Trim Valve, Cv = 4.4; Includes Cage with O-Ring, Stem and Plug Subassembly, Bonnet and Packing Assembly, Lower Seat Ring with O-Ring, and Grease Packet
V-4332-6001	Spring Kit, 4 to 8 psig, 5/16 in. Stroke, for V-3212, V-3970, V-4322 (1/2 and 3/4 in.), V-4332, V-4333, V-4334 (1/2 in.), and VT Series Valves with V-3000-1 or V-3000-2 Actuator
V-4440-6001	Spring Kit, 6 to 9 psig, 11/16 in. Stroke, for V-4440 (1/2 and 5/8 in.) Valves with V-3000-1 or V-3000-2 Actuator
V-4440-6002	Spring Kit, 4 to 12 psig, 11/16 in. Stroke, for V-4440 (1/2 and 5/8 in.) Valves with V-3000-1 or V-3000-2 Actuator
V-4440-6003	Reconditioning Kit, 1/2 in. Flare Valve, Cv = 1.4; Includes Stem and Disk Subassembly, Bonnet and Packing Subassembly, O-Ring, Grease Packet, and Packing Tools
V-4440-6004	Reconditioning Kit, 1/2 in. Flare Valve, Cv = 2.4; Includes Stem and Disk Subassembly, Bonnet and Packing Subassembly, O-Ring, Grease Packet, and Packing Tools
V-4440-6005	Reconditioning Kit, 1/2 in. Return Supply Flare Valve, Cv = 2.4; Includes Stem and Disk Subassembly, Bonnet and Packing Subassembly, O-Ring, Grease Packet, and Packing Tools
V-5230-6001	Spring Kit, 3 to 7 psig, 5/16 in. Stroke, for V-5230 (1/2 and 3/4 in.) Valves with V-3000-1 or V-3000-2 Actuator
V-5230-6002	Spring Kit, 3 to 7 psig, 3/8 in. Stroke, for V-5230 (1 in.) Valves with V-3000-1 or V-3000-2 Actuator
V-5252-6001	Reconditioning Kit, 2-1/2 in. N.O. Flanged Valve with 5R Pneumatic Actuator or Electric Actuator, Cv = 51.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Tools, Gasket and Screw Set, and Grease Packet
V-5252-6002	Reconditioning Kit, 2-1/2 in. N.O. Flanged Valve with 4R Pneumatic Actuator, Cv = 51.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Tools, Gasket and Screw Set, and Grease Packet
V-5252-6003	Reconditioning Kit, 3 in. N.O. Flanged Valve with 5R Pneumatic Actuator or Electric Actuator, Cv = 83.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Tools, Gasket and Screw Set, and Grease Packet
V-5252-6004	Reconditioning Kit, 3 in. N.O. Flanged Valve with 4R Pneumatic Actuator, Cv = 83.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Tools, Gasket and Screw Set, and Grease Packet
Continued on next page . . .	

Code No. (Cont.)	Description
V-5252-6005	Reconditioning Kit, 4 in. N.O. Flanged Valve with 5R Pneumatic Actuator or Electric Actuator, Cv = 150.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Tools, Gasket and Screw Set, and Grease Packet
V-5252-6006	Reconditioning Kit, 4 in. N.O. Flanged Valve with 8R Pneumatic Actuator, Cv = 150.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Tools, Gasket and Screw Set, and Grease Packet
V-5252-6007	Reconditioning Kit, 5 in. N.O. Flanged Valve with 8R Pneumatic Actuator, Cv = 240.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Assembly Tool, Gasket and Screw Set, and Grease Packet
V-5252-6008	Reconditioning Kit, 6 in. N.O. Flanged Valve with 8R Pneumatic Actuator, Cv = 350.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Assembly Tool, Gasket and Screw Set, and Grease Packet
V-5252-6009	Reconditioning Kit, 2 in. N.O. Threaded End, Cv = 26.0; Includes Bonnet, Packing Subassembly, and Stem and Disk Assembly
V-5254-6001	Reconditioning Kit, 1-1/2 in. N.O. Cage Trim, Cv = 27.5; Includes Bonnet, Packing Subassembly, and Stem and Disk Assembly
V-5254-6002	Reconditioning Kit, 2 in. N.O. Cage Trim, Cv = 41.0; Includes Bonnet, Packing Subassembly, and Stem and Disk Assembly
V-5430-6001	Spring Kit, 9 to 14 psig, 5/16 in. Stroke, for V-5430 (1/2 and 3/4 in.) Valves with V-3000-1 or V-3000-2 Actuator
V-5462-6001	Reconditioning Kit, 2-1/2 in. N.C. Flanged Valve with 5R Pneumatic Actuator or Electric Actuator, Cv = 54.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Tools, Gasket and Screw Set, and Grease Packet
V-5462-6002	Reconditioning Kit, 3 in. N.C. Flanged Valve with 5R Pneumatic Actuator or Electric Actuator, Cv = 83.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Tools, Gasket and Screw Set, and Grease Packet
V-5462-6003	Reconditioning Kit, 3 in. N.C. Flanged Valve with 8R Pneumatic Actuator, Cv = 83.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Tools, Gasket and Screw Set, and Grease Packet
V-5462-6004	Reconditioning Kit, 4 in. N.C. Flanged Valve with 5R Pneumatic Actuator or Electric Actuator, Cv = 150.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Tools, Gasket and Screw Set, and Grease Packet
V-5462-6005	Reconditioning Kit, 4 in. N.C. Flanged Valve with 8R Pneumatic Actuator, Cv = 150.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Assembly Tool, Gasket and Screw Set, and Grease Packet
V-5462-6006	Reconditioning Kit, 5 in. N.C. Flanged Valve with 8R Pneumatic Actuator, Cv = 237.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Assembly Tool, Gasket and Screw Set, and Grease Packet
Continued on next page . . .	

Code No. (Cont.)	Description
V-5462-6007	Reconditioning Kit, 6 in. N.C. Flanged Valve with 8R Pneumatic Actuator, Cv = 344.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Assembly Tool, Gasket and Screw Set, and Grease Packet
V-5462-6008	Reconditioning Kit, 1-1/4 in. N.C. Threaded Valve with 4R Pneumatic Actuator, Cv = 11.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Tools, and Grease Packet
V-5462-6009	Reconditioning Kit, 1-1/2 in. N.C. Threaded Valve with 4R Pneumatic Actuator, Cv = 17.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Tools, and Grease Packet
V-5462-6010	Reconditioning Kit, 2 in. N.C. Threaded Valve with 4R Pneumatic Actuator, Cv = 27.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Tools, and Grease Packet
V-5464-6001	Reconditioning Kit, 1-1/2 in. N.C. Cage Trim Valve, Cv = 27.5; Includes Cage with O-Ring, Stem and Plug Subassembly, Bonnet and Packing Assembly, and Grease Packet
V-5464-6002	Reconditioning Kit, 2 in. N.C. Cage Trim Valve, Cv = 41.0; Includes Cage with O-Ring, Stem and Plug Subassembly, Bonnet and Packing Assembly, and Grease Packet
V-5842-6001	Reconditioning Kit, 2-1/2 in. Mixing Flanged Valve with 5R Pneumatic Actuator or Electric Actuator, Cv =54.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Tools, Gasket and Screw Set, and Grease Packet
V-5842-6002	Reconditioning Kit, 3 in. Mixing Flanged Valve with 5R Pneumatic Actuator or Electric Actuator, Cv = 80.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Tools, Gasket and Screw Set, and Grease Packet
V-5842-6003	Reconditioning Kit, 3 in. Mixing Flanged Valve with 8R Pneumatic Actuator, Cv = 80.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Assembly Tool, Gasket and Screw Set, and Grease Packet
V-5842-6004	Reconditioning Kit, 4 in. Mixing Flanged Valve with Electric Actuator, Cv =157.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Tools, Gasket and Screw Set, and Grease Packet
V-5842-6005	Reconditioning Kit, 4 in. Mixing Flanged Valve with 8R Pneumatic Actuator, Cv = 157.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Assembly Tool, Gasket and Screw Set, and Grease Packet
V-5842-6006	Reconditioning Kit, 5 in. Mixing Flanged Valve with 8R Pneumatic Actuator, Cv = 238.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Assembly Tool, Gasket and Screw Set, and Grease Packet
V-5842-6007	Reconditioning Kit, 6 in. Mixing Flanged Valve with 8R Pneumatic Actuator, Cv = 347.0; Includes Bonnet and Packing Items, Stem and Disk Assembly, Packing Assembly Tool, Gasket and Screw Set, and Grease Packet
V-5844-6001	Reconditioning Kit, 1-1/2 in. Mixing Cage Trim, Cv = 27.5; Includes Cage with O-Ring, Stem and Plug Subassembly, Bonnet and Packing Assembly, Lower Seat Ring with O-Ring, and Grease Packet
Continued on next page . . .	

Code No. (Cont.)	Description
V-5844-6002	Reconditioning Kit, 2 in. Mixing Threaded, Cv = 41.0; Includes Cage with O-Ring, Stem and Plug Subassembly, Bonnet and Packing Assembly, Lower Seat Ring with O-Ring, and Grease Packet
V-9999-6001	Spring Kit, 3 to 6 psig, 5/16 in. Stroke, for VT Series Valves with V-3802 or V-4000 Actuator
V-9999-6002	Spring Kit, 4 to 8 psig, 5/16 in. Stroke, for VT Series Valves with V-3802 or V-4000 Actuator
V-9999-6003	Spring Kit, 9 to 13 psig, 5/16 in. Stroke, for VT Series Valves with V-3802 or V-4000 Actuator
D-3244-6001	Actuator, 8 to 13 psig Spring, Repair
D-3246-6001	Actuator, 8 to 13 psig Spring, Repair
D-3153-6001	Actuator, 3 to 7 psig Spring, Repair
D-3153-6002	Actuator, 5 to 10 psig Spring, Repair
D-3153-6003	Actuator, 8 to 13 psig Spring, Repair
D-4073-6001	Actuator, 3 to 7 psig Spring, Repair
D-4073-6002	Actuator, 5 to 10 psig Spring, Repair
D-4073-6003	Actuator, 8 to 13 psig Spring, Repair
D-4070-6001	Actuator, 3 to 6 / 9 to 12 psig Spring, Repair
D-4070-6002	Actuator, 3 to 6 / 11 to 14 psig Spring, Repair

Cross-Reference – Discontinued Parts to Suggested Replacements

Table 2: Discontinued Parts to Suggested Replacements

Code No.	Description	Suggested Replacement
A-101-6015	Contactora, 30 A, Double-Pole, 120 V	A-101-6014
A-102-6015	Contactora, 30 A, Double-Pole, 208 V	A-102-6014
A-302-6015	Contactora, 20 A, Triple-Pole, 208 V	A-302-6014
A-3025-601	Pop Valve for 10 Gallon Tank	No Replacement
A-3025-602	Motor Pulley	Purchase Locally: Browning AK-28
A-3025-604	V-Belt for Units with 30 Gallon Tank	Purchase Locally: Size A-49 V-Belt
A-303-6015	Contactora, 20 A, Triple-Pole, 408 V	A-303-6014
A-3033-602	Motor Pulley	Purchase Locally: Browning AK-32
A-304-6015	Contactora, 25 A, Triple-Pole, 480 V	A-304-6014
A-305-6015	Contactora, 40 A, Triple-Pole, 208 V	A-305-6014
A-3050-601	Motor Pulley for 1/2 hp	Purchase Locally: Browning AK-30
A-3050-603	Belt, 4L510	Purchase Locally: Type 4L510 Belt
A-306-6015	Contactora, 20 A, Triple-Pole, 120 V	A-306-6014
A-307-6015	Contactora, 30 A, Triple-Pole, 120 V	A-307-6014
A-3075-601	Motor Pulley for 3/4 hp	Purchase Locally: Browning BK-47
A-3075-602	Belt for 3/4 hp	Purchase Locally: Type 5L550 V-Belt
A-3075-605	Pump Repair Kit	A-3075-650
A-3075-606	Cylinder Head Valve Kit	No Replacement
A-308-6015	Contactora, 40 A, Triple-Pole, 120 V	A-308-6014
A-3250-601	Pulley, 6.95 O.D.	Purchase Locally: Maurey D-2700
A-3250-602	V-Belt, 66.20 O.D., Matched	Purchase Locally: Browning A64 in "Gripbelt"
A-3250-604	PE Switch	Purchase Locally
A-3400-605	Pulley, 6.45 O.D.	Purchase Locally: Maurey D-2650
A-3650-601	Pulley, 6.95 O.D.	Purchase Locally: Maurey D-2700
A-3650-602	V-Belt, 70.80 O.D., Matched	Purchase Locally: Browning A68 V-Belt
A-382-602	Belt for A-382 with 10 Gallon Tank	Purchase Locally: Browning A35
A-382-611	Belt for A-382 with 15 to 30 Gallon Tank	Purchase Locally: Type 4L480 Belt
A-385-606	Belt for 3/4 hp	Purchase Locally: Browning or Maurey 5L540
A-387-600	Pulley for 1-1/2 hp	Purchase Locally: Browning BK52 / Maurey BC50
A-4210-602	Refrigerant Dryer	Purchase Locally
A-5000-602	PE Switch	A-100-6010
A-5000-603	PE Switch and Orifice	A-100-6010
A-5000-607	PE Switch Kit, Lead	A-100-6010
A-5000-608	PE Switch Kit, Lag	A-100-6011
A-5025-602	V-Belt for 1/4 hp	Purchase Locally: Browning or Maurey 4L490
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
C-5230-600	Replacement Repeater Kit	Replace Entire Instrument
C-7610-600	Pilot Light Kit	Purchase Locally
C-7610-601	Timing Motor	Purchase Locally
C-9506-600	Diaphragm Assembly	Replace with V-9502
C-9506-601	Diaphragm Assembly	Replace with V-9502
D-251-6000	Diaphragm, No.3, Qty 25	D-251-6000 Diaphragm, No.3, Qty 2
D-251-6002	Diaphragm, No.2, Qty 12	D-251-6002 Diaphragm, No.2, Qty 2
D-251-6003	Diaphragm, No.4 Qty 12	D-251-6003 Diaphragm, No.4, Qty 2
D-251-6004	Diaphragm, No.6, Qty 6	D-251-6004 Diaphragm, No.6, Qty 2
D-265-600	Spring for No.2	Replace with D-3062
D-265-601	Positioner Spring, No.3 D-251, Qty 1	D-265-601, Qty 6
D-265-602	Positioner Spring, No.4 D-251, Qty 1	D-265-602, Qty 6
D-3000-600	Diaphragm	No Replacement
D-3073-600	Diaphragm, Qty 12	D-3073-600 Diaphragm, Qty 2
D-3073-601	Spring Kit, 3 to 7 psig	D-4073-6001 PDO Actuator Kit
D-3073-602	Spring Kit, 5 to 10 psig	D-4073-6002 PDO Actuator Kit
D-3073-603	Spring Kit, 8 to 13 psig	D-4073-6003 PDO Actuator Kit
D-3153-600	Diaphragm, Qty 12	D-3153-600 Diaphragm, Qty 2
D-3153-601	Spring Kit, 3 to 7 psig	D-3153-6001 PDO Actuator Kit
D-3153-602	Spring Kit, 5 to 10 psig	D-3153-6002 PDO Actuator Kit
D-3153-603	Spring for No.4	D-3153-6003 PDO Actuator Kit
D-3153-608	Swivel Bearing	D-3153-, D-3070-, D-3073-60xx PDO Actuator Kit
D-3244-615	Diaphragm for No.5, Qty 1	D-3244-615 Diaphragm for No.5, Qty 2
D-3244-616	Spring, 8 to 13 psig for No.6	D-3246-6001 PDO Actuator Kit
D-3244-617	Spring, 8 to 13 psig for No.5	D-3244-6001 PDO Actuator Kit
D-9502-611	New Style Diaphragm Assembly, Qty 1	D-9502-611, Diaphragm Assembly, Qty 6
F-1000-384	Test Port Insert	Replace Entire Instrument
G-110-601	Switch, Three-Phase	Purchase Locally
G-182-603	Motor, 115 V	Purchase Locally
H-3610-600	Element and Linkage	Replace with H-3610-1001 or H-3610-1002
H-4100-613	Humidity Element, C.A.B.	Replace with H-4100-201 or H-4100-203
P-8000-601	Element, 30 in. HG to 25 psig	Replace with P-8000-1 or P-8000-6
P-8000-602	Element, 0 to 244 psig	Replace with P-8000-2 or P-8000-5
T-271-600	Knob for T-3000	T-271-6000, Qty 2
T-275-600	Replacement Switch Stack Assembly	Replace with T-3x00 Series
T-275-602	Element, "B" Bulb, Qty 1	T-275-602, Qty 6
T-276-600	Element Assembly, Remote "B" Bulb	Replace with T-3x00 Series
T-285-600	Element, 8 ft Averaging	Replace with T-3x00 Series
T-3100-601	Lid, Direct Acting	Replace with T-3x00 Series
T-3100-606	Lid, Reverse Acting	Replace with T-3x00 Series
T-3300-600	Switch Subassembly	Replace with T-3x00 Series
T-400-1000	Cover with Thermometer	Replace with T-4000 Series
T-400-1003	Cover	Replace with T-4000 Series
T-400-5010	Cover Screw, Slotted	Replace with T-4000 Series
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
T-400-5220	Control Port	Replace Entire Instrument
T-400-600	Gasket	Replace with T-4000 Series
T-400-601	Relay Kit	Replace with T-4000 Series
T-400-607	Pivot Screw	Replace with T-4000 Series
T-400-625	Guard Screw, Lock	Replace with T-4000 Series
T-400-626	Cover Screw, Lock	Replace with T-4000 Series
T-400-632	Seat Kit	Replace with T-4000 Series
T-400-641	Thermometer	Replace with T-4000 Series
T-4002-600	Control Port, Qty 10	T-4002-600, Qty 50
T-4002-612	Thermometer, Horizontal	Replace with T-4002 Cover
T-4002-613	Thermometer, Vertical	Replace with T-4002 Cover
T-4004-600	Control Port for M-4002	Replace with T-4000 Series
T-4502-631	Indexing Switch	Replace with T-4506 or T-4516 Series
T-4506-608	Element Protection Screws	Replace with T-4000 Series
T-4512-613	Indexing Switch	Replace with T-4506 or T-4516 Series
T-460-1002	Cover	Replace with T-4000 Series
T-5220-600	Cover Repair Kit for T-5220	Replace with T-5220
T-5312-600	Element	Replace with T-5312-1 or T-5312-3
T-800-603	Lid Assembly	Replace with T-8000
T-8000-605	Front Assembly	Replace with T-8000
T-8000-608	Relay Assembly, Two-Position	Replace with T-8000
T-8000-616	Control Port, Ball Style, 3/16 in.	Replace with T-8000
T-8000-617	T-8000 Cover Repair Kit	Replace with T-8000
T-8500-602	Relay Proportional Kit	Replace with T-8000
V-103-600	Seat Ring for 2-1/2 in. Valve	Replace with V-5252-7 or V-5252-8
V-103-601	Seat Ring for 3 in. Valve with 2-1/2 in. Seat	Replace with V-5252-9 or V-5252-10
V-105-6000	Seat Ring for 2-1/2 in. Valve	Replace Valve
V-105-6003	Seat Ring, 3 in. for 4R	Replace Valve
V-105-6004	Seat Ring, 3 in. for 5R	Replace Valve
V-152-600	Diaphragm	Replace Valve
V-1952-601	Inner Valve	Replace with V-4440-1004
V-1952-610	Inner Valve, 1/2 in., Cv = 1.7	Replace Valve
V-3000-600	Diaphragm for V-3000-1	V-3000-6000, Qty 2
V-3000-601	Diaphragm for V-3000-2	V-3000-6001, Qty 3
V-3000-602	Screw and O-Ring	V-3000-6001, Qty 3
V-3000-604	Conversion Kit	Replace Valve
V-3000-605	Spider for V-3000-1	V-3000-6005, Qty 2
V-3000-606	Spider for V-3000-2	V-3000-6006, Qty 2
V-3000-607	Stem Extension Kit	Select New Spring Kit
V-3000-608	Stem Lock Screw	Select New Spring Kit
V-3000-610	Stem Connector and Screw	Select New Spring Kit
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
V-3000-611	Diaphragm Cup for V-3000	Replace Actuator or Valve Top Controller
V-3011-600	Disk for 1/2 in. Seat	V-3011-6000, Qty 5
V-3011-601	Disk for 3/4 in. Seat	V-3011-6001, Qty 5
V-3011-602	Disk for 1 in. Seat	V-3011-6002, Qty 5
V-3011-603	Disk for 1-7/8 in. Seat	V-3011-6003, Qty 1
V-3020-606	Disk for 1-1/4 in. Seat	V-3020-6006, Qty 5
V-3020-607	Disk for 1-1/2 in. Seat	V-3020-6007, Qty 5
V-3020-621	Disk for 3/8 in. Seat	V-3020-6021, Qty 5
V-3020-645	Disk Assembly, 0.9 to 1.1 Cv	V-3020-6045, Qty 1
V-3020-647	Disk Assembly, 1.8 to 2.5 Cv	V-3020-6047, Qty 5
V-3020-666	Disk Assembly, 3.8 Cv	V-3752-6027 Reconditioning Kit
V-3020-667	Disk Assembly, 7.0 to 7.7 Cv	V-3752-6017 or V-3752-6028 Reconditioning Kit
V-3020-668	Disk Assembly, 12.0 Cv	V-3752-6018 or V-3752-6019 Reconditioning Kit
V-3020-669	Disk Assembly, 20.0 Cv	V-3752-6020 or V-3752-6030 Reconditioning Kit
V-3020-670	Disk Assembly, 26.0 to 35.0 Cv	V-3752-6031 or V-3752-6034 Reconditioning Kit
V-3020-671	Disk Assembly, 3.7 Cv	V-3752-6016 Reconditioning Kit
V-3100-611	Diaphragm, Qty 1	V-3100-611, Qty 3
V-3100-643	Set Screw	V-3100-6043, Qty 10
V-3752-6000	Inner Valve, 2 in. Angle, 3 to 6 psig, 35.0 Cv	V-3752-6034 and V-3754-6010 Kits
V-3752-6001	Spring, 3 to 6 psig	V-3752-6023 Spring Kit
V-3752-6002	Spring, 3 to 6 psig, 1/2 in. to 3/4 in.	V-3752-6024 Spring Kit
V-3752-6003	Body, Union Globe, Qty 1	V-3752-6003, Qty 6
V-3752-6004	Body, Union Globe, 3/4 in., Qty 1	V-3752-6004, Qty 6
V-3752-6005	Body, Union Globe, 1 in., Qty 1	V-3752-6005, Qty 6
V-3752-6006	Union Angle, Less Actuator, 1/2 in., 1.5 Cv	Replace with VG7551ET+300xx
V-3752-6007	Union Angle, Less Actuator, 1/2 in., 2.5 Cv	Replace with VG7551GT+300xx
V-3752-6008	Union Angle, Less Actuator, 3/4 in., 3.7 Cv	V-3752-6008 (Was Discontinued -- Now Active)
V-3752-6009	Union Angle, Less Actuator, 1 in., 7.7 Cv	V-3752-6009 (Was Discontinued -- Now Active)
V-3752-6010	Union Angle, Less Actuator, 1-1/4 in., 12 Cv	V-3752-6010 (Was Discontinued -- Now Active)
V-3752-6011	Union Angle, Less Actuator, 1-1/2 in., 20 Cv	V-3752-6011 (Was Discontinued -- Now Active)
V-3752-6012	Union Globe, Less Actuator, 1-1/4 in., 12 Cv	V-3752-6012 (Was Discontinued -- Now Active)
V-3752-611	Inner Valve, 9 to 13 psig, Union Globe, 1.8 Cv	Replace with VG7251ET+3003E
V-3752-612	Inner Valve, 9 to 13 psig, for 1/2 in. V-111	Replace with VG7251GT+3003E
V-3752-613	Inner Valve, 9 to 13 psig, Union Globe, 3.8 Cv	V-3752-6027 and V-3752-6022 Kits
V-3752-614	Inner Valve, 9 to 13 psig, Union Globe, 7.0 Cv	V-3752-6028 and V-3752-6021 Kits
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
V-3752-615	Inner Valve, 9 to 13 psig, Union Globe, 12.0 Cv	V-3752-6019 and V-3752-6021 Kits
V-3752-616	Inner Valve, 9 to 13 psig, Union Globe, 20.0 Cv	V-3752-6030 and V-3754-6009 Kits
V-3752-617	Inner Valve, 9 to 13 psig, Union Globe, 26.0 Cv	V-3752-6031 and V-3754-6009 Kits
V-3752-640	Spring, 4 to 8 psig	V-4332-6001 Spring Kit
V-3752-641	Spring, 9 to 13 psig	V-3752-6022 Spring Kit
V-3752-642	Spring, 4 to 8 psig	V-4322-6001 Spring Kit
V-3752-643	Spring, 9 to 13 psig	V-3752-6021 Spring Kit
V-3752-644	Spring, 4 to 8 psig	V-3974-6008 Spring Kit
V-3752-645	Spring, 9 to 13 psig	V-3754-6009 Spring Kit
V-3752-647	Disk for 1/2 in. Seat	V-3752-6047, Qty 5
V-3752-664	Stem and Swivel for 1/2 in. Union Globe	V-3752-6064 Stem and Swivel for 1/2 in. Globe, Qty 5
V-3752-665	Stem and Swivel for 3/4 in. Union Globe	V-3752-6027 Reconditioning Kit
V-3752-666	Stem and Swivel for 1 in. Union Globe	V-3752-6028 Reconditioning Kit
V-3752-667	Stem and Swivel for 1-1/4 in. Union Globe	V-3752-6019 Reconditioning Kit
V-3752-668	Stem and Swivel for 1-1/2 in. Union Globe and 1 in. Union Angle	V-3752-6030 Reconditioning Kit
V-3752-669	Stem and Swivel for 2 in. Union Globe	V-3752-6031 Reconditioning Kit
V-3752-670	Stem and Swivel for 1/2 in. Union Angle	V-3752-6052 (Cv = 2.5) or Replace with VG7552xx Valve
V-3752-671	Stem and Swivel for 3/4 in. Union Angle	V-3752-6016 Reconditioning Kit
V-3752-672	Stem and Swivel for 1-1/4 in. and 1-1/2 in. Union Angle	V-3752-6018 Reconditioning Kit
V-3752-673	Stem and Swivel 2 in. Union Angle	V-3752-6034 Reconditioning Kit
V-3752-674	Spring Plate, Upper	Select New Spring Kit
V-3752-675	Spring Plate, Lower	Select New Spring Kit
V-3752-676	3/8 in. Teflon Disk	Replace Valve
V-3752-677	1/2 in. Teflon Disk	Replace Valve
V-3752-678	3/4 in. Teflon Disk	Replace Valve
V-3752-679	1 in. Teflon Disk	Replace Valve
V-3752-680	1-1/4 in. Teflon Disk	Replace Valve
V-3752-681	1-1/2 in. Teflon Disk	Replace Valve
V-3752-682	1-7/8 in. Teflon Disk	Replace Valve
V-3752-688	Inner Valve, 1/2 in. Union Globe, 3 to 6 psig, 0.9 Cv	V-3752-6050 and V-3752-6023 Kits
V-3752-689	Inner Valve, 1/2 in. Union Globe, 3 to 6 psig, 1.8 Cv	V-3752-6051 and V-3752-6023 Kits
V-3752-690	Inner Valve, 3/4 in. Union Globe, 3 to 6 psig, 3.8 Cv	V-3752-6027 and V-3752-6023 Kits
V-3752-691	Inner Valve, 1 in. Union Globe, 3 to 6 psig, 7.0 Cv	V-3752-6028 and V-3752-6024 Kits
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
V-3752-692	Inner Valve, 1-1/4 in. Union Globe, 3 to 6 psig, 12.0 Cv	V-3752-6019 and V-3752-6024 Kits
V-3752-693	Inner Valve, 1-1/2 in. Union Globe, 3 to 6 psig, 20.0 Cv	V-3752-6030 and V-3754-6010 Kits
V-3752-694	Inner Valve, 2 in. Union Globe, 3 to 6 psig, 26.0 Cv	V-3752-6031 and V-3754-6010 Kits
V-3752-695	Inner Valve, 1/2 in. Angle, 3 to 6 psig, 2.5 Cv	V-3752-6052 and V-3752-6023 Kits
V-3752-696	Inner Valve, 3/4 in. Angle, 3 to 6 psig, 3.7 Cv	V-3752-6016 and V-3752-6023 Kits
V-3752-697	Inner Valve, 1 in. Angle, 3 to 6 psig, 7.7 Cv	V-3752-6017 and V-3752-6024 Kits
V-3752-698	Inner Valve, 1-1/4 in. Angle, 3 to 6 psig, 12.0 Cv	V-3752-6018 and V-3752-6024 Kits
V-3752-699	Inner Valve, 1-1/2 in. Angle, 3 to 6 psig, 20.0 Cv	V-3752-6020 and V-3754-6010 Kits
V-3754-600	Stem and Plug	V-3754-6005
V-3754-601	Stem and Plug	V-3754-6006
V-3754-602	Stem and Plug	V-3754-6007
V-3754-607	Spring, 3 to 6 psig	V-3754-6010 Spring Kit
V-3754-608	Spring, 3 to 6 psig, 3/4 in. Stroke	V-3754-6010 Spring Kit
V-3754-611	Stem, Plug, and Packing Kit	V-5254-6001 Reconditioning Kit
V-3754-612	Valve Less Body and Actuator	V-3754-6003 and V-3754-6010 Kits
V-3754-613	Valve Less Body and Actuator	V-3754-6004 and V-3754-6010 Kits
V-3754-614	Valve Less Body and Actuator	V-3754-6005 and V-3754-6010 Kits
V-3754-615	Valve Less Body and Actuator	V-3754-6006 and V-3754-6010 Kits
V-3754-616	Valve Less Body and Actuator	V-3754-6007 and V-3754-6010 Kits
V-3754-617	Valve Less Body and Actuator	V-3754-6005 and V-3754-6009 Kits
V-3754-618	Valve Less Body and Actuator	V-3754-6006 and V-3754-6009 Kits
V-3754-619	Valve Less Body and Actuator	V-3754-6007 and V-3754-6009 Kits
V-3754-620	Valve Less Body and Actuator	V-3754-6001 and V-3754-6010 Kits
V-3754-621	Valve Less Body and Actuator	V-3754-6001 and V-3754-6009 Kits
V-3754-622	Valve Less Body and Actuator	V-3754-6002 and V-3754-6011 Kits
V-3754-623	Valve Less Body and Actuator	V-3754-6002 and V-3754-6008 Kits
V-3754-624	Valve Less Body and Actuator	V-5254-6001 and V-3754-6011 Kits
V-3754-625	Valve Less Body and Actuator	V-5254-6001 and V-3754-6008 Kits
V-3754-626	Stem, Plug, and Packing Kit	V-3754-6003 Reconditioning Kit
V-3754-627	Stem, Plug, and Packing Kit	V-3754-6004 Reconditioning Kit
V-3754-628	Stem, Plug, and Packing Kit	V-3754-6005 Reconditioning Kit
V-3754-629	Stem, Plug, and Packing Kit	V-3754-6006 Reconditioning Kit
V-3754-630	Stem, Plug, and Packing Kit	V-3754-6007 Reconditioning Kit
V-3754-631	Stem, Plug, and Packing Kit	V-3754-6001 Reconditioning Kit
V-3754-632	Stem, Plug, and Packing Kit	V-3754-6002 Reconditioning Kit
V-3754-633	Bonnet for 1/2 in.	V-3754-60xx Reconditioning Kit
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
V-3754-634	Bonnet for 3/4 in.	V-3754-60xx Reconditioning Kit
V-3754-635	Bonnet for 1 in.	V-3754-60xx Reconditioning Kit
V-3754-636	Bonnet for 1-1/2 in.	V-3754-60xx Reconditioning Kit
V-3754-637	Bonnet for 2 in.	V-3754-60xx Reconditioning Kit
V-3755-624	Disk Assembly, 1 in.	V-3755-60xx Reconditioning Kit
V-3755-625	Disk Assembly, 1-1/4 in.	V-3755-60xx Reconditioning Kit
V-3755-626	Disk Assembly, 1-1/2 in.	V-3755-60xx Reconditioning Kit
V-3755-627	Disk Assembly, 2 in.	V-3755-60xx Reconditioning Kit
V-3755-629	Disk and Nut, 1/2 in.	Replace with VG7000 Series
V-3755-630	Disk and Nut, 3/4 in.	V-3755-60xx Reconditioning Kit
V-3755-631	Stem and Swivel	V-3755-60xx Reconditioning Kit
V-3755-637	Union Globe, 1-1/4 in.	Replace with V-3752-6012
V-3755-640	Body, Union Angle, 1 in.	Replace with V-3752-6009
V-3755-641	Body, Union Angle, 1-1/4 in.	Replace with V-3752-6010
V-3755-642	Inner Valve, 1/2 in. Globe, 3 to 6 psig, 3.0 Cv	V-3755-6050 and V-3752-6023 Kits
V-3755-643	Inner Valve, 3/4 in. Globe, 3 to 6 psig, 5.2 Cv	V-3755-6002 and V-3752-6023 Kits
V-3755-644	Inner Valve, 1 in. Globe, 3 to 6 psig, 8.2 Cv	V-3755-6003 and V-3752-6024 Kits
V-3755-645	Inner Valve, 1-1/4 in. Globe, 3 to 6 psig, 13.0 Cv	V-3755-6004 and V-3752-6024 Kits
V-3755-646	Inner Valve, 1-1/2 in. Globe, 3 to 6 psig, 21.0 Cv	V-3755-6005 and V-3754-6010 Kits
V-3755-647	Inner Valve, 1/2 in. Angle, 3 to 6 psig, 3.8 Cv	Replace with VG7551GT+3008B
V-3755-648	Inner Valve, 3/4 in. Angle, 3 to 6 psig, 9.0 Cv	V-3755-6007 and V-3752-6023 Kits
V-3755-649	Inner Valve, 1 in. Angle, 3 to 6 psig, 17.0 Cv	V-3755-6008 and V-3752-6024 Kits
V-3755-650	Inner Valve, 1-1/4 in. Angle, 3 to 6 psig, 24.0 Cv	V-3755-6009 and V-3752-6024 Kits
V-3755-652	Inner Valve, 1/2 in. Globe, 3 to 6 psig, 3.2 Cv	Replace with VG7251GT+3008B
V-3755-653	Inner Valve, 3/4 in. Globe, 3 to 6 psig, 6.0 Cv	V-3755-6011 and V-3752-6023 Kits
V-3755-654	Inner Valve, 1 in. Globe, 3 to 6 psig, 10.0 Cv	V-3755-6012 and V-3752-6024 Kits
V-3755-655	Inner Valve, 1-1/4 in. Globe, 3 to 6 psig, 15.0 Cv	V-3755-6013 and V-3752-6024 Kits
V-3755-656	Inner Valve, 1-1/2 in. Globe, 3 to 6 psig, 23.0 Cv	V-3755-6014 and V-3754-6010 Kits
V-3755-657	Inner Valve, 2 in. Globe, 3 to 6 psig, 35.0 Cv	V-3755-6015 and V-3754-6010 Kits
V-3755-658	Inner Valve, 1/2 in. Angle, 3 to 6 psig, 4.2 Cv	Replace with VG7551GT+3008B
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
V-3755-659	Inner Valve, 3/4 in. Angle, 3 to 6 psig, 9.0 Cv	V-3755-6017 and V-3752-6023 Kits
V-3755-660	Inner Valve, 1 in. Angle, 3 to 6 psig, 17.0 Cv	V-3755-6018 and V-3752-6024 Kits
V-3755-661	Inner Valve, 1-1/4 in. Angle, 3 to 6 psig, 25.0 Cv	V-3755-6019 and V-3752-6024 Kits
V-3755-662	Inner Valve, 1-1/2 in. Angle, 3 to 6 psig, 41.0 Cv	V-3755-6020 and V-3754-6010 Kits
V-3755-663	Inner Valve, 2 in. Angle, 3 to 6 psig, 60.0 Cv	V-3755-6021 and V-3754-6010 Kits
V-3762-615	Disk, 0.2 and 0.4 Cv	Replace with V-3766-1001
V-3762-680	Spring, 3 to 7 psig, 1/2 and 3/4 in.	V-5230-6001 Spring Kit
V-3762-681	Spring, 9 to 14 psig	V-5430-6001 Spring Kit
V-3800-617	Inner Valve, 1/2 in. Globe, 9 to 13 psig, 1.8 Cv	V-3800-6051 and V-3800-6003 Kits
V-3800-619	Inner Valve, 3/4 in. Globe, 9 to 13 psig, 3.8 Cv	V-3800-6006 and V-3800-6003 Kits
V-3800-625	Inner Valve, 1/2 in. Angle, 9 to 13 psig, 2.5 Cv	Replace Valve with VG7551xS+3801E
V-3800-627	Inner Valve, 3/4 in. Angle, 9 to 13 psig, 3.7 Cv	V-3800-6001 and V-3800-6003 Kits
V-3800-631	Spring, 9 to 13 psig	V-3800-6003 Spring Kit
V-3800-633	Stem and Swivel, 1/2 in. Globe	Replace Valve with VG7241xS+3801x
V-3800-634	Stem and Swivel, 1/2 in. Angle	Replace Valve with VG7551xS+3801x
V-3800-636	Stem and Swivel, 3/4 in. Globe	V-3800-6006 Reconditioning Kit
V-3800-637	Stem and Swivel, 3/4 in. Angle	V-3800-6001 Reconditioning Kit
V-3800-639	Spider	V-3802-1
V-3800-640	Oval Actuator Complete	V-3802-1
V-3800-641	Inner Valve, 1/2 in. Globe, 3 to 6 psig, 0.9 Cv	V-3800-6050 and V-3800-6002
V-3800-642	Inner Valve, 1/2 in. Globe, 3 to 6 psig, 1.8 Cv	V-3800-6051 and V-3800-6002
V-3800-643	Inner Valve, 3/4 in. Globe, 3 to 6 psig, 3.8 Cv	V-3800-6006 and V-3800-6002 Kits
V-3800-644	Inner Valve, 1/2 in. Angle, 3 to 6 psig, 2.5 Cv	Replace Valve with VG7551GS+3801B
V-3800-645	Inner Valve, 3/4 in. Angle, 3 to 6 psig, 3.7 Cv	V-3800-6001 and V-3800-6002 Kits
V-3800-646	Inner Valve, 1/2 in. Reverse Flow Union Angle, 3 to 6 psig, 2.3 Cv	Replace Valve with VG7551ES+3801B
V-3800-647	Inner Valve, 3/4 in. Reverse Flow Union Angle, 3 to 6 psig, 3.9 Cv	V-3800-6009 and V-3800-6002 Kits
V-3800-648	Union Angle, 3 to 6 psig, 1/2 in., 1.0 Cv	Replace Valve with VG7551CS+3801B
V-3800-649	Union Angle, 3 to 6 psig, 1/2 in., 1.5 Cv	Replace Valve with VG7551ES+3801B
V-3800-650	Union Angle, 3 to 6 psig, 1/2 in., 2.5 Cv	Replace Valve with VG7551GS+3801B
V-3800-651	Union Angle, 3 to 6 psig, 3/4 in., 3.7 Cv	V-3800-651 (Was Discontinued -- Now Active)
V-3800-652	Spring, 3 to 6 psig	V-3800-6002 Spring Kit
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
V-3800-660	Packing Nut for V-3800	V-3800-660 (Was Discontinued -- Now Active)
V-3800-661	Bonnet for 1/2 in.	Replace with VG7000 Series
V-3800-662	Diaphragm Cup	V-3802-1
V-3854-604	Spring, 9 to 13 psig	V-3754-6013 Spring Kit
V-3854-605	Spring, 3 to 6 psig	V-3754-6012 Spring Kit
V-3854-609	Valve Less Body and Actuator	V-3854-6050 and V-3754-6012 Kits
V-3854-610	Valve Less Body and Actuator	V-3854-6051 and V-3754-6012 Kits
V-3854-611	Valve Less Body and Actuator	V-3854-6052 and V-3754-6012 Kits
V-3854-612	Valve Less Body and Actuator	V-3854-6050 and V-3754-6013 Kits
V-3854-613	Valve Less Body and Actuator	V-3854-6051 and V-3754-6013 Kits
V-3854-614	Valve Less Body and Actuator	V-3854-6052 and V-3754-6013 Kits
V-3854-615	Stem, Plug, and Packing Kit	V-3854-6050 Reconditioning Kit
V-3854-616	Stem, Plug, and Packing Kit	V-3854-6051 Reconditioning Kit
V-3854-617	Stem, Plug, and Packing Kit	V-3854-6052 Reconditioning Kit
V-3854-620	Stem Connector and Screw	V-3754-6013 (9 to 13 psig) or V-3754-6012 (3 to 6 psig)
V-3962-600	Disk, 5/8 in.	Replace with V-3966 Series Flare Valve
V-3962-606	Stem and Swivel, 1/2 in.	Replace with V-3966 Series Flare Valve
V-3962-607	Stem, 5/8 in.	Replace with V-3966 Series Flare Valve
V-3962-608	Body, 5/8 in.	Replace with V-3966 Series Flare Valve
V-3964-600	Stem and Plug, 1/2 in., 1.7 Cv	Replace with V-3966 Series Flare Valve
V-3964-601	Stem and Plug, 1/2 in., 3.2 Cv	Replace with V-3966 Series Flare Valve
V-3966-600	Stem and Plug, 1/2 in., 1.7 Cv	Replace with V-3966 Series Flare Valve
V-3966-601	Stem and Plug, 3.2 Cv	Replace with V-3966 Series Flare Valve
V-3966-602	Stem, Plug, and Packing Kit	Replace with V-3966 Series Flare Valve
V-3966-603	Stem, Plug, Packing Kit	Replace with V-3966 Series Flare Valve
V-3966-604	Bottom Cap for 1/2 in. Valve	Replace with V-3966 Series Flare Valve
V-3970-600	Inner Valve, 1/2 in., 9 to 13 psig, 2.2 Cv	V-3970-6003 and V-3752-6022 Kits
V-3970-601	Inner Valve for 1/2 in. V-155	V-3970-6004 and V-3752-6022 Kits
V-3970-602	Inner Valve for 3/4 in. V-155	V-3970-6006 and V-3752-6022 Kits
V-3970-603	Inner Valve for 1 in. V-155	V-3970-6008 and V-3752-6021 Kits
V-3970-604	Inner Valve for 1-1/4 in. V-155	V-3970-6010 and V-3752-6021 Kits
V-3970-619	Inner Valve, 3/4 in., 9 to 13 psig, 3.8 Cv	V-3970-6005 and V-3752-6022 Kits
V-3970-620	Inner Valve, 1 in., 9 to 13 psig, 6.9 Cv	V-3970-6007 and V-3752-6021 Kits
V-3970-621	Inner Valve, 1-1/4 in., 9 to 13 psig, 11.0 Cv	V-3970-6009 and V-3752-6021 Kits
V-3970-622	Inner Valve, 1-1/2 in., 9 to 13 psig, 17.0 Cv	V-3970-6001 and V-3754-6009 Kits
V-3970-623	Inner Valve, 2 in., 9 to 13 psig, 27.0 Cv	V-3970-6002 and V-3754-6009 Kits
V-3970-628	Disk Assembly, 1/2 in., 2.2 Cv	V-3970-6003 Reconditioning Kit
V-3970-629	Disk Assembly, 3/4 in., 3.8 Cv	V-3970-6005 Reconditioning Kit
V-3970-630	Disk Assembly, 1 in., 6.9 Cv	V-3970-6007 Reconditioning Kit
V-3970-631	Disk Assembly, 1-1/4 in., 11.0 Cv	V-3970-6009 Reconditioning Kit
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
V-3970-632	Disk Assembly, 1-1/2 in., 17.0 Cv	V-3970-6001 Reconditioning Kit
V-3970-633	Disk Assembly, 2 in., 27.0 Cv	V-3970-6002 Reconditioning Kit
V-3970-634	Stem and Swivel, 1/2 in.	V-3970-6003 Reconditioning Kit
V-3970-635	Stem and Swivel, 3/4 in.	V-3970-6005 Reconditioning Kit
V-3970-636	Stem and Swivel, 1 in. and 1-1/4 in.	V-3970-6007 or V-3970-6009 Reconditioning Kit
V-3970-637	Stem and Swivel, 1-1/2 in.	V-3970-6001 Reconditioning Kit
V-3970-638	Stem and Swivel, 2 in.	V-3970-6002 Reconditioning Kit
V-3974-600	Stem and Plug, 1/2 in., 1.2 Cv	V-3974-6005 Reconditioning Kit
V-3974-601	Stem and Plug, 1/2 in., 2.2 Cv	V-3974-6006 Reconditioning Kit
V-3974-602	Stem and Plug, 1/2 in., 4.4 Cv	V-3974-6007 Reconditioning Kit
V-3974-603	Stem and Plug, 3/4 in., 8.6 Cv	V-3974-6001 Reconditioning Kit
V-3974-604	Stem and Plug, 1 in., 13.9 Cv	V-3974-6002 Reconditioning Kit
V-3974-605	Stem and Plug, 1/2 in., 0.2 Cv	V-3974-6003 Reconditioning Kit
V-3974-606	Stem and Plug, 1/2 in., 0.4 Cv	V-3974-6004 Reconditioning Kit
V-3974-607	Stem, Plug, and Packing Kit	V-5464-6001 Reconditioning Kit
V-3974-608	Valve Less Body and Actuator	V-3974-6003 and V-3754-6009 Kits
V-3974-609	Valve Less Body and Actuator	V-3974-6004 and V-3754-6009 Kits
V-3974-610	Valve Less Body and Actuator	V-3974-6005 and V-3754-6009 Kits
V-3974-611	Valve Less Body and Actuator	V-3974-6006 and V-3754-6009 Kits
V-3974-612	Valve Less Body and Actuator	V-3974-6007 and V-3754-6009 Kits
V-3974-613	Valve Less Body and Actuator	V-3974-6001 and V-3754-6009 Kits
V-3974-614	Valve Less Body and Actuator	V-3974-6002 and V-3754-6008 Kits
V-3974-615	Valve Less Body	V-5464-6001 and V-3754-6008 Kits
V-3974-616	Stem, Plug, and Packing Kit	V-3974-6003 Reconditioning Kit
V-3974-617	Stem, Plug, and Packing Kit	V-3974-6004 Reconditioning Kit
V-3974-618	Stem, Plug, and Packing Kit	V-3974-6005 Reconditioning Kit
V-3974-619	Stem, Plug, and Packing Kit	V-3974-6006 Reconditioning Kit
V-3974-620	Stem, Plug, and Packing Kit	V-3974-6007 Reconditioning Kit
V-3974-621	Stem, Plug, and Packing Kit	V-3974-6001 Reconditioning Kit
V-3974-622	Stem, Plug, and Packing Kit	V-3974-6002 Reconditioning Kit
V-4140-602	Inner Valve, 3/4 in., Bypass, 4 to 8 psig	Replace Valve
V-4140-604	Inner Valve, 1 in., Bypass, 4 to 8 psig	Replace Valve
V-4140-606	Inner Valve, 1-1/4 in., Bypass, 4 to 8 psig	Replace Valve
V-4140-608	Inner Valve, 1-1/2 in., Bypass, 4 to 8 psig	Replace Valve
V-4140-610	Inner Valve, 2 in., Bypass, 4 to 8 psig	Replace Valve
V-4140-629	Inner Valve, 1/2 in., Bypass, 4 to 8 psig	Replace Valve
V-4322-607	Inner Valve, 1/2 in., Mixing, 4 to 8 psig, 4.3 Cv	V-4322-6004 and V-4332-6001 Kits
V-4322-608	Inner Valve, 1/2 in., Mixing, 9 to 13 psig, 4.3 Cv	V-4322-6004 and V-3752-6022 Kits
V-4322-609	Inner Valve, 3/4 in., Mixing, 4 to 8 psig, 5.3 Cv	V-4322-6005 and V-4332-6001 Kits
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
V-4322-610	Inner Valve, 3/4 in., Mixing, 9 to 13 psig, 5.3 Cv	V-4322-6005 and V-3752-6022 Kits
V-4322-611	Inner Valve, 1 in., Mixing, 4 to 8 psig, 8.6 Cv	V-4322-6006 and V-4322-6001 Kits
V-4322-612	Inner Valve, 1 in., Mixing, 9 to 13 psig, 8.6 Cv	V-4322-6006 and V-3752-6021 Kits
V-4322-613	Inner Valve, 1-1/4 in., Mixing, 4 to 8 psig, 13.0 Cv	V-4322-6007 and V-4322-6001 Kits
V-4322-614	Inner Valve, 1-1/4 in., Mixing, 9 to 13 psig, 13.0 Cv	V-4322-6007 and V-3752-6021 Kits
V-4322-615	Inner Valve, 1-1/2 in., Mixing, 4 to 8 psig, 21.0 Cv	V-4322-6002 and V-3974-6008 Kits
V-4322-616	Inner Valve, 1-1/2 in., Mixing, 9 to 13 psig, 21.0 Cv	V-4322-6002 and V-3754-6009 Kits
V-4322-617	Inner Valve, 2 in., Mixing, 4 to 8 psig, 30.0 Cv	V-4322-6003 and V-3974-6008 Kits
V-4322-618	Inner Valve, 2 in., Mixing, 9 to 13 psig, 30.0 Cv	V-4322-6003 and V-3754-6009 Kits
V-4322-649	Stem and Disk Assembly, 1/2 in., 4.3 Cv	V-4322-6004 Reconditioning Kit
V-4322-650	Stem and Disk Assembly, 3/4 in., 5.3 Cv	V-4322-6005 Reconditioning Kit
V-4322-651	Stem and Disk Assembly, 1 in., 8.6 Cv	V-4322-6006 Reconditioning Kit
V-4322-652	Stem and Disk Assembly, 1-1/4 in., 13.0 Cv	V-4322-6007 Reconditioning Kit
V-4322-652G	Stem and Disk Assembly, 1-1-4 in., 13.0 Cv	V-4322-6007 Reconditioning Kit
V-4322-653	Stem and Disk Assembly, 1-1/2 in., 21.0 Cv	V-4322-6002 Reconditioning Kit
V-4322-654	Stem and Disk Assembly, 2 in., 30.0 Cv	V-4322-6003 Reconditioning Kit
V-4322-655	Stem and Disk Assembly, 1/2 in., 1.6 Cv	Replace with VG7842ET+3008x
V-4324-600	O-Ring, 1/2 in., Lower	V-4324-600x Reconditioning Kit
V-4324-601	O-Ring, 1/2 in., Cage	V-3754-600x Reconditioning Kit for Two-Way N.O. Valves, V-3974-600x Reconditioning Kit for Two-Way N.C. Valves, or V-4324-600x Reconditioning Kit for Mixing Valves; For V-3854 Valves, V-3854-605x Reconditioning Kit
V-4324-602	O-Ring, 3/4 in., Lower	V-4324-6001 Reconditioning Kit
V-4324-603	O-Ring, 3/4 in., Cage	V-3754-6001 Reconditioning Kit for Two-Way N.O. Valves, V-3974-6001 Reconditioning Kit for Two-Way N.C. Valves, or V-4324-6001 Reconditioning Kit for Mixing Valves
V-4324-604	O-Ring, 1 in., Lower	V-4324-6002 Reconditioning Kit
V-4324-605	O-Ring, 1 in., Cage	V-3754-6002 Reconditioning Kit for Two-Way N.O. Valves, V-3974-6002 Reconditioning Kit for Two-Way N.C. Valves, or V-4324-6002 Reconditioning Kit for Mixing Valves
V-4324-606	Spring, 4 to 8 psig, 1 in.	V-3974-6009 Spring Kit
V-4324-607	Spring, 9 to 13 psig	V-3754-6008 Spring Kit
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
V-4324-608	Cage, 1/2 in., 1.2 and 2.2 Cv	V-3754-600x Reconditioning Kit for Two-Way N.O. Valves, V-3974-600x Reconditioning Kit for Two-Way N.C. Valves, or V-4324-600x Reconditioning Kit for Mixing Valves; For V-3854 Valves, V-3854-605x Reconditioning Kit
V-4324-609	Cage, 1/2 in., 4.4 Cv	V-3754-6007 Reconditioning Kit for Two-Way N.O. Valves, V-3974-6007 Reconditioning Kit for Two-Way N.C. Valves, or V-4324-6005 Reconditioning Kit for Mixing Valves; For V-3854 Valves, V-3854-6052 Reconditioning Kit
V-4324-610	Cage, 3/4 in.	V-3754-6001 Reconditioning Kit for Two-Way N.O. Valves, V-3974-6001 Reconditioning Kit for Two-Way N.C. Valves, or V-4324-6001 Reconditioning Kit for Mixing Valves
V-4324-611	Cage, 1 in.	V-3754-6002 Reconditioning Kit for Two-Way N.O. Valves, V-3974-6002 Reconditioning Kit for Two-Way N.C. Valves or V-4324-6002 Reconditioning Kit for Mixing Valves
V-4324-617	Cage, 1/2 in., 0.2 and 0.4 Cv	V-3754-600x Reconditioning Kit, for 2-Way N.O. Valves or V-3974-600x Reconditioning Kit for Two-Way N.C. Valves
V-4324-618	Stem, Plug, and Packing Kit	V-5844-6001 Reconditioning Kit
V-4324-619	Valve Less Body and Actuator	V-4324-6003 and V-3974-6008 Kits
V-4324-620	Valve Less Body and Actuator	V-4324-6004 and V-3974-6008 Kits
V-4324-621	Valve Less Body and Actuator	V-4324-6005 and V-3974-6008 Kits
V-4324-622	Valve Less Body and Actuator	V-4324-6003 and V-3754-6009 Kits
V-4324-623	Valve Less Body and Actuator	V-4324-6004 and V-3754-6009 Kits
V-4324-624	Valve Less Body and Actuator	V-4324-6005 and V-3754-6009 Kits
V-4324-625	Valve Less Body and Actuator	V-4324-6001 and V-3974-6008 Kits
V-4324-626	Valve Less Body and Actuator	V-4324-6001 and V-3754-6009 Kits
V-4324-627	Valve Less Body and Actuator	V-4324-6002 and V-3974-6009 Kits
V-4324-628	Valve Less Body and Actuator	V-4324-6002 and V-3754-6008 Kits
V-4324-629	Valve Less Body	V-5844-6001 and V-3974-6009 Kits
V-4324-630	Valve Less Body	V-5844-6001 and V-3754-6008 Kits
V-4324-631	Stem, Inner Valve	V-4324-6003 Reconditioning Kit
V-4324-632	Stem, Inner Valve	V-4324-6004 Reconditioning Kit
V-4324-633	Stem, Inner Valve	V-4324-6005 Reconditioning Kit
V-4324-634	Stem, Inner Valve	V-4324-6001 Reconditioning Kit
V-4324-635	Stem, Inner Valve	V-4324-6002 Reconditioning Kit
V-4324-636	O-Ring, 1-1/2 in., Cage	V-5844-6001 Reconditioning Kit
V-4324-637	O-Ring, 2 in., Cage	V-5844-6002 Reconditioning Kit
V-4324-638	O-Ring, 1-1/2 in., Lower	V-5844-6001 Reconditioning Kit
V-4324-639	O-Ring, 2 in., Lower	V-5844-6002 Reconditioning Kit
V-4324-640	Cage and O-Ring for 1-1/2 in. Valve	V-5844-6001 Reconditioning Kit
V-4324-641	Cage and O-Ring for 2 in. Valve	V-5844-6002 Reconditioning Kit
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
V-4332-610	Gasket	Replace Valve with V-4332
V-4332-612	Stem and Disk	Replace Valve with V-4332-1007 or V-4332-1004
V-4332-614	Stem and Disk	Replace Valve with V-4332-1009 or V-4332-1006
V-4332-617	Bottom Cap and O-Ring	Replace Valve with V-4332
V-4334-602	O-Ring	Replace Valve with V-4334-1001 or V-4334-1002
V-4334-603	Connector, Straight, 5/8 in.	Replace Valve with V-4334-1001 or V-4334-1002
V-4334-608	Bonnet for 3/4 in. Valve	Replace Valve with V-4334-1001 or V-4334-1002
V-4440-608	Connector, Straight, 1/2 in.	Replace Valve with V-4440
V-4440-617	Stem and Disk, 1/2 in., 1.4 Cv	V-4440-6003 Reconditioning Kit
V-4440-619	Stem and Disk, 1/2 in., 2.4 Cv	V-4440-6004 Reconditioning Kit
V-4440-621	Stem and Disk, 5/8 in., 4.1 and 4.7 Cv	Replace Valve with V-4440
V-4440-624	Spring, 6 to 9 psig	V-4440-6001 Spring Kit
V-4440-625	Spring, 4 to 12 psig	V-4440-6002 Spring Kit
V-4440-626	Stem and Disk, 1/2 in.	V-4440-6005 Reconditioning Kit
V-4440-627	Stem and Disk, 5/8 in.	Replace Valve with V-4440
V-4440-628	Bonnet for 1/2 in. and 5/8 in.	1/2 in.: V-4440-600x Reconditioning Kit 5/8 in.: Replace Valve with V-4440
V-4510-6019	Gland Nut, 4R and 5R	V-4510-6019 (Was Discontinued -- Now Active)
V-4510-6020	Gland Nut, 2-1/2 in. Through 8 in.	V-4510-6020 (Was Discontinued -- Now Active)
V-4510-6027	Disk Assembly, 2-1/2 in. (V-5250)	V-5252-6001 or -6002 Reconditioning Kits
V-4510-6028	Disk Assembly, 3 in. (V-5250)	V-5252-6003 or -6004 Reconditioning Kits
V-4510-6029	Disk Assembly, 4 in. (V-5250)	V-5252-6005 or -6006 Reconditioning Kits
V-4511-601	Seat Ring, 2-1/2 in., 5R	Replace Valve, Contact Warren Controls (908) 689-1400
V-4511-603	Seat Ring, 3 in., 5R, N.C. or Mixing Valve	Replace Valve, Contact Warren Controls (908) 689-1400
V-4520-621	Seat Ring, 1/2 in.	Replace Valve with VG7000 Series
V-4520-624	Disk Assembly for 1/2 in. Valve with 3/8 in. Seat	Replace Valve with VG7000 Series
V-4530-613	Disk for 1/2 in. and 3/4 in. Valves	Replace Valve with VG7243xT+xxxxxx
V-4530-614	Disk for 1 in. Valve	Replace Valve with VG7243NT+xxxxxx
V-4530-615	Disk for 1-1/4 in. Valve	Replace Valve with VG7x43PT+xxxxxx
V-4530-616	Disk for 1-1/2 in. Valve	Replace Valve with VG7x43RT+xxxxxx
V-4530-617	Disk for 2 in. Valve	Replace Valve with VG7x43ST+xxxxxx
V-4530-618	Seat Ring for 1/2 in. and 3/4 in. Valves	Replace Valve with VG7243xT+xxxxxx
V-4530-619	Seat Ring for 1 in. Valve	Replace Valve with VG7243NT+xxxxxx
V-4530-620	Seat Ring for 1-1/4 in. Valve	Replace Valve with VG7243PT+xxxxxx
V-4530-621	Seat Ring for 1-1/2 in. Valve	Replace Valve with VG7x43RT+xxxxxx
V-4530-622	Seat Ring for 2 in. Valve	Replace Valve with VG7243ST+xxxxxx
V-4710-601	Diaphragm for 3R, Qty 1	V-4710-601, Qty 2
V-4710-609	Disk for 2 in. Seat	V-4710-6009, Qty 1
V-4710-610	Disk for 2-1/2 in. Seat	V-4710-6010, Qty 1
V-4710-611	Disk for 3 in. Seat	V-4710-6011, Qty 1
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
V-4710-612	Disk for 3-1/2 in. Seat	Replace Valve
V-4710-613	Disk for 4 in. Seat	V-4710-6013, Qty 1
V-4710-614	Disk for 5 in. Seat	V-4710-6014, Qty 1
V-4710-615	Disk for 6 in. Seat	V-4710-6015, Qty 1
V-4710-616	Disk for 8 in. Seat	Replace Valve
V-4710-626	Gasket, 2-1/2 in.	Replace Valve
V-4710-627	Gasket, 3 in.	Replace Valve
V-4710-628	Gasket, 3-1/2 in.	Replace Valve
V-4710-629	Gasket, 4 in.	Replace Valve
V-4710-630	Gasket, 5 in.	Replace Valve
V-4710-631	Gasket, 6 in.	Replace Valve
V-4710-632	Gasket Kit, 8 in.	Replace Valve
V-4710-635	Seat Ring, 2-1/2 in.	Replace Valve
V-4710-636	Seat Ring, 3 in., 4R	Replace Valve
V-4710-647	Diaphragm Plate, 3R	Replace Valve and Actuator
V-4710-648	Diaphragm Plate, 4R	V-5252-62x Actuator and/or Valve (Non-Encapsulated)
V-4710-649	Diaphragm Plate, 5R	V-5252-62x Actuator and/or Valve (Non-Encapsulated)
V-4710-650	Diaphragm Plate, 8R	V-5252-62x Actuator and/or Valve (Non-Encapsulated)
V-4710-694	Disk Assembly, 2-1/2 in.	If Valve is V-5460 with Non-Encapsulated Spring, Replace Valve; If Valve is V-5462 with Encapsulated Spring, Use V-5462-60xx Reconditioning Kit
V-4710-695	Disk Assembly, 3 in.	If Valve is V-5460 with Non-Encapsulated Spring, Replace Valve; If Valve is V-5462 with Encapsulated Spring, Use V-5462-60xx Reconditioning Kit
V-4710-696	Disk Assembly, 4 in.	If Valve is V-5460 with Non-Encapsulated Spring, Replace Valve; If Valve is V-5462 with Encapsulated Spring, Use V-5462-60xx Reconditioning Kit
V-4720-611	Seat Ring	Replace Valve
V-4730-611	Disk, 1/2 in. Through 1 in.	Replace Valve with VG7443xT+xxxxxx
V-4730-619	Seat Ring for 1 in. Valve	Replace Valve
V-4730-620	Seat Ring for 1-1/4 in. Valve	Replace Valve
V-4730-621	Seat Ring for 1-1/2 in. Valve	Replace Valve
V-4730-622	Seat Ring for 2 in. Valve	Replace Valve
V-52-605	Lock Pin Kit	Replace Valve
V-52-615	Gasket Kit, 2-1/2 in.	Replace Valve, Contact Warren Controls (908) 689-1400
V-52-616	Gasket Kit, 3 in.	Replace Valve, Contact Warren Controls (908) 689-1400
V-52-617	Gasket Kit, 4 in.	Replace Valve, Contact Warren Controls (908) 689-1400
V-52-642	Seat Ring, 1 in.	Replace Valve with VG7x43NT+xxxxxx
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
V-52-643	Seat Ring, 1-1/4 in.	Replace Valve with VG7x43PT+xxxxxx
V-52-644	Seat Ring, 1-1/2 in.	Replace Valve with VG7x43RT+xxxxxx
V-52-645	Seat Ring, 2 in.	Replace Valve with VG7x43ST+xxxxxx
V-52-646	Seat Ring Kit	Replace Valve, Contact Warren Controls (908) 689-1400
V-52-647	Seat Ring Kit	Replace Valve, Contact Warren Controls (908) 689-1400
V-52-6470	Inner Valve for 3 in. Steam	Replace Valve, Contact Warren Controls (908) 689-1400
V-52-648	Seat Ring for 4 in. Valve	Replace Valve, Contact Warren Controls (908) 689-1400
V-52-680	Spring, 3 to 7 psig for V-3000, 1 in.	Replace Valve with VG7x43xT
V-520-640	Seat Ring, 1/2 in.	Replace Valve with VG7x43xT
V-520-6406	Inner Valve, 1/2 in., Cv 0.9, V-3000	Replace Valve with VG7x43xT
V-520-6407	Inner Valve and Stem	Replace Valve with VG7x43xT
V-520-6408	Inner Valve, 1/2 in., Cv 2.3, V-3000	Replace Valve with VG7x43xT
V-520-6409	Inner Valve and Stem	Replace Valve with VG7x43xT
V-520-641	Seat Ring, 3/4 in.	Replace Valve with VG7x43LT
V-520-6410	Inner Valve and Stem	Replace Valve with VG7243LT+3008B
V-520-6459	Inner Valve, 3/4 in., Cv 3.8, 4R	Replace Valve with VG7243GT+821C0x
V-520-6460	Inner Valve and Stem	Replace Valve with VG7243PT+822C0x
V-520-6461	Inner Valve and Stem	Replace Valve with VG7243LT+821C0x
V-520-6462	Inner Valve and Stem	Replace Valve with VG7243PT+822C0x
V-520-6463	Inner Valve, 1-1/4 in., Cv 12.0, 5R	Replace Valve with VG7243NT+822C0x
V-520-6464	Inner Valve and Stem	Replace Valve with VG7243RT+823C0x
V-520-6465	Inner Valve, 1-1/2 in., Cv 18.0, 5R	Replace Valve with VG7243RM+843C0x
V-520-6467	Inner Valve, 2 in., Cv 30.0, 5R	Replace Valve with VG7243SM+843C0x
V-5210-6421	Inner Valve and Stem, 2-1/2 in., Cv 74.0	Replace Valve, Contact Warren Controls (908) 689-1400
V-5210-6422	Inner Valve and Stem, 3 in., Cv 117.0	Replace Valve, Contact Warren Controls (908) 689-1400
V-5210-6423	Inner Valve and Stem, 4 in., Cv 187.0	Replace Valve, Contact Warren Controls (908) 689-1400
V-5216-6402	Inner Valve and Stem, 1/2 in., Cv 0.7, V-3000	Replace Valve with VG7243CT+3008Bx
V-5216-6403	Inner Valve and Stem, 1/2 in., Cv 1.2, V-3000	Replace Valve with VG7243ET+3008Bx
V-5216-6405	Inner Valve and Stem, 1/2 in., Cv 3.0, V-3000	Replace Valve with VG7243GT+3008Bx
V-5216-6406	Inner Valve and Stem, 1/2 in., Cv 4.7, V-3000	Replace Valve with VG7243GT+3008Bx
V-5216-6407	Inner Valve and Stem, 3/4 in., Cv 7.0, V-3000	Replace Valve with VG7243LT+3008Bx
V-5216-6411	Inner Valve and Stem, 1/2 in., Cv 3.0, 4R	Replace Valve with VG7243GT+821C0x
V-5216-6412	Inner Valve and Stem, 1/2 in., Cv 4.7, 4R	Replace Valve with VG7243GT+821C0x
V-5216-6413	Inner Valve and Stem, 3/4 in., Cv 7.0, 4R	Replace Valve with VG7243LT+821C0x
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
V-5216-6414	Inner Valve and Stem, 1 in., Cv 12.0, 4R	Replace Valve with VG7243NT+822C0x
V-5216-6415	Inner Valve and Stem, 1-1/4 in., Cv 19.0, 4R	Replace Valve with VG7243PT+822C0x
V-5216-6416	Inner Valve and Stem, 1-1/2 in., Cv 29.0, 4R	Replace Valve with VG7243RT+823C0x
V-5216-6418	Inner Valve and Stem, 1-1/4 in., Cv 19.0, 5R	Replace Valve with VG7243RM+843C0x
V-5216-6419	Inner Valve and Stem, 1-1/2 in., Cv 29.0, 5R	Replace Valve with VG7243RM+843C0x
V-5216-6420	Inner Valve and Stem, 2 in., Cv 47.0, 5R	Replace Valve with VG7243SM+843C0x
V-5216-6806	Seat Ring, 1/2 in., Cv 0.7	Replace Valve with VG7243CT+3008Bx
V-5216-6820	Gasket Kit (2) for 1/2 in. and 3/4 in.	Replace Valve with VG7x43xT
V-5216-6821	Gasket Kit (2) for 1 in.	Replace Valve with VG7x43NT+822C0x
V-5216-6822	Gasket Kit (2) for 1-1/4 in.	Replace Valve with VG7x43PT+822C0x
V-5216-6823	Gasket Kit (2) for 1-1/2 in.	Replace Valve with VG7x43Rx+8x3C0x
V-5216-6824	Gasket Kit (2) for 2 in.	Replace Valve with VG7x43Sx+8x3C0x
V-5216-6825	Gasket Kit	Replace Valve with VG7000 Series
V-5216-6826	Gasket Kit	Replace Valve with VG7000 Series
V-5216-6827	Gasket Kit	Replace Valve with VG7000 Series
V-5216-6828	Gasket Kit	Replace Valve with VG7000 Series
V-5216-6829	Gasket Kit	Replace Valve with VG7000 Series
V-5250-612	Centerpiece, 2-1/2 in., 4R and 5R	V-5xx2-60xx Reconditioning Kit
V-5250-613	Centerpiece, 3 in., 4R and 5R	V-5xx2-60xx Reconditioning Kit
V-5250-614	Packing Box, 2-1/2 Through 3 in., 5R	V-5252-60xx Reconditioning Kit
V-5250-615	Stuffing Box	Replace Valve
V-5250-625	2-1/2 in. Teflon Disk	Replace Valve
V-5250-626	3 in. Teflon Disk	Replace Valve
V-5250-627	4 in. Teflon Disk	Replace Valve
V-5250-628	5 in. Teflon Disk	Replace Valve
V-5250-629	6 in. Teflon Disk	Replace Valve
V-5250-630	Seat Ring, 4 in.	Replace Valve
V-5250-631	Seat Ring, 5 in.	Replace Valve
V-5250-632	Seat Ring	Replace Valve
V-5250-633	Packing Box, 4 Through 6 in., 8R	V-5252-60xx Reconditioning Kit
V-5250-634	Guide Rod, 2-1/2 in.	V-5252-6001 or V-5252-6002 Reconditioning Kit
V-5250-635	Guide Rod, 3 in.	V-5252-6003 or V-5252-6004 Reconditioning Kit
V-5250-636	Guide Rod, 4 in.	V-5252-6005 or V-5252-6006 Reconditioning Kit
V-5250-637	Guide Rod, 5 in.	V-5252-6007
V-5250-638	Guide Rod, 6 in.	V-5252-6008
V-5250-639	Centerpiece and Packing Box	V-5462-6003
V-5250-640	Centerpiece and Packing Box	V-5462-6004 or V-5252-6005 Reconditioning Kit
V-5250-641	Centerpiece and Packing Box	V-5462-6005 or V-5252-6006 Reconditioning Kit
V-5250-642	Centerpiece and Packing Box	V-5462-6006 or V-5252-6007 Reconditioning Kit
V-5250-643	Centerpiece and Packing Box	V-5462-6007 or V-5252-6008 Reconditioning Kit
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
V-5250-645	Centerpiece and Packing Box	V-5xx2-60xx Reconditioning Kit
V-5252-610	Stem and Swivel, 2-1/2 in., N.O., 4R	V-5252-6002 Reconditioning Kit
V-5252-611	Stem and Swivel, 2-1/2 in., N.O., 5R	V-5252-6001 Reconditioning Kit
V-5252-612	Stem and Swivel, 3 in., N.O., 4R	V-5252-6004 Reconditioning Kit
V-5252-613	Stem and Swivel, 3 in., N.O., 5R	V-5252-6003 Reconditioning Kit
V-5252-614	Stem and Swivel, 4 in., N.O., 5R	V-5252-6005 Reconditioning Kit
V-5252-615	Stem and Swivel, 4 in., N.O., 8R	V-5252-6006 Reconditioning Kit
V-5252-616	Stem and Swivel, 5 in., N.O., 8R	V-5252-6007 Reconditioning Kit
V-5252-617	Stem and Swivel, 6 in., N.O., 8R	V-5252-6008 Reconditioning Kit
V-5252-631	Lower Diaphragm Case, 4R	Replace with V-5252-62x Actuator and/or Valve (Non-Encapsulated)
V-5252-632	Lower Diaphragm Case, 5R	Replace with V-5252-62x Actuator and/or Valve (Non-Encapsulated)
V-5252-633	Lower Diaphragm Kit, 8R	Replace with V-5252-62x Actuator and/or Valve (Non-Encapsulated)
V-5252-634	Upper Diaphragm Case, 4R	Replace with V-5252-62x Actuator and/or Valve (Non-Encapsulated)
V-5252-635	Upper Diaphragm Case, 5R	Replace with V-5252-62x Actuator and/or Valve (Non-Encapsulated)
V-5252-636	Upper Valve Case, 8R	Replace with V-5252-62x Actuator and/or Valve (Non-Encapsulated)
V-5252-637	Valve Less Body, 2 in., N.O., 4R, 2 to 5 psig	V-5252-6009 and V-5252-621 or -622 Kits
V-5252-638	Valve Less Body, 2-1/2 in., N.O., 5R	V-5252-6001 and V-5252-623 or -625 Kits
V-5252-639	Valve Less Body, 3 in., N.O., 5R, 2 to 5 psig	V-5252-6003 and V-5252-623 or -625 Kits
V-5252-640	Valve Less Body, 4 in., N.O., 8R, 2 to 5 psig	V-5252-6006 Reconditioning Kit
V-5252-641	Stem and Swivel, 2 in., N.O., 4R	V-5252-6009 Reconditioning Kit
V-5252-642	V-112 Less Body with 4R Top	Replace Valve with V-5252-4
V-5252-643	V-112 Less Body with 4R Top	Replace Valve with V-5252-9
V-5252-644	V-112 Less Body with 5R Top	Replace Valve with V-5252-14
V-5252-645	V-112 Less Body with 5R Top	Replace Valve with V-5252-17
V-5252-646	V-113 Less Body with 4R Top	Replace Valve with V-5252-4
V-5252-647	V-113 Less Body with 4R Top	Replace Valve with V-5252-4
V-5252-648	V-113 Less Body with 4R Top	Replace Valve with V-5252-9
V-5252-649	V-113 Less Body with 4R Top	Replace Valve with V-5252-14
V-5252-650	V-112 Less Body with 4R Top	Replace Valve with V-5252-4
V-5252-660	Gasket Kit for 2-1/2 in. Valve	V-9999-6050 (Enough Materials for 12 Valves)
V-5252-661	Gasket Kit for 3 in. Valve	V-9999-6051 (Enough Materials for 12 Valves)
V-5252-662	Gasket Kit for 4 in.	V-9999-6052 (Enough Materials for 6 Valves)
V-5252-663	Gasket Kit for 5 in.	V-9999-6053 (Enough Materials for 3 Valves)
V-5252-664	Gasket Kit for 6 in.	V-9999-6054 (Enough Materials for 3 Valves)
V-5252-666	Disk Holder Assembly	V-5252-6007 Reconditioning Kit
V-5252-667	Disk Holder Assembly	V-5252-6008 Reconditioning Kit
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
V-5254-600	Stem, Plug, and Packing Kit	V-5254-6001 Reconditioning Kit
V-5254-601	Stem, Plug, and Packing Kit	V-5254-6002 Reconditioning Kit
V-5254-602	Valve Less Body with Bonnet	V-5254-6001 Reconditioning Kit
V-5254-603	Valve Less Body with Bonnet	V-5254-6002 Reconditioning Kit
V-5290-6800	Seat Ring, 3/4 in., Cv 7.0	Replace Valve with VG7x43LT+xxxxxx
V-5290-6801	Seat Ring, 1 in., Cv 12.0	Replace Valve with VG7x43NT+xxxxxx
V-5290-6802	Seat Ring, 1-1/4 in., Cv 19.0	Replace Valve with VG7x43PT+xxxxxx
V-5290-6803	Seat Ring, 1-1/2 in., Cv 29.0	Replace Valve with VG7x43Rx+xxxxxx
V-5290-6804	Seat Ring, 2 in., Cv 47.0	Replace Valve with VG7x43Sx+xxxxxx
V-5290-6805	Seat Ring, 2-1/2 in., Cv 74.0	Replace Valve, Contact Warren Controls (908) 689-1400
V-5290-6806	Seat Ring, 3 in., Cv 117.0	Replace Valve, Contact Warren Controls (908) 689-1400
V-5290-6807	Seat Ring, 4 in., Cv 187.0	Replace Valve, Contact Warren Controls (908) 689-1400
V-5290-6810	Seat Ring, 1/2 in., Cv 1.2 to 4.7	Replace with VG7x43xT+xxxxxx
V-5290-6825	Gasket Kit (2) for 2 1/2 in.	Replace Valve, Contact Warren Controls (908) 689-1400
V-5290-6826	Gasket Kit (2) for 3 in.	Replace Valve, Contact Warren Controls (908) 689-1400
V-5290-6827	Gasket Kit (2) for 4 in.	Replace Valve, Contact Warren Controls (908) 689-1400
V-54-6468	Inner Valve Assembly	Replace Valve, Contact Warren or Fisher for Replacement
V-54-6470	Inner Valve, 3 in., Steam	Replace Valve, Contact Warren or Fisher for Replacement
V-54-6471	Inner Valve, 4 in., Steam	Replace Valve, Contact Warren or Fisher for Replacement
V-540-6406	Inner Valve, 1/2 in., V-3000, Cv 0.9	Replace Valve with VG7443CT+3008Ex
V-540-6407	Inner Valve, 1/2 in., V-3000, Cv 1.5	Replace Valve with VG7443ET+3008Ex
V-540-6408	Inner Valve, 1/2 in., V-3000, Cv 2.3	Replace Valve with VG7443ET+3008Ex
V-540-6409	Inner Valve, 3/4 in., V-3000, Cv 3.8	Replace Valve with VG7443LT+3008Ex
V-540-6410	Inner Valve, 1 in., V-3000, Cv 7.0	Replace Valve with VG7443NT+3008Ex
V-540-6460	Inner Valve, 1-1/4 in., 4R, Cv 12.0	Replace Valve with VG7443PT+822E0x
V-540-6461	Inner Valve, 1 in., 4R, Cv 7.0	Replace Valve with VG7443LT+822E0x
V-540-6462	Inner Valve, 1-1/2 in., 4R, Cv 18.0	Replace Valve with VG7443PT+823E0x
V-540-6463	Inner Valve, 1-1/4 in., 5R, Cv 12.0	Replace Valve with VG7443PT+822E0x
V-540-6464	Inner Valve, 2 in., 4R, Cv 30.0	Replace Valve with VG7443ST+823E0x
V-540-6465	Inner Valve, 1-1/2 in., 5R, Cv 18.0	Replace Valve with VG7443RM+843E0x
V-540-6467	Inner Valve, 2 in., 5R, Cv 30.0	Replace Valve with VG7443SM+843E0x
V-5410-6421	Inner Valve and Stem, 2-1/2 in., Cv 74.0	Replace Valve, Contact Warren or Fisher for Replacement
V-5410-6422	Inner Valve and Stem, 3 in., Cv 117.0	Replace Valve, Contact Warren or Fisher for Replacement
V-5410-6423	Inner Valve and Stem, 4 in., Cv 187.0	Replace Valve, Contact Warren or Fisher for Replacement
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
V-5416-6402	Inner Valve and Stem, 1/2 in., V-3000, Cv 0.7	Replace Valve with VG7443CT+3008Ex
V-5416-6403	Inner Valve and Stem, 1/2 in., V-3000, Cv 1.2	Replace Valve with VG7443ET+3008Ex
V-5416-6405	Inner Valve and Stem, 1/2 in., V-3000, Cv 3.0	Replace Valve with VG7443GT+3008Ex
V-5416-6406	Inner Valve and Stem, 1/2 in., V-3000, Cv 4.7	Replace Valve with VG7443GT+3008Ex
V-5416-6407	Inner Valve and Stem, 3/4 in., V-3000, Cv 7.0	Replace Valve with VG7443LT+3008Ex
V-5416-6410	Inner Valve and Stem, 1/2 in., 4R, Cv 2.0	Replace Valve with VG7443ET+821E0x
V-5416-6412	Inner Valve and Stem, 1/2 in., 4R, Cv 4.7	Replace Valve with VG7443GT+821E0x
V-5416-6413	Inner Valve and Stem, 3/4 in., 4R, Cv 7.0	Replace Valve with VG7443LT+821E0x
V-5416-6414	Inner Valve and Stem, 1 in., 4R, Cv 12.0	Replace Valve with VG7443NT+822E0x
V-5416-6415	Inner Valve and Stem, 1-1/4 in., 4R, Cv 19.0	Replace Valve with VG7443PT+822E0x
V-5416-6416	Inner Valve and Stem, 1-1/2 in., 4R, Cv 29.0	Replace Valve with VG7443RT+823E0x
V-5416-6418	Inner Valve and Stem, 1-1/4 in., 5R, Cv 19.0	Replace Valve with VG7443RM+843E0x
V-5416-6419	Inner Valve and Stem, 1-1/2 in., 5R, Cv 29.0	Replace Valve with VG7443RM+843E0x
V-5416-6420	Inner Valve and Stem, 2 in., 5R, Cv 47.0	Replace Valve with VG7443SM+843E0x
V-5460-656	Seat Ring, 4 in.	Replace Valve with V-5462-11 or V-5462-12
V-5460-657	Seat Ring, 4 in.	Replace Valve with V-5462-13 or V-5462-14
V-5460-658	Seat Ring, 5 in.	Replace Valve with V-5462-15 or V-5462-16
V-5460-659	Seat Ring, 6 in.	Replace Valve with V-5462-17 or V-5462-18
V-5462-606	Stem and Swivel, 2-1/2 in., N.C., 5R	V-5462-6001 Reconditioning Kit
V-5462-607	Stem and Swivel, 3 in., N.C., 5R	V-5462-6002 Reconditioning Kit
V-5462-608	Stem and Swivel, 3 in., N.C., 8R	V-5462-6003 Reconditioning Kit
V-5462-609	Stem and Swivel, 4 in., N.C., 5R	V-5462-6004 Reconditioning Kit
V-5462-610	Stem and Swivel, 4 in., N.C., 8R	V-5462-6005 Reconditioning Kit
V-5462-611	Stem and Swivel, 5 in., N.C., 8R	V-5462-6006 Reconditioning Kit
V-5462-612	Stem and Swivel, 6 in., N.C., 8R	V-5462-6007 Reconditioning Kit
V-5462-613	Stem and Swivel, 1-1/4 in., N.C., 4R	V-5462-6008 Reconditioning Kit
V-5462-614	Stem and Swivel, 1-1/2 in., N.C., 4R	V-5462-6009 Reconditioning Kit
V-5462-615	Stem and Swivel, 2 in., N.C., 4R	V-5462-6010 Reconditioning Kit
V-5462-616	Valve Less Body, 2 in., N.C., 4R, 9 to 13 psig	V-5462-6010 Reconditioning Kit
V-5462-617	Seat Ring, 3 in.	Replace Valve with V-5462-10
V-5462-618	Nut, 1/4 in. - 28	Purchase Locally
V-5462-619	Nut, 3/8 in. - 24	Purchase Locally
V-5462-620	Nut, 1/2 in. - 20	Purchase Locally
V-5462-621	Disk Holder Assembly	V-5462-6005 Reconditioning Kit
V-5462-622	Disk Holder Assembly	V-5462-6003 Reconditioning Kit
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
V-5462-623	Disk Holder Assembly	V-5462-6006 Reconditioning Kit
V-5462-624	Disk Holder Assembly	V-5462-6007 Reconditioning Kit
V-5462-625	Bottom Cap and Guide	Replace Valve with V-5462-6 or V-5462-7
V-5462-626	Bottom Cap and Guide	Replace Valve with V-5462-8 or V-5462-9
V-5462-627	Bottom Cap and Guide	Replace Valve with V-5462-10
V-5462-628	Bottom Cap and Guide	Replace Valve with V-5462-11, -12, -13, or -14
V-5462-629	Bottom Cap and Guide	Replace Valve with V-5462-15 or V-5462-16
V-5462-630	Bottom Cap and Guide	Replace Valve with V-5462-17 or V-5462-18
V-5464-600	Stem, Plug, and Packing Kit	V-5464-6001 Reconditioning Kit
V-5464-601	Stem, Plug, and Packing Kit	V-5464-6002 Reconditioning Kit
V-5464-602	Valve Less Body with Bonnet	V-5464-6001 Reconditioning Kit
V-5464-603	Valve Less Body with Bonnet	V-5464-6002 Reconditioning Kit
V-5650-609	Upper Seat Ring	Replace Valve, Contact Keystone (303) 343-0425
V-5650-610	Upper Seat Ring	Replace Valve, Contact Keystone (303) 343-0425
V-5650-614	Lower Seat Ring	Replace Valve, Contact Keystone (303) 343-0425
V-5650-615	Lower Seat Ring	Replace Valve, Contact Keystone (303) 343-0425
V-5650-622	Lower Stem Assembly	Replace Valve, Contact Keystone (303) 343-0425
V-5650-625	Lower Stem Assembly	Replace Valve, Contact Keystone (303) 343-0425
V-5650-628	Lower Stem Assembly	Replace Valve, Contact Keystone (303) 343-0425
V-5650-631	Lower Stem Assembly	Replace Valve, Contact Keystone (303) 343-0425
V-5650-634	Lower Stem Assembly	Replace Valve, Contact Keystone (303) 343-0425
V-5650-635	Upper Disk Assembly	Replace Valve, Contact Keystone (303) 343-0425
V-5650-636	Lower Disk Assembly	Replace Valve, Contact Keystone (303) 343-0425
V-5650-637	Upper Disk Assembly	Replace Valve, Contact Keystone (303) 343-0425
V-5650-638	Lower Disk Assembly	Replace Valve, Contact Keystone (303) 343-0425
V-5650-639	Upper Disk Assembly	Replace Valve, Contact Keystone (303) 343-0425
V-5650-640	Lower Disk Assembly	Replace Valve, Contact Keystone (303) 343-0425
V-5650-641	Upper Disk Assembly	Replace Valve, Contact Keystone (303) 343-0425
V-5650-642	Lower Disk Assembly	Replace Valve, Contact Keystone (303) 343-0425
V-5650-643	Upper Disk Assembly	Replace Valve, Contact Keystone (303) 343-0425
V-5650-644	Lower Disk Assembly	Replace Valve, Contact Keystone (303) 343-0425
V-5650-645	Centerpiece Kit	Replace Valve, Contact Keystone (303) 343-0425
V-5650-646	Centerpiece Kit	Replace Valve, Contact Keystone (303) 343-0425
V-5650-647	Centerpiece Kit	Replace Valve, Contact Keystone (303) 343-0425
V-5650-648	Centerpiece Kit	Replace Valve, Contact Keystone (303) 343-0425
V-5650-649	Centerpiece Kit	Replace Valve, Contact Keystone (303) 343-0425
V-5650-653	Lower Seat Ring	Replace Valve, Contact Keystone (303) 343-0425
V-5650-654	Upper Seat Ring	Replace Valve, Contact Keystone (303) 343-0425
V-5650-655	Lower Seat Ring	Replace Valve, Contact Keystone (303) 343-0425
V-5650-656	Upper Seat Ring	Replace Valve, Contact Keystone (303) 343-0425
V-5650-657	Lower Seat Ring	Replace Valve, Contact Keystone (303) 343-0425
V-5650-658	Upper Seat Ring	Replace Valve, Contact Keystone (303) 343-0425
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
V-5652-600	Upper Stem Assembly	Replace Valve, Contact Keystone (303) 343-0425
V-5652-601	Upper Stem Assembly	Replace Valve, Contact Keystone (303) 343-0425
V-5652-602	Upper Stem Assembly	Replace Valve, Contact Keystone (303) 343-0425
V-5652-603	Upper Stem Assembly	Replace Valve, Contact Keystone (303) 343-0425
V-5652-604	Upper Stem Assembly	Replace Valve, Contact Keystone (303) 343-0425
V-5652-605	Upper Stem Assembly	Replace Valve, Contact Keystone (303) 343-0425
V-5652-606	Upper/Lower Disk Assembly and Lower Stem Kit	Replace Valve, Contact Keystone (303) 343-0425
V-5652-607	Upper/Lower Disk Assembly and Lower Stem Kit	Replace Valve, Contact Keystone (303) 343-0425
V-5652-608	Upper/Lower Disk Assembly and Lower Stem Kit	Replace Valve, Contact Keystone (303) 343-0425
V-5652-609	Upper/Lower Disk Assembly and Lower Stem Kit	Replace Valve, Contact Keystone (303) 343-0425
V-5652-610	Upper/Lower Disk Assembly and Lower Stem Kit	Replace Valve, Contact Keystone (303) 343-0425
V-5652-611	Gasket Kit for 4 in.	Replace Valve, Contact Keystone (303) 343-0425
V-5652-612	Gasket Kit for 5 in.	Replace Valve, Contact Keystone (303) 343-0425
V-5652-613	Gasket Kit for 6 in.	Replace Valve, Contact Keystone (303) 343-0425
V-5652-614	Gasket Kit	Replace Valve, Contact Keystone (303) 343-0425
V-5820-601	Seat Ring, 3 in.	Replace Valve
V-5820-615	Gasket, 2-1/2 in.	Replace Valve
V-5820-616	Gasket, 3 in.	Replace Valve
V-5820-617	Gasket	Replace Valve
V-5840-615	Plug, Upper, 2-1/2 in.	V-5842-6001 Reconditioning Kit
V-5840-616	Plug, Upper, 3 in.	V-5842-6002 or V-5842-6003 Reconditioning Kit
V-5840-617	Plug, Upper, 4 in.	V-5842-6004 or V-5842-6005 Reconditioning Kit
V-5840-618	Plug, Upper, 5 in.	V-5842-6006 Reconditioning Kit
V-5840-619	Plug, Upper, 6 in.	V-5842-6007 Reconditioning Kit
V-5840-620	Upper Modulating Plug, 8 in.	Replace Valve with VF Series Butterfly Valve
V-5840-621	Plug, Lower, 2-1/2 in.	V-5842-6001 Reconditioning Kit
V-5840-622	Plug, Lower, 3 in.	V-5842-6002 or V-5842-6003 Reconditioning Kit
V-5840-623	Plug, Lower, 4 in.	V-5842-6004 or V-5842-6005 Reconditioning Kit
V-5840-624	Plug, Lower, 5 in.	V-5842-6006 Reconditioning Kit
V-5840-625	Plug, Lower, 6 in.	V-5842-6007 Reconditioning Kit
V-5840-626	Lower Modulating Plug, 8 in.	Replace Valve with VF Series Butterfly Valve
V-5842-601	Stem and Swivel, 2-1/2 in., Mixing, 5R	V-5842-6001 Reconditioning Kit
V-5842-602	Stem and Swivel, 3 in., Mixing, 5R	V-5842-6002 Reconditioning Kit
V-5842-603	Stem and Swivel, 4 in., Mixing, 8R	V-5842-6005 Reconditioning Kit
V-5842-604	Stem and Swivel, 5 in., Mixing, 8R	V-5842-6006 Reconditioning Kit
V-5842-605	Stem and Swivel, 6 in., Mixing, 8R	V-5842-6007 Reconditioning Kit
V-5842-606	Stem and Swivel, 3 in., Mixing, 8R	V-5842-6003 Reconditioning Kit
V-5842-608	Stem and Plug, 1-1/2 in., Mixing, 4R	Replace Valve with VG7842RT+823x0x
V-5842-609	Stem and Plug, 2 in., Mixing, 4R	Replace Valve with VG7842ST+823x0x
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
V-5842-610	Gasket Kit for 2-1/2 in.	V-5842-6001 Reconditioning Kit
V-5842-611	Gasket Kit for 3 in.	V-5842-6002 or V-5842-6003 Reconditioning Kit
V-5842-612	Gasket Kit for 4 in.	V-5842-6004 or V-5842-6005 Reconditioning Kit
V-5842-613	Gasket Kit for 5 in.	V-5842-6006 Reconditioning Kit
V-5842-614	Gasket for 6 in.	V-5842-6007 Reconditioning Kit
V-5844-600	Valve Less Body with Bonnet	V-5844-6001 Reconditioning Kit
V-5844-601	Valve Less Body with Bonnet	V-5844-6002 Reconditioning Kit
V-7216-6402	Inner Valve and Stem Assembly	Replace Valve with VG7243CT+3008xx
V-7216-6403	Inner Valve and Stem Assembly	Replace Valve with VG7243ET+3008xx
V-7216-6405	Inner Valve and Stem Assembly	Replace Valve with VG7243GT+3008xx or VG7243GT+821x0x
V-7216-6406	Inner Valve and Stem Assembly	Replace Valve with VG7243GT+3008xx or VG7243GT+821x0x
V-7216-6407	Inner Valve and Stem Assembly	Replace Valve with VG7243LT+3008xx
V-7216-6408	Inner Valve and Stem Assembly	Replace Valve with VG7243NT+822x0x
V-7216-6409	Inner Valve and Stem Assembly	Replace Valve with VG7243PT+822x0x
V-7216-6410	Inner Valve and Stem Assembly	Replace Valve with VG7243RT+823x0x or VG7243RM+843x0x
V-7216-6411	Inner Valve and Stem Assembly	Replace Valve with VG7243SM+843x0x
V-7416-6402	Inner Valve and Stem Assembly	Replace Valve with VG7443CT+3008xx
V-7416-6403	Inner Valve and Stem Assembly	Replace Valve with VG7443ET+3008xx
V-7416-6405	Inner Valve and Stem Assembly	Replace Valve with VG7443GT+3008xx or VG7443GT+821x0x
V-7416-6406	Inner Valve and Stem Assembly	Replace Valve with VG7443GT+3008xx or VG7443GT+821x0x
V-7416-6407	Inner Valve and Stem Assembly	Replace Valve with VG7443LT+3008xx
V-7416-6408	Inner Valve and Stem Assembly	Replace Valve with VG7443NT+822x0x
V-7416-6409	Inner Valve and Stem Assembly	Replace Valve with VG7443PT+822x0x
V-7416-6410	Inner Valve and Stem Assembly	Replace Valve with VG7443RT+823x0x or VG7443RM+843x0x
V-7416-6411	Inner Valve and Stem Assembly	Replace Valve with VG7443SM+843x0x
V-9092-604	Seal/Bearing Kit for V-9x92 Series Actuators	Replace Actuator or Contact Bray (713) 894-7979, Ext. 524
V-9092-614	Seal/Bearing Kit for V-9x92 Series Actuators	Replace Actuator or Contact Bray (713) 894-7979, Ext. 524
V-9093-604	Seal/Bearing Kit for V-9x93 Series Actuators	Replace Actuator or Contact Bray (713) 894-7979, Ext. 524
V-9093-614	Seal/Bearing Kit for V-9x93 Series Actuators	Replace Actuator or Contact Bray (713) 894-7979, Ext. 524
V-9094-604	Seal/Bearing Kit for V-9x94 Series Actuators	Replace Actuator or Contact Bray (713) 894-7979, Ext. 524
V-9094-6141	Seal/Bearing Kit for V-9x94-1x Series Actuators	Replace Actuator or Contact Bray (713) 894-7979, Ext. 524
V-9094-6142	Seal/Bearing Kit for V-9x94-2x Series Actuators	Replace Actuator or Contact Bray (713) 894-7979, Ext. 524
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
V-9095-604	Seal/Bearing Kit for V-9x95 Series Actuators	Replace Actuator or Contact Bray (713) 894-7979, Ext. 524
V-9095-614	Seal/Bearing Kit for V-9x95 Series Actuators	Replace Actuator or Contact Bray (713) 894-7979, Ext. 524
V-9096-604	Seal/Bearing Kit for V-9x96 Series Actuators	Replace Actuator or Contact Bray (713) 894-7979, Ext. 524
V-9096-614	Seal/Bearing Kit for V-9x96 Series Actuators	Replace Actuator or Contact Bray (713) 894-7979, Ext. 524
V-9097-604	Seal/Bearing Kit for V-9x97 Series Actuators	Replace Actuator or Contact Bray (713) 894-7979, Ext. 524
V-9097-614	Seal/Bearing Kit for V-9x97 Series Actuators	Replace Actuator or Contact Bray (713) 894-7979, Ext. 524
V-9098-614	Seal/Bearing Kit for V-9x98 Series Actuators	Replace Actuator or Contact Bray (713) 894-7979, Ext. 524
V-9192-602	Cartridge, Spring Return	Replace Actuator or Contact Bray (713) 894-7979, Ext. 524
V-9193-602	Cartridge, Spring Return	Replace Actuator or Contact Bray (713) 894-7979, Ext. 524
V-9194-602	Cartridge, Spring Return	Replace Actuator or Contact Bray (713) 894-7979, Ext. 524
V-9194-612	Cartridge, Spring Return	Replace Actuator or Contact Bray (713) 894-7979, Ext. 524
V-9194-622	Cartridge, Spring Return	Replace Actuator or Contact Bray (713) 894-7979, Ext. 524
V-9195-602	Cartridge, Spring Return	Replace Actuator or Contact Bray (713) 894-7979, Ext. 524
V-9195-612	Cartridge, Spring Return	Replace Actuator or Contact Bray (713) 894-7979, Ext. 524
V-9196-602	Cartridge, Spring Return	Replace Actuator or Contact Bray (713) 894-7979, Ext. 524
V-9197-602	Cartridge, Spring Return	Replace Actuator or Contact Bray (713) 894-7979, Ext. 524
V-9197-612	Cartridge, Spring Return	Replace Actuator or Contact Bray (713) 894-7979, Ext. 524
V-9198-612	Cartridge, Spring Return	Replace Actuator or Contact Bray (713) 894-7979, Ext.524
V-9502-600	Positioner Diaphragm Assembly, Qty 1	V-9502-600, Qty 6
V-9999-612	Spring Plate, Upper/Lower	Select New Spring Kit
V-9999-631	Spacer	Select New Spring Kit
V-9999-636	Motor, 24 Volt, Two-Position, Spring Return, Class A	Contact Erie (800) 558-3916
V-9999-637	Motor, 120 Volt, Two-Position, Spring Return, Class A	Contact Erie (800) 558-3916
V-9999-638	Motor, 24 Volt, Reversible, Class A	Contact Erie (800) 558-3916
V-9999-639	Motor, 120 Volt, Reversible, Class A	Contact Erie (800) 558-3916
V-9999-640	Motor, 24 Volt, Two-Position, Spring Return, Class F	Contact Erie (800) 558-3916
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
V-9999-641	Motor, 120 Volt, Two-Position, Spring Return, Class F	Contact Erie (800) 558-3916
V-9999-642	Motor, 24 Volt, Reversible, Class F	Contact Erie (800) 558-3916
V-9999-643	Motor, 120 Volt, Reversible, Class F	Contact Erie (800) 558-3916
V-9999-645	Spring, 3 to 6 psig for VT Series	V-9999-6001 Spring Kit
V-9999-646	Spring, 4 to 8 psig for VT Series	V-9999-6002 Spring Kit
V-9999-647	Spring, 9 to 13 psig for VT Series	V-9999-6003 Spring Kit
V-9999-648	Upper Spring Seat for VT Series	Select New Spring Kit
V11HAA-600	Solenoid Coil Replacement	V11HAA-100
V11HBA-600	Solenoid Coil Replacement	V11HBA-100
V11HCA-600	Solenoid Coil Replacement	V11HCA-100
V11HDA-600	Solenoid Coil Replacement	V11HDA-100
V11HEA-600	Solenoid Coil Replacement	No Replacement
V11HFA-600	Solenoid Coil Replacement	V11HFA-100
V11HGA-600	Solenoid Coil Replacement	V11HGA-100
V11PNA-600	Solenoid Coil Replacement	V11PNA-105
VF-020-601	Seat for 2 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-025-601	Seat for 2-1/2 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-030-601	Seat for 3 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-040-601	Seat for 4 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-050-601	Seat for 5 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-060-601	Seat for 6 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-080-601	Seat for 8 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-100-601	Seat for 10 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-120-601	Seat for 12 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-140-601	Seat for 14 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-160-601	Seat for 16 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-180-601	Seat for 18 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-200-601	Seat for 20 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-A020-603	Stem, Phosphatized Carbon Steel for 2 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-A025-603	Stem, Phosphatized Carbon Steel for 2-1/2 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
VF-A030-603	Stem, Phosphatized Carbon Steel for 3 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-A040-603	Stem, Phosphatized Carbon Steel for 4 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-A050-603	Stem, Phosphatized Carbon Steel for 5 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-A060-603	Stem, Phosphatized Carbon Steel for 6 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-A080-603	Stem, Phosphatized Carbon Steel for 8 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-A100-603	Stem, Phosphatized Carbon Steel for 10 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-A120-603	Stem, Phosphatized Carbon Steel for 12 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-A140-603	Stem, Phosphatized Carbon Steel for 14 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-A160-603	Stem, Phosphatized Carbon Steel for 16 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-A180-603	Stem, Phosphatized Carbon Steel for 18 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-A200-603	Stem, Phosphatized Carbon Steel for 20 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-B020-603	Stem, 416 Stainless Steel for 2 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-B025-603	Stem, 416 Stainless Steel for 2-1/2 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-B030-603	Stem, 416 Stainless Steel for 3 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-B040-603	Stem, 416 Stainless Steel for 4 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-B050-603	Stem, 416 Stainless Steel for 5 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-B060-603	Stem, 416 Stainless Steel for 6 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-B080-603	Stem, 416 Stainless Steel for 8 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-B100-603	Stem, 416 Stainless Steel for 10 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-B120-603	Stem, 416 Stainless Steel for 2 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-C100-603	Stem, 304 Stainless Steel for 10 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-C120-603	Stem, 304 Stainless Steel for 12 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-C140-603	Stem, 304 Stainless Steel for 14 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-C160-603	Stem, 304 Stainless Steel for 16 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
VF-C180-603	Stem, 304 Stainless Steel for 18 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-C200-603	Stem, 304 Stainless Steel for 18 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-D020-603	Stem, 316 Stainless Steel for 2 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-D025-603	Stem, 316 Stainless Steel for 2-1/2 in.	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-D030-603	Stem, 316 Stainless Steel for 3 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-D040-603	Stem, 316 Stainless Steel for 4 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-D050-603	Stem, 316 Stainless Steel for 5 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-D060-603	Stem, 316 Stainless Steel for 6 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-D080-603	Stem, 316 Stainless Steel for 8 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-D100-603	Stem, 316 Stainless Steel for 10 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-D120-603	Stem, 316 Stainless Steel for 12 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-D140-603	Stem, 316 Stainless Steel for 14 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-D160-603	Stem, 316 Stainless Steel for 16 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-D180-603	Stem, 316 Stainless Steel for 18 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-D200-603	Stem, 316 Stainless Steel for 20 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-H020-602	Disk, H, for 2 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-H025-602	Disk, H, for 2-1/2 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-H030-602	Disk, H, for 3 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-H040-602	Disk, H, for 4 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-H050-602	Disk, H, for 5 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-H060-602	Disk, H, for 6 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-H080-602	Disk, H, for 8 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-H100-602	Disk, H, for 10 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-H120-602	Disk, H, for 12 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
Continued on next page . . .		

Code No. (Cont.)	Description	Suggested Replacement
VF-H140-602	Disk, H, for 14 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-H160-602	Disk, H, for 16 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-H180-602	Disk, H, for 18 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-H200-602	Disk, H, for 20 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-L040-602	Disk, L, for 4 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-L050-602	Disk, L, for 5 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-L060-602	Disk, L, for 6 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-L080-602	Disk, L, for 8 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-L100-602	Disk, L, for 10 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-L120-602	Disk, L, for 12 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-L140-602	Disk, L, for 14 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-L160-602	Disk, L, for 16 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-L180-602	Disk, L, for 18 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524
VF-L200-602	Disk, L, for 20 in. Valve	Replace Valve or Contact Bray (713) 894-7979, Ext. 524

Cross-Reference – Supported Valves to Appropriate Spring and Reconditioning Kits

Table 3: Supported Valves to Appropriate Spring and Reconditioning Kits

Valve Body	Valve Size (in.)	Actuator	Spring Range	Spring Kit	Reconditioning Kit by Size and/or Cv
AV-8020	1/2 (Flare)	Electric (PDTC)	N/A	N/A	1/2 in.: No Kits Available, Replace Valve Replacement Valve (Cv = 0.5): VB-5239-1730 Replacement Valve (Cv = 1.2): VB-5239-1750 Replacement Valve (Cv = 2.4): VB-5239-1770
	1/2 (Flare)	Electric (Mixing)	N/A	N/A	1/2 in.: No Kits Available, Replace Valve Replacement Valve (Cv = 0.5): VB-5839-1730 Replacement Valve (Cv = 1.2): VB-5839-1750 Replacement Valve (Cv = 2.4): VB-5839-1770
AV-8022	1/2 (Flare)	Electric (PDTC)	N/A	N/A	1/2 in.: No Kits Available, Replace Valve Replacement Valve (Cv = 0.5): VB-5239-1730 Replacement Valve (Cv = 1.2): VB-5239-1750 Replacement Valve (Cv = 2.4): VB-5239-1770
	1/2 (Flare)	Electric (Mixing)	N/A	N/A	1/2 in.: No Kits Available, Replace Valve Replacement Valve (Cv = 0.5): VB-5839-1730 Replacement Valve (Cv = 1.2): VB-5839-1750 Replacement Valve (Cv = 2.4): VB-5839-1770
AV-8050	1/2 (Flare)	Electric (PDTC)	N/A	N/A	1/2 in.: No Kits Available, Replace Valve
	1/2 (Flare)	Electric (Mixing)	N/A	N/A	1/2 in.: No Kits Available, Replace Valve
	3/4 (NPT)	Electric (PDTC)	N/A	N/A	3/4 in., Cv = 8.6: V-3754-6001
	3/4 (NPT)	Electric (Mixing)	N/A	N/A	3/4 in., Cv = 8.6: V-4324-6001
	1 (NPT)	Electric (PDTC)	N/A	N/A	1 in., Cv = 13.9: V-3754-6002
	1 (NPT)	Electric (Mixing)	N/A	N/A	1 in., Cv = 13.9: V-4324-6002
	1-1/2 (NPT)	Electric (PDTC)	N/A	N/A	1-1/2 in., Cv = 27.5: V-5254-6001
	1-1/2 (NPT)	Electric (Mixing)	N/A	N/A	1-1/2 in., Cv = 27.5: V-5844-6001

Continued on next page . . .

Valve Body (Cont.)	Valve Size (in.)	Actuator	Spring Range	Spring Kit	Reconditioning Kit by Size and/or Cv
AV-8051	1/2 (Flare)	Electric (PDTTC)	N/A	N/A	1/2 in.: No Kits Available, Replace Valve
	1/2 (Flare)	Electric (Mixing)	N/A	N/A	1/2 in.: No Kits Available, Replace Valve
	3/4 (NPT)	Electric (PDTTC)	N/A	N/A	3/4 in., Cv = 8.6: V-3754-6001
	3/4 (NPT)	Electric (Mixing)	N/A	N/A	3/4 in., Cv = 8.6: V-4324-6001
	1 (NPT)	Electric (PDTTC)	N/A	N/A	1 in., Cv = 13.9: V-3754-6002
	1 (NPT)	Electric (Mixing)	N/A	N/A	1 in., Cv = 13.9: V-4324-6002
	1-1/2 (NPT)	Electric (PDTTC)	N/A	N/A	1-1/2 in., Cv = 27.5: V-5254-6001
	1-1/2 (NPT)	Electric (Mixing)	N/A	N/A	1-1/2 in., Cv = 27.5: V-5844-6001
AV-8052	1/2 (Flare)	Electric (PDTO)	N/A	N/A	1/2 in.: No Kits Available, Replace Valve
	1/2 (Flare)	Electric (Mixing)	N/A	N/A	1/2 in.: No Kits Available, Replace Valve
	3/4 (NPT)	Electric (PDTO)	N/A	N/A	3/4 in., Cv = 8.6: V-3974-6001
	3/4 (NPT)	Electric (Mixing)	N/A	N/A	3/4 in., Cv = 8.6: V-4324-6001
	1 (NPT)	Electric (PDTO)	N/A	N/A	1 in., Cv = 13.9: V-3974-6002
	1 (NPT)	Electric (Mixing)	N/A	N/A	1 in., Cv = 13.9: V-4324-6002
	1-1/2 (NPT)	Electric (PDTO)	N/A	N/A	1-1/2 in., Cv = 27.5: V-5464-6001
	1-1/2 (NPT)	Electric (Mixing)	N/A	N/A	1-1/2 in., Cv = 27.5: V-5844-6001
AV-8090	1-1/2 and 2 (NPT)	Electric (PDTTC)	N/A	N/A	1-1/2 in., Cv = 27.5: V-5254-6001 2 in., Cv = 41.0: V-5254-6002
	1-1/2 and 2 (NPT)	Electric (Mixing)	N/A	N/A	1-1/2 in., Cv = 27.5: V-5844-6001 2 in., Cv = 41.0: V-5844-6002
AV-8091	1-1/2 and 2 (NPT)	Electric (PDTTC)	N/A	N/A	1-1/2 in., Cv = 27.5: V-5254-6001 2 in., Cv = 41.0: V-5254-6002
	1-1/2 and 2 (NPT)	Electric (Mixing)	N/A	N/A	1-1/2 in., Cv = 27.5: V-5844-6001 2 in., Cv = 41.0: V-5844-6002
Continued on next page . . .					

Valve Body (Cont.)	Valve Size (in.)	Actuator	Spring Range	Spring Kit	Reconditioning Kit by Size and/or Cv
AV-8092	1-1/2 and 2 (NPT)	Electric (PDTTC)	N/A	N/A	1-1/2 in., Cv = 27.5: V-5254-6001 2 in., Cv = 41.0: V-5254-6002
	1-1/2 and 2 (NPT)	Electric (PDTO)	N/A	N/A	1-1/2 in., Cv = 27.5: V-5464-6001 2 in., Cv = 41.0: V-5464-6002
	1-1/2 and 2 (NPT)	Electric (Mixing)	N/A	N/A	1-1/2 in., Cv = 27.5: V-5844-6001 2 in., Cv = 41.0: V-5844-6002
V-3011	1/2 and 3/4	V-3000	3 to 6 9 to 13	V-3752-6023 V-3752-6022	1/2 in.: No Kits Available, Replace Valve 3/4 in. Union Globe, Cv = 5.2: V-3755-6002 3/4 in. Union Angle, Contoured Plug, Cv = 9.0: V-3755-6007 3/4 in. Union Globe, Cv = 6.0: V-3755-6011 3/4 in. Union Angle, Flat Disk, Cv = 9.0: V-3755-6017
	1 and 1-1/4	V-3000	3 to 6 9 to 13	V-3752-6024 V-3752-6021	1 in. Union Globe, Cv = 8.2: V-3755-6003 1 in. Union Angle, Contoured Plug, Cv = 17.0: V-3755-6008 1 in. Union Globe, Cv = 10.0: V-3755-6012 1 in. Union Angle, Flat Disk, Cv = 17.0: V-3755-6018 1-1/4 in. Union Globe, Cv = 13.0: V-3755-6004 1-1/4 in. Union Angle, Contoured Plug, Cv = 24.0: V-3755-6009 1-1/4 in. Union Globe, Cv = 21.0: V-3755-6013 1-1/4 in. Union Angle, Flat Disk, Cv = 25.0: V-3755-6019
	1-1/2 and 2	V-3000	3 to 6 9 to 13	V-3754-6010 V-3754-6009	1-1/2 in. Union Globe, Cv = 21.0: V-3755-6005 1-1/2 in. Globe, Cv = 23.0: V-3755-6014 1-1/2 in. Union Angle, Cv = 41.0: V-3755-6020 2 in. Globe, Cv = 35.0: V-3755-6015 2 in. Union Angle, Cv = 60.0: V-3755-6021
V-3020	1/2 and 3/4	V-3000	3 to 6 9 to 13	V-3752-6023 V-3752-6022	1/2 in.: No Kits Available, Replace Valve 3/4 in. Union Angle, Cv = 3.7: V-3752-6016 3/4 in. Globe/Union Globe, Cv = 7.0: V-3752-6027
	1 and 1-1/4	V-3000	3 to 6 9 to 13	V-3752-6024 V-3752-6021	1 in. Union Angle, Cv = 7.0: V-3752-6017 1 in. Globe/Union Globe, Cv = 7.0: V-3752-6028 1-1/4 in. Union Angle, Cv = 12.0: V-3752-6018 1-1/4 in. Globe/Union Globe, Cv = 12.0: V-3752-6019
	1-1/2 and 2	V-3000	3 to 6 9 to 13	V-3754-6010 V-3754-6009	1-1/2 in. Union Angle, Cv = 20.0: V-3752-6020 1-1/2 in. Globe/Union Globe, Cv = 20.0: V-3752-6030 2 in. Globe/Union Globe, Cv = 26.0: V-3752-6031 2 in. Union Angle, Cv = 35.0: V-3752-6034
V-3100	1/2 and 3/4	V-3802 or V-4000	3 to 6 9 to 13	V-3800-6002 V-3800-6003	1/2 in.: No Kits Available, Replace Valve 3/4 in. Union Angle, Cv = 3.7: V-3800-6001 3/4 in. Union Globe, Cv = 3.8: V-3800-6006 3/4 in. Reverse Flow Union Angle, Cv = 3.9: V-3800-6009
Continued on next page . . .					

Valve Body (Cont.)	Valve Size (in.)	Actuator	Spring Range	Spring Kit	Reconditioning Kit by Size and/or Cv
V-3212	1/2 and 3/4	V-3000	4 to 8 9 to 13	V-4332-6001 V-3752-6022	1/2 in. Globe, Cv = 2.2: V-3970-6003 1/2 in. Globe, Cv = 4.0: V-3970-6004 3/4 in. Globe, Cv = 3.8: V-3970-6005 3/4 in. Globe, Cv = 5.5: V-3970-6006
	1 and 1-1/4	V-3000	4 to 8 9 to 13	V-4322-6001 V-3752-6021	1 in. Globe, Cv = 6.9: V-3970-6007 1 in. Globe, Cv = 8.3: V-3970-6008 1-1/4 in. Globe, Cv = 11.0: V-3970-6009 1-1/4 in. Globe, Cv = 12.0: V-3970-6010
	1-1/2 and 2	V-3000	4 to 8 9 to 13	V-3974-6008 V-3754-6009	1-1/2 in. Globe, Cv = 17.0: V-3970-6001 2 in. Globe, Cv = 27.0: V-3970-6002
V-3752	1/2 and 3/4	V-3000	3 to 6 9 to 13	V-3752-6023 V-3752-6022	1/2 in. Globe/Union Globe, CV = 0.9: V-3752-6050 1/2 in. Globe/Union Globe, Cv = 1.8: V-3752-6051 1/2 in. Union Angle, Cv = 2.5: V-3752-6052 3/4 in. Union Angle, Cv = 3.7: V-3752-6016 3/4 in. Globe/Union Globe, Cv = 3.7: V-3752-6027
	1 and 1-1/4	V-3000	3 to 6 9 to 13	V-3752-6024 V-3752-6021	1 in. Union Angle, Cv = 7.0: V-3752-6017 1 in. Globe/Union Globe, Cv = 7.0: V-3752-6028 1-1/4 in. Union Angle, Cv = 12.0: V-3752-6018 1-1/4 in. Globe/Union Globe, Cv = 12.0: V-3752-6019
	1-1/2 and 2	V-3000	3 to 6 9 to 13	V-3754-6010 V-3754-6009	1-1/2 in. Union Angle, Cv = 20.0: V-3752-6020 1-1/2 in. Globe/Union Globe, Cv = 20.0: V-3752-6030 2 in. Globe/Union Globe, Cv = 26.0: V-3752-6031 2 in. Union Angle, Cv = 35.0: V-3752-6034
VB-3752	2-1/2	N/A	N/A	N/A	2-1/2 in.: V-5252-6001
	3	N/A	N/A	N/A	3 in.: V-5252-6003
	4	N/A	N/A	N/A	4 in.: V-5252-6005
	5	N/A	N/A	N/A	5 in.: V-5252-6007
	6	N/A	N/A	N/A	6 in.: V-5252-6008
V-3754	1/2	V-3802 or V-4000	3 to 6 9 to 13	V-3754-6012 V-3754-6013	1/2 in. Cage Trim, Cv = 0.2: V-3754-6003 1/2 in. Cage Trim, Cv = 0.4: V-3754-6004 1/2 in. Cage Trim, Cv = 1.2: V-3754-6005 1/2 in. Cage Trim, Cv = 2.2: V-3754-6006 1/2 in. Cage Trim, Cv = 4.4: V-3754-6007
	1/2 and 3/4	V-3000	3 to 6 9 to 13	V-3754-6010 V-3754-6009	1/2 in. Cage Trim, Cv = 0.2: V-3754-6003 1/2 in. Cage Trim, Cv = 0.4: V-3754-6004 1/2 in. Cage Trim, Cv = 1.2: V-3754-6005 1/2 in. Cage Trim, Cv = 2.2: V-3754-6006 1/2 in. Cage Trim, Cv = 4.4: V-3754-6007 3/4 in. Cage Trim, Cv = 8.6: V-3754-6001
	1 and 1-1/2	V-3000	3 to 6 9 to 13	V-3754-6011 V-3754-6008	1 in. Cage Trim, Cv = 13.9: V-3754-6002 1-1/2 in. Cage Trim, Cv = 27.5: V-5254-6001

Continued on next page . . .

Valve Body (Cont.)	Valve Size (in.)	Actuator	Spring Range	Spring Kit	Reconditioning Kit by Size and/or Cv
VB-3754	1/2	N/A	N/A	N/A	1/2 in., Cv = 1.2: V-3754-6005 1/2 in., Cv = 2.2: V-3754-6006 1/2 in., Cv = 4.4: V-3754-6007
	3/4	N/A	N/A	N/A	3/4 in., Cv = 8.6: V-3754-6001
	1	N/A	N/A	N/A	1 in., Cv = 13.9: V-3754-6002
	1-1/2	N/A	N/A	N/A	1-1/2 in., Cv = 27.5: V-5254-6001
	2	N/A	N/A	N/A	2 in., Cv = 41.0: V-5254-6002
V-3755	1/2 and 3/4	V-3000	3 to 6 9 to 13	V-3752-6023 V-3752-6022	1/2 in. Union Globe, Cv = 3.2: V-3755-6050 3/4 in. Union Globe, Cv = 5.2: V-3755-6002 3/4 in. Union Angle, Contoured Plug, Cv = 9.0: V-3755-6007 3/4 in. Union Globe, Cv = 6.0: V-3755-6011 3/4 in. Union Angle, Flat Disk, Cv = 9.0: V-3755-6017
	1 and 1-1/4	V-3000	3 to 6 9 to 13	V-3752-6024 V-3752-6021	1 in. Union Globe, Cv = 8.2: V-3755-6003 1 in. Union Angle, Contoured Plug, Cv = 17.0: V-3755-6008 1 in. Union Globe, Cv = 10.0: V-3755-6012 1 in. Union Angle, Flat Disk, Cv = 17.0: V-3755-6018 1-1/4 in. Union Globe, Cv = 13.0: V-3755-6004 1-1/4 in. Union Angle, Contoured Plug, Cv = 24.0: V-3755-6009 1-1/4 in. Union Globe, Cv = 15.0: V-3755-6013 1-1/4 in. Union Angle, Flat Disk, Cv = 25.0: V-3755-6019
	1-1/2 and 2	V-3000	3 to 6 9 to 13	V-3754-6010 V-3754-6009	1-1/2 in. Union Globe, Cv = 21.0: V-3755-6005 1-1/2 in. Union Globe, Cv = 23.0: V-3755-6014 1-1/2 in. Union Angle, Cv = 41.0: V-3755-6020 2 in. Union Globe, Cv = 35.0: V-3755-6015 2 in. Union Angle, Cv = 60.0: V-3755-6021
V-3766	1/2	V-3000	3 to 6	V-3754-6010	1/2 in.: No Kits Available, Replace Valve
V-3800	1/2 and 3/4	V-3802 or V-4000	3 to 6 9 to 13	V-3800-6002	1/2 in. Union Globe, Cv = 0.9: V-3800-6050
				V-3800-6003	1/2 in. Union Globe, Cv = 1.8: V-3800-6051 3/4 in. Union Angle, Cv = 3.7: V-3800-6001 3/4 in. Union Globe, Cv = 3.8: V-3800-6006 3/4 in. Reverse Flow Union Angle, Cv = 3.9: V-3800-6009
V-3854	1/2	V-3802	3 to 6	V-3754-6012	1/2 in. Cage Trim, Cv = 1.2: V-3854-6050
			9 to 13	V-3754-6013	1/2 in. Cage Trim, Cv = 2.2: V-3854-6051 1/2 in. Cage Trim, Cv = 4.4: V-3854-6052
V-3964	1/2	V-3000	9 to 13	V-3754-6009	1/2 in.: No Kits Available, Replace Valve
V-3966	1/2	V-3000	9 to 13	V-3754-6009	1/2 in.: No Kits Available, Replace Valve

Continued on next page . . .

Valve Body (Cont.)	Valve Size (in.)	Actuator	Spring Range	Spring Kit	Reconditioning Kit by Size and/or Cv
V-3970	1/2 and 3/4	V-3000	4 to 8 9 to 13	V-4332-6001 V-3752-6022	1/2 in. Globe, Cv = 3.3: V-3970-6003 1/2 in. Globe, Cv = 4.0: V-3970-6004 3/4 in. Globe, Cv = 3.8: V-3970-6005 3/4 in. Globe, Cv = 5.5: V-3970-6006
	1 and 1-1/4	V-3000	4 to 8 9 to 13	V-4322-6001 V-3752-6021	1 in. Globe, Cv = 6.9: V-3970-6007 1 in. Globe, Cv = 8.3: V-3970-6008 1-1/4 in. Globe, Cv = 11.0: V-3970-6009 1-1/4 in. Globe, Cv = 12.0: V-3970-6010
	1-1/2 and 2	V-3000	4 to 8 9 to 13	V-3974-6008 V-3754-6009	1-1/2 in. Globe, Cv = 17.0: V-3970-6001 2 in. Globe, Cv = 27.0: V-3970-6002
VB-3970	2-1/2	N/A	N/A	N/A	2-1/2 in.: V-5462-6001
	3	N/A	N/A	N/A	3 in.: V-5462-6002
	4	N/A	N/A	N/A	4 in.: V-5462-6004
	5	N/A	N/A	N/A	5 in.: V-5462-6006
	6	N/A	N/A	N/A	6 in.: V-5462-6007
V-3974	1/2	V-3802 or V-4000	3 to 6 9 to 13	V-3754-6012 V-3754-6013	1/2 in. Cage Trim, Cv = 0.2: V-3974-6003 1/2 in. Cage Trim, Cv = 0.4: V-3974-6004 1/2 in. Cage Trim, Cv = 1.2: V-3974-6005 1/2 in. Cage Trim, Cv = 2.2: V-3974-6006 1/2 in. Cage Trim, Cv = 4.4: V-3974-6007
	1/2 and 3/4	V-3000	4 to 8 9 to 13	V-3974-6008 V-3754-6009	1/2 in. Cage Trim, Cv = 0.2: V-3974-6003 1/2 in. Cage Trim, Cv = 0.4: V-3974-6004 1/2 in. Cage Trim, Cv = 1.2: V-3974-6005 1/2 in. Cage Trim, Cv = 2.2: V-3974-6006 1/2 in. Cage Trim, Cv = 4.4: V-3974-6007 3/4 in. Cage Trim, Cv = 8.6: V-3974-6001
	1 and 1-1/2	V-3000	4 to 8 9 to 13	V-3974-6009 V-3754-6008	1 in. Cage Trim, Cv = 13.9: V-3974-6002 1-1/2 in. Cage Trim, Cv = 27.5: V-5464-6001
VB-3974	1/2	N/A	N/A	N/A	1/2 in., Cv = 1.2: V-3974-6005 1/2 in., Cv = 2.2: V-3974-6006 1/2 in., Cv = 4.4: V-3974-6007
	3/4	N/A	N/A	N/A	3/4 in., Cv = 8.6: V-3974-6001
	1	N/A	N/A	N/A	1 in., Cv = 13.9: V-3974-6002
	1-1/2	N/A	N/A	N/A	1-1/2 in., Cv = 27.5: V-5464-6001
	2	N/A	N/A	N/A	2 in., Cv = 41.0: V-5464-6002
V-4322	1/2 and 3/4	V-3000	4 to 8 9 to 13	V-4332-6001 V-3752-6022	1/2 in. Mixing, Cv = 4.3: V-4322-6004 3/4 in. Mixing, Cv = 5.3: V-4322-6005
	1 and 1-1/4	V-3000	4 to 8 9 to 13	V-4322-6001 V-3752-6021	1 in. Mixing, Cv = 8.6: V-4322-6006 1-1/4 in. Mixing, Cv = 13.0: V-4322-6007
	1-1/2 and 2	V-3000	4 to 8 9 to 13	V-3974-6008 V-3754-6009	1-1/2 in. Mixing, Cv = 21.0: V-4322-6002 2 in. Mixing, Cv = 30.0: V-4322-6003

Continued on next page . . .

Valve Body (Cont.)	Valve Size (in.)	Actuator	Spring Range	Spring Kit	Reconditioning Kit by Size and/or Cv
VB-4322	2-1/2	N/A	N/A	N/A	2-1/2 in.: V-5842-6001
	3	N/A	N/A	N/A	3 in.: V-5842-6002
	4	N/A	N/A	N/A	4 in.: V-5842-6004
	5	N/A	N/A	N/A	5 in.: V-5842-6006
	6	N/A	N/A	N/A	6 in.: V-5842-6007
V-4324	1/2	V-3802 or V-4000	3 to 6 9 to 13	V-3754-6012 V-3754-6013	1/2 in. Mixing Cage Trim, Cv = 1.2: V-4324-6003 1/2 in. Mixing Cage Trim, Cv = 2.2: V-4324-6004 1/2 in. Mixing Cage Trim, Cv = 4.4: V-4324-6005
	1/2 and 3/4	V-3000	4 to 8 9 to 13	V-3974-6008 V-3754-6009	1/2 in. Mixing Cage Trim, Cv = 1.2: V-4324-6003 1/2 in. Mixing Cage Trim, Cv = 2.2: V-4324-6004 1/2 in. Mixing Cage Trim, Cv = 4.4: V-4324-6005 3/4 in. Mixing Cage Trim, Cv = 8.6: V-4324-6001
	1 and 1-1/2	V-3000	4 to 8 9 to 13	V-3974-6009 V-3754-6008	1 in. Mixing Cage Trim, Cv = 13.9: V-4324-6002 1-1/2 in. Mixing Cage Trim, Cv = 27.5: V-5844-6001
VB-4324	1/2	N/A	N/A	N/A	1/2 in., Cv = 1.2: V-4324-6003 1/2 in., Cv = 2.2: V-4324-6004 1/2 in., Cv = 4.4: V-4324-6005
	3/4	N/A	N/A	N/A	3/4 in., Cv = 8.6: V-4324-6001
	1	N/A	N/A	N/A	1 in., Cv = 13.9: V-4324-6002
	1-1/2	N/A	N/A	N/A	1-1/2 in., Cv = 27.5: V-5844-6001
	2	N/A	N/A	N/A	2 in., Cv = 41.0: V-5844-6002
V-4332	1/2	V-3000	4 to 8 9 to 13	V-4332-6001 V-3752-6022	1/2 in.: No Kits Available, Replace Valve
V-4333	1/2	V-3000	4 to 8 9 to 13	V-4332-6001 V-3752-6022	1/2 in.: No Kits Available, Replace Valve
V-4334	1/2	V-3000	4 to 8 9 to 13	V-4332-6001 V-3752-6022	1/2 in.: No Kits Available, Replace Valve
V-4440	1/2 and 5/8	V-3000	4 to 12 6 to 9	V-4440-6002 V-4440-6001	1/2 in. Supply Flare, Cv = 1.4: V-4440-6003 1/2 in. Supply Flare, Cv = 2.4: V-4440-6004 1/2 in. Return Flare, Cv = 2.4: V-4440-6005 5/8 in.: No Kits Available, Replace Valve
V-4510	1/2 and 3/4	V-3000	3 to 6	V-3752-6023	1/2 in.: No Kits Available, Replace Valve 3/4 in. Union Angle, Cv = 3.7: V-3752-6016 3/4 in. Globe/Union Globe, Cv = 3.8: V-3752-6027
	1 and 1-1/4	V-3000	3 to 6	V-3752-6024	1 in. Union Angle, Cv = 7.0: V-3752-6017 1 in. Globe/Union Globe, Cv = 7.0: V-3752-6028 1-1/4 in. Union Angle, Cv = 12.0: V-3752-6018 1-1/4 in. Globe/Union Globe, Cv = 12.0: V-3752-6019
	1-1/2 and 2	V-3000	3 to 6	V-3754-6010	1-1/2 in. Union Angle, Cv = 20.0: V-3752-6020 1-1/2 in. Globe/Union Globe, Cv = 20.0: V-3752-6030 2 in. Globe/Union Globe, Cv = 26.0: V-3752-6031 2 in. Union Angle, Cv = 35.0: V-3752-6034
Continued on next page . . .					

Valve Body (Cont.)	Valve Size (in.)	Actuator	Spring Range	Spring Kit	Reconditioning Kit by Size and/or Cv
V-5216	1/2	V-3000	3 to 6	V-3752-6023	1/2 in.: No Kits Available, Replace Valve
	3/4	V-3000	3 to 6	V-3752-6024	3/4 in.: No Kits Available, Replace Valve
V-5230	1/2 and 3/4	V-3000	3 to 7	V-5230-6001	1/2 and 3/4 in.: No Kits Available, Replace Valve
	1	V-3000	3 to 7	V-5230-6002	1 in.: No Kits Available, Replace Valve
V-5250	1/2 and 3/4	V-3000	3 to 6	V-3752-6023	1/2 in.: No Kits Available, Replace Valve 3/4 in. Union Angle, Cv = 3.7: V-3752-6016 3/4 in. Globe/Union Globe, Cv = 3.8: V-3752-6027
	1 and 1-1/4	V-3000	3 to 6	V-3752-6024	1 in. Union Angle, Cv = 7.0: V-3752-6017 1 in. Globe/Union Globe, Cv = 7.0: V-3752-6028 1-1/4 in. Union Angle, Cv = 12.0: V-3752-6018 1-1/4 in. Globe/Union Globe, Cv = 12.0: V-3752-6019
	1-1/2 and 2	V-3000	3 to 6	V-3754-6010	1-1/2 in. Union Angle, Cv = 20.0: V-3752-6020 1-1/2 in. Globe/Union Globe, Cv = 20.0: V-3752-6030 2 in. Globe/Union Globe, Cv = 26.0: V-3752-6031 2 in. Union Angle, Cv = 35.0: V-3752-6034
V-5252	2	4R	N/A	N/A	4R: V-5252-6009
	2-1/2	4R or 5R	N/A	N/A	4R: V-5252-6002; 5R: V-5252-6001
	3	4R or 5R	N/A	N/A	4R: V-5252-6004; 5R: V-5252-6003
	4	5R or 8R	N/A	N/A	5R: V-5252-6005; 8R: V-5252-6006
	5	8R	N/A	N/A	8R: V-5252-6007
	6	8R	N/A	N/A	8R: V-5252-6008
V-5254	1-1/2	4R	N/A	N/A	4R: V-5254-6001
	2	4R	N/A	N/A	4R: V-5254-6002
V-5416	1/2	V-3000	9 to 13	V-3752-6022	1/2 in.: No Kits Available, Replace Valve
	3/4	V-3000	9 to 13	V-3752-6021	3/4 in.: No Kits Available, Replace Valve
V-5430	1/2 and 3/4	V-3000	9 to 14	V-5430-6001	1/2 and 3/4 in.: No Kits Available, Replace Valve
V-5462	1-1/4	4R	N/A	N/A	4R: V-5462-6008
	1-1/2	4R	N/A	N/A	4R: V-5462-6009
	2	4R	N/A	N/A	4R: V-5462-6010
	2-1/2	5R	N/A	N/A	5R: V-5462-6001
	3	5R or 8R	N/A	N/A	5R: V-5462-6002; 8R: V-5462-6003
	4	5R or 8R	N/A	N/A	5R: V-5462-6004; 8R: V-5462-6005
	5	8R	N/A	N/A	8R: V-5462-6006
	6	8R	N/A	N/A	8R: V-5462-6007
V-5464	1-1/2	4R	N/A	N/A	4R: V-5464-6001
	2	4R	N/A	N/A	4R: V-5464-6002

Continued on next page . . .

Valve Body (Cont.)	Valve Size (in.)	Actuator	Spring Range	Spring Kit	Reconditioning Kit by Size and/or Cv
V-5842	1-1/2	4R	N/A	N/A	4R: No Kits Available, Replace Valve
	2	4R	N/A	N/A	4R: No Kits Available, Replace Valve
	2-1/2	5R	N/A	N/A	5R: V-5842-6001
	3	5R or 8R	N/A	N/A	5R: V-5842-6002; 8R: V-5842-6003
		Electric	N/A	N/A	Electric: V-5842-6004
	4	8R	N/A	N/A	8R: V-5842-6005
		5	8R	N/A	N/A
V-5844	1-1/2	4R	N/A	N/A	4R: V-5844-6001
	2	4R	N/A	N/A	4R: V-5844-6002
V-6139	1/2	V-3000	9 to 13	V-3754-6009	1/2 in.: No Kits Available, Replace Valve
V-6143	3/8 and 3/4	V-3000	9 to 13	V-3752-6022	3/8 and 3/4 in.: No Kits Available, Replace Valve
V-7216	1/2	V-3000	3 to 6	V-3752-6023	1/2 in.: No Kits Available, Replace Valve
	3/4	V-3000	3 to 6	V-3752-6024	3/4 in.: No Kits Available, Replace Valve
	1	4R	N/A	N/A	4R: No Kits Available, Replace Valve
	1-1/4	4R or 5R	N/A	N/A	4R or 5R: No Kits Available, Replace Valve
	1-1/2	4R or 5R	N/A	N/A	4R or 5R: No Kits Available, Replace Valve
	2	5R	N/A	N/A	5R: No Kits Available, Replace Valve
V-7416	1/2	V-3000	9 to 13	V-3752-6022	1/2 in.: No Kits Available, Replace Valve
	3/4	V-3000	9 to 13	V-3752-6021	3/4 in.: No Kits Available, Replace Valve
	1	4R	N/A	N/A	4R: No Kits Available, Replace Valve
	1-1/4	4R or 5R	N/A	N/A	4R or 5R: No Kits Available, Replace Valve
	1-1/2	4R or 5R	N/A	N/A	4R or 5R: No Kits Available, Replace Valve
	2	5R	N/A	N/A	5R: No Kits Available, Replace Valve
VT Series	1/2	V-3802 or V-4000	3 to 6 4 to 8 9 to 13	V-9999-6001 V-9999-6002 V-9999-6003	1/2 in.: No Kits Available, Replace Valve
		V-3000	3 to 6 4 to 8 9 to 13	V-3752-6023 V-4332-6001 V-3752-6022	1/2 in.: No Kits Available, Replace Valve
VTA Series	1/2	V-3000	9 to 13	V-3752-6022	1/2 in.: No Kits Available, Replace Valve

Notes

Notes

Notes

Controls Group
507 E. Michigan Street
P.O. Box 423
Milwaukee, WI 53201

FAN 977
Valve and Actuator Manual
Printed in U.S.A.
www.johnsoncontrols.com