








Quick Reference Guide 150809 issue 2

© IDEAL INDUSTRIES Ltd 2011 +44 (0) 1925 444446 UKSales@idealnwd.com

www.lanxplorer.co.uk

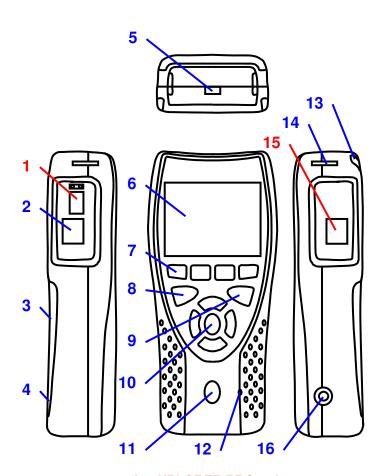

# - LanXPLORER PRO only


1	Slot for SFP module
2	Primary RJ45 port
3	Battery compartment (behind kickstand)
4	Reset button (inside battery compartment)
5	USB port
6	LCD colour screen
7	Function keys F1 to F4
8	Autotest button
9	Escape button
10	Cursor and ENTER keys Battery
11	ON/OFF button Access
12	Charger LED*
13	Stylus
14	Slots for hanging strap
15	Secondary RJ45 port
16	12volt DC-Jack

- AA Cells can not be charged internally!
- Use the RESET button to reset the tester!
- Do not remove the battery to reset!


*Charger LED	Status
Green	Battery is charging
Off (with charger connected)	Battery is charged
Green Flashing //	Battery is not being charged
Red/Flashing	Battery can not be charged – temperature is too high

### **Four Ways to Navigate**



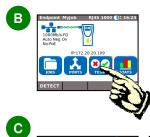


Touch Screen (PRO only)

 


Escape – Return to previous screen

ENTER – Accept selection

# **Cable Testing**

 

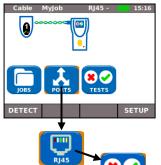






## **Network Testing over Copper**



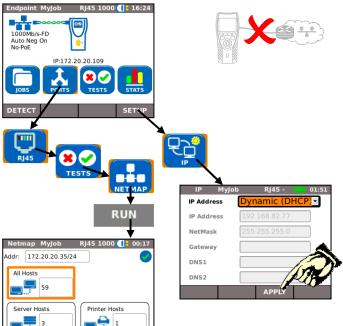


SAVE


RUN

SETUP


# In-Line Testing over Copper (PRO only)

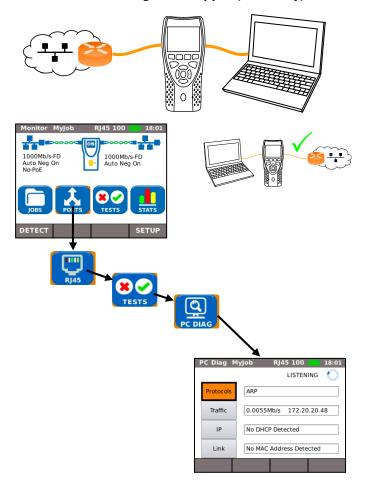

## **Network Testing over Fibre (PRO only)**

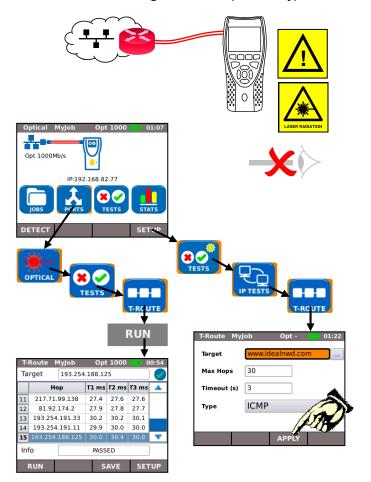

# Network Testing over WiFi (PRO and PLUS only)

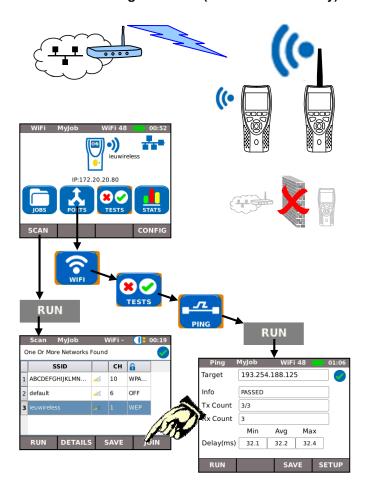

### **Result Saving and Viewing**

