





Install the keypad onto the surface of a panel as follows :-

- Fit the seal to the rear of the keypad
- Place the keypad onto the panel and fit the self locking nuts to the studs on the back
- Recommended tightening torque 50Ncm


Side View : 4, 12, 16

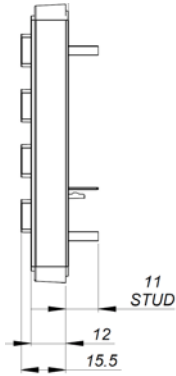


Front and Back View : 4 way

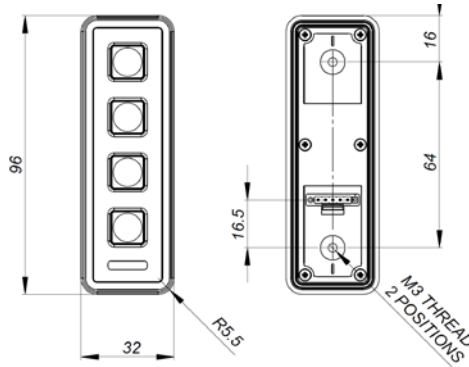


Panel Cutout : 4 way

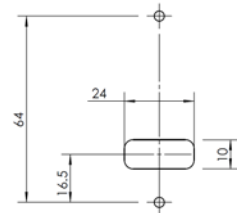


Front and Back View, 12 way

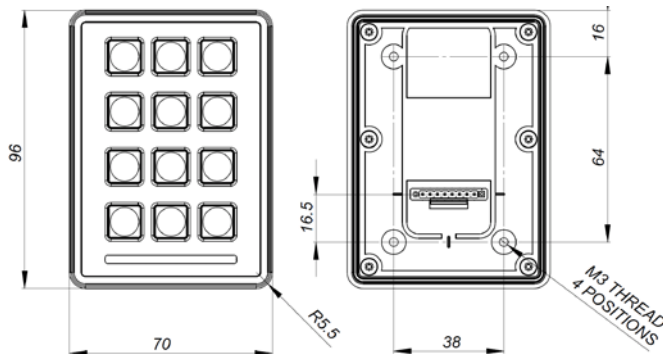


Panel Cutout : 12 way

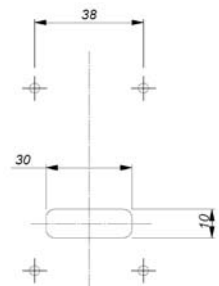

Front and Back View, 16 way

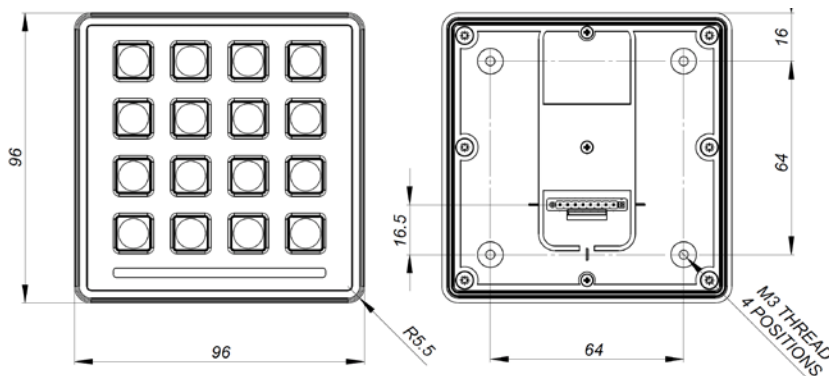

Panel Cutout : 16 way

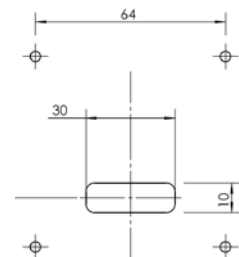

All panel dims in mm.  
Corner Rads all M3