 



TORK®
ASTRONOMIC LATITUDE ZONES

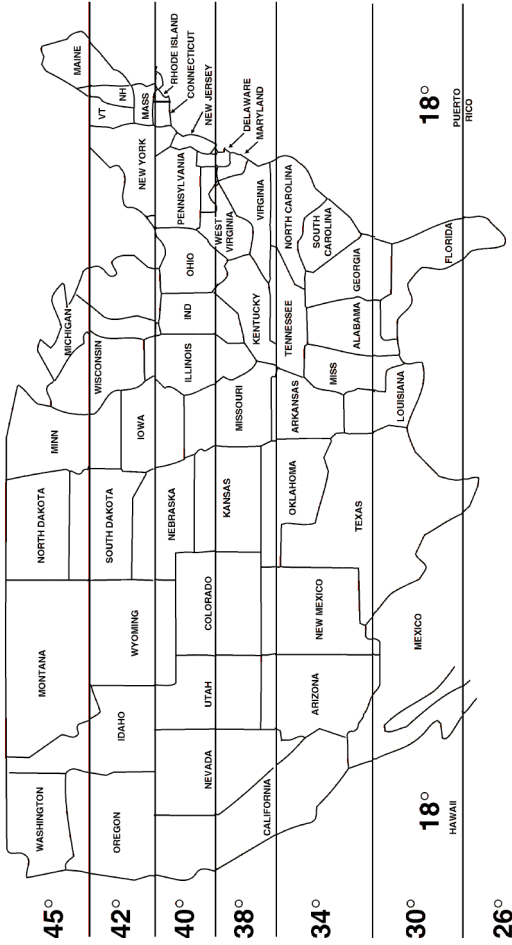


TORK®

18

A DIVISION OF **NSI** NSI INDUSTRIES, LLC
800.321.5847 • www.nsiindustries.com

 ML1-183(A)



TORK® INSTRUCTION MANUAL



DIGITAL TIME SWITCHES

DTS100B DZS100BP



**FOR TECHNICAL SUPPORT:
888.500.4598**


TORK, INC. • 1 Grove St. • Mount Vernon, NY 10550
888.500.4598 • www.tork.com

TABLE OF CONTENTS

Section	Page
Capabilities and Features	1
Installation Instructions	2
Instructions for Setting the Unit	3
1.0 To Set The Clock	4
1.1 To Modify Clock (After previously Set)	4
2.0 To Set Date	4
2.1 To Modify Date (After previously Set)	4
3.0 Daylight Saving Time	4
4.0 Season Durations Settings	5
5.0 Holiday Dates	6
6.0 To Set Signal Durations	7
7.0 Scheduling ONs, OFFs and Signal Durations	7
8.0 To Set Astronomic Schedule (DZS100BP only)	8
8.2 Astronomic ON and Time OFF	10
8.3 Time ON and Astronomic Time OFF (DZS100BP only)	10
9.0 Review, Modify, Delete schedules	10
10.0 Manual Override	11
10.1 Clear All Memory	12
11.0 To Copy Memory Modules (DZS100BP only)	12
Blank Schedule sheets	15
Astronomic Latitude Zones (DZS100BP only)	18

ASTRONOMIC SCHEDULE (Model DZS 100BP Only)

	Sunrise		Sunset		SEASON		Latitude _____												
	Offset		Offset		1	2	3	4	H	SU	SA	FR	TH	WE	TU	MO	Ch. #	Sch. #	

 

INSTALLATION INSTRUCTIONS

1. Remove unit from enclosure by pushing the inside tab (located near the outside hasp) to the right. Swing unit to left and remove.
2. Five combination 1/2" and 3/4" knockouts are provided on this enclosure. Remove the 1/2" (inner) knockout by inserting a screwdriver in the slot provided and pound screwdriver handle with a hammer. Remove knock-out with pliers and smooth hole edges with file and knife if necessary. When the 3/4" outer knockout is required, place screwdriver in groove and pound screwdriver handle with hammer. Remove loose knock-out with pliers and smooth hole edges with file or knife if necessary.

Disconnect power at main panel prior to installing or servicing this time switch or the equipment connected to it. Connect in accordance with national and local electrical codes. Installation by a licensed electrical contractor is recommended.

3. When attaching conduit to enclosure, exercise care to align and support conduit in order to prevent unnecessary stress on enclosure.
4. Reinstall unit by reversing step 1 above and connect wires according to wiring diagram on inside case label.

GROUNDING

National Electrical Code requires that grounding must be continuous and in proper electrical contact in all grounding conductors, metallic conduits and grounding terminals. When using metal conduits, install the proper size approved grounding bushings. The minimum size copper grounding conductors must be #10 AWG if the circuit breaker or fuse is 30 or 40 amp, #12AWG if 20 amps, and #14 AWG if 15 amp.


NOTE: Do not use top entry for wiring


WE SUGGEST YOU MAKE COPIES OF THE SCHEDULE SHEETS LOCATED IN BACK OF THIS BOOKLET AND COMPLETE THEM PRIOR TO SETTING THE UNIT.

Season			
#	Start Date	End Date	Description
1			
2			
3			
4			


Holiday (H)		
#	Date	Description
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		
21		
22		
23		
24		

Signal Durations (seconds)		
	Sig. 1	Sig. 2
Channel 1		

 

 

Press **ENTER**. The unit will display:

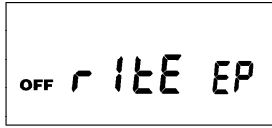

To copy another Memory Module, take the existing one out, insert the next module to be copied and press **EVENT**. This will turn ON the write function. Press Enter and the second module should be copied. Repeat this procedure to copy more modules.

After completing all copies:

- Insert original Memory Module
- Turn OFF AC power to the unit.
- Remove unit from enclosure
- Locate the copy switch and set it to OFF (red switch labeled BP01)
- Put unit back in enclosure
- Put back insulator that covers the terminal block. Make sure no terminals are exposed to the operator.
- Apply AC power to unit
- Insert the pin in the small pinhole (located in the upper right hand corner) to rest the unit.
- Set the time and date.

CAUTION: DO NOT REMOVE MEMORY MODULE WHILE UNIT IS ACTIVE. THE UNIT MUST BE RESET; TIME AND DATE MUST BE RE-ENTERED TO MAKE SCHEDULE SETTINGS EFFECTIVE ON THE MEMORY MODULE.

NOTE: AFTER MAKING ANY CHANGES TO THE PROGRAM, PRESS **MODE** TO GO TO RUN MODE AND THEN PRESS **EVENT** TO UPDATE THE LOAD STATUS.

INSTRUCTIONS FOR SETTING THE UNIT

Connect unit to main power source prior to entering the settings. When powering up the unit for the first time, allow 1-2 minutes for supercap to charge and the display will show 12 HOUR.



Press **HOUR** to change to 24 hour (military format) or Press **ENTER** to set 12 hour (AM/PM format).

 
NOTES:

 
1. During the RUN mode, the Hour, Minutes, Seconds, Day of week and flashing colons will be displayed.
2. Unit will not go into run mode unless the clock and date information has been entered. In any other mode, if no entry is made for 5 minutes, the unit will automatically revert to the run mode.
3. Unit will display "PF" (Power Failure) in the absence of AC power. A minimum of 8 hours is required to fully charge the super cap.
4. When previously programmed unit comes back from a power failure, it will "look back" and update the schedule, executing the last scheduled event. If a signal setting was scheduled, after power failure the unit will execute the last scheduled signal. Settings can be manually updated by pressing the **EVENT** key in the run mode.

After pressing **ENTER** the unit will display:



NOTE: AFTER MAKING ANY CHANGES TO THE PROGRAM, PRESS **MODE** TO GO TO RUN MODE AND THEN PRESS **EVENT** TO UPDATE THE LOAD STATUS.





1.0 TO SET THE CLOCK

Press **HOUR** and **MIN** to advance to the present hour and mins. Check AM/PM, and press **ENTER**.

1.1 TO MODIFY CLOCK

Press **MODE** until the display shows: CLK. Press **HOUR** and **MIN.** to modify clock and press **ENTER**.

2.0 TO SET DATE

If you are setting for the first time, display will show:



Press **MONTH**, **DATE**, and **YEAR** key to advance to the desired month, date and year, then press **ENTER**. **NOTE:** The day of the week will be automatically set once the date is set.

2.1 TO MODIFY DATE

Press **MODE** until the display shows DATE. Press **MONTH**, **DATE** and **YEAR** to modify present settings and then press **ENTER**.

3.0 DAYLIGHT SAVING TIME

After setting or modifying the date, display will show:



NOTE: If daylight saving time (DST) is NOT required, press **MODE**, display will show:



- The unit will display the model # and the rev. #, followed by:




NOTE: Make sure Memory Module with program is inserted in the unit.


This will prepare the unit to read schedule settings from the inserted Memory Module. Press **EVENT** key, display will show:




This will read the schedule settings from the inserted Memory Module. Press **ENTER**. Display will show:

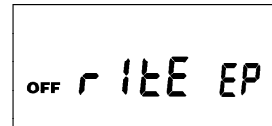


This will prepare the schedule settings to be copied to next Memory Module. Remove inserted Memory Module and insert Memory Module to be copied. Press **EVENT** key, display will show:

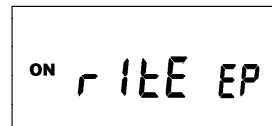

  Press **ENTER**. Schedule settings will be copied to the current Memory Module and the unit will display:





10.1 NOTES:

1. Unit will go to RUN MODE automatically if no key is pressed for 5 minutes.
2. Unit has a look back feature. If you have just finished setting the unit and an output is to be updated, press the **EVENT** key. Unit will automatically pick up the last schedule.
3. Clear all memory. To clear all memory, while in the RUN mode, press **ENTER**, display will show:



Press **EVENT**, the display will show:



Press **ENTER** briefly and everything in the timer memory is wiped off including real time and date. 12HOUR will flash.

11.0 COPY PROGRAM SETTINGS TO ANOTHER MEMORY MODULE (FOR BP MODELS ONLY)

WARNING: DO NOT USE UNIT AS COPIER WHILE PROGRAM SETTINGS ARE ACTIVE. DOING SO WILL TURN OFF ANY CONNECTED LOADS.

Follow steps below:

- Take unit out of enclosure
- Locate the copy switch (red switch labeled BP01)
- Put the switch on the ON position
- Place unit back in enclosure
- Connect power cord
- Put back insulator that covers the terminal block. Make sure no terminals are exposed to the operator.
- Apply AC power to unit
- Insert the pin in the small pinhole (located in the upper right hand corner) to reset the unit.


If daylight savings is required, press **ENTER**, display will show:




Press **ENTER** to accept default dates (second Sunday in March) or press **MONTH**, **DATE**, and **DAY** to modify DST settings and press **ENTER**. The display will show:



Press **ENTER**, the display will show:

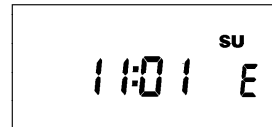



Press **ENTER** to accept default dates (first Sunday in November) or press **MONTH**, **DATE**, and **DAY** to modify DST settings and press **ENTER**. Press **MODE**, the display will show:

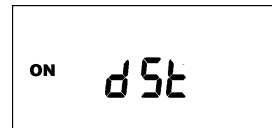

NOTE: DST OFF indicates Daylight Savings Time was not set.

  4.0 SEASON DURATION SET Up to 4 different season durations can be set by entering the **START** and **END** dates.







NOTE:

1. If season durations are not set, they will not appear on the schedule and astronomic mode.
2. Each season can be set up to 364 days.
3. Any season can cross the year boundary, i.e., season can start in the current year and end the next year.
4. When any two or more seasons overlap, the higher numbered season has priority.

Press **MODE** until display shows:

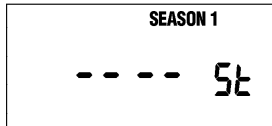

Press **MONTH** and **DATE** to set the starting period of season 1 and then press **ENTER**. The display will show:

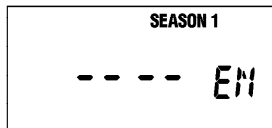


Press **MONTH** and **DATE** to set the ending period of season 1 and then press **ENTER**. Follow the above procedure to set all other 3 seasons, if desired. To delete any entry press **DEL** and **ENTER**.

NOTE: For any season to be used, the starting **MONTH, DATE** and ending **MONTH, DATE** must be preset.

5.0 SET INDIVIDUAL HOLIDAY DATES

Press **MODE** until display shows:

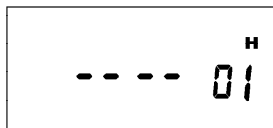



5. **HOLIDAY MODE:** Press **ENTER** to advance to desired holiday. Press **MONTH** and **DATE** to modify, **DEL** to delete. Press **ENTER**.
6. **SIGNAL MODE:** Press **SIG/SEC** to modify, **DEL** to delete. Press **ENTER**.
7. **SCHEDULE MODE:** Press **ENTER** to advance to undesired schedule. Press **HOUR, MIN, EVENT (SIG1/SIG2)** to modify time settings. Press **SELCT** and **DAY** to modify days, holiday and/or seasons, **DEL** to delete. Press **ENTER** after each modification.
8. **ASTRO MODE:** Press **LAT** to change latitude. Press **ENTER**. Press **DAY** and **SELCT** to add or delete days in the sunset mode. Press **ENTER**. Press **HOUR** and/or **MIN** to change offset time for sunset. Press **EVENT** to change offset from + to -. Press **ENTER** and follow the same procedure above to modify or review sunrise settings.
9. **RUN MODE:** Time, day and seconds are displayed. If today is a programmed holiday, an H (Holiday) will be displayed steady. If today falls within a programmed season that season # will be displayed.

10.0 OVERRIDE (OVR1) (override key) is effective only in the **run mode**. If the load is scheduled for ON/OFF (non-signal timer); the present load status will change until the next scheduled event. CH1 will flash when the load is overridden from scheduled event.

NOTE: If a channel is a signal timer, then the load will turn on each time the override key is pressed for the length of SIG 1 duration. Ch1 will flash while the load is on. While the signal is in progress, it can be terminated by using the override key.

  EVENT (in the RUN mode) key is used to update the load status. It will execute the last scheduled event. The display will only show the last scheduled event. If there is no schedule programmed, the display will show: —:—





If an offset to sunrise time is required, press **HOUR** and **MIN**. Offset can be set to 4 hours and 59 minutes max. Press **EVENT** to select + or - and then press **ENTER**.

NOTE: A + sign will turn load OFF that many hours and/or minutes after sunrise. A - sign will turn load OFF that many hours and/or minutes before sunrise.

8.2 ASTRONOMIC ON AND TIME OFF

Set astronomic ON per sections 8.0 and 8.1

TIME OFF:

Press **MODE** until "sch01" appears. Press **ENTER** until a blank schedule appears. Press **HOUR** and **MIN** to set desired OFF time. Press **SELCT** to select desired days, holiday and/or seasons and then press **ENTER**.

8.3 TIME ON AND ASTRONOMIC OFF

Press **MODE** until "sch01" appears. Press **ENTER** until a blank schedule appears. Press **HOUR**, **MIN** and **EVENT** to set desired ON time. Press **SELCT** to select desired days, holiday and / or seasons and then press **ENTER**.

ASTRO OFF:

Set astronomic OFF per sections 8.0 and 8.1


9.0 REVIEW, MODIFY AND DELETE

Press **MODE** to advance to any of the following MODES:

1. **CLOCK MODE:** Press **HOUR** and **MIN** to modify existing settings. Press **ENTER**.
2. **DATE MODE:** Press **MONTH**, **DATE** and **YEAR** to modify existing settings. Press **ENTER**. DAY is automatically adjusted.
3. **DST Daylight Saving Time:** To review press **ENTER**. To modify press **MONTH**, **DATE** and **DAY** to change existing setting. Press **ENTER**.
4. **SEASON MODE:** Press **ENTER** to advance to desired season. Press **MONTH** and **DATE** to modify, **DEL** to delete. Press **ENTER** to confirm.

Press **MONTH** and **DATE** to set holiday 1 and then press **ENTER**.

The display will show:

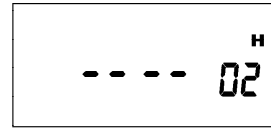

To delete any holiday press **DEL** and press **ENTER**.

NOTE:

- a. A total of 24 holidays can be set, all following the same schedule.
- b. For any holiday to be used, the **MONTH** and **DATE** must be preset.

6.0 TO SET SIGNAL DURATION

Press **MODE** until display shows:



 
 

Press **EVENT/SEC** to set desired signal duration (1 to 99 seconds each), and then press **ENTER**.

 
NOTE:

Use the procedure above to set duration for signal 2.

7.0 SCHEDULE SET MODE

Press **MODE** until display shows:

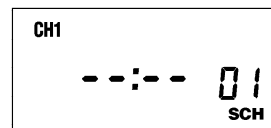




7.1 SETTING HOURS AND MINUTES

- a. Press **HOUR** and **MIN** to set desired time.
- b. Press **EVENT** to set desired event.

7.2 SETTING DAYS, HOLIDAY AND SEASONS

Press **SELCT** to select the flashing desired days, holiday and/or seasons, otherwise press **DAY** to skip and then press **ENTER**. To delete entry, press **DAY** until previously selected entry flashes, press **SELCT** and then press **ENTER**.

The display will show:

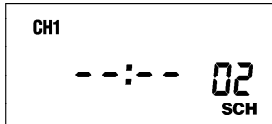

Follow the same procedures above to set more schedule entries for channel 1.

8.0 TO SET ASTRONOMIC SCHEDULE (FOR DZS MODELS ONLY)

Press **MODE** until display shows:



Press the **LAT** key to advance to the desired degree of latitude, from 0° to 60° north or 0° to 60° south. Press **ENTER**.

8.1 SELECTING ASTRO DAYS

Press **SELCT** to select desired days, holiday and/or seasons in which you want the load turn ON at sunset and then press **ENTER**.

Display will show:



NOTE:

Sunset Time will be based on Date and Latitude entered.

Press **ENTER**. The display will show:



If an offset to sunset time is required, press **HOUR** and **MIN**. Offset can be set to 4 hours and 59 minutes max. Press **EVENT** to select + or - and then press **ENTER**.

NOTE: A + sign will turn load ON that many hours and/or minutes after sunset. A - sign will turn load ON that many hours and/or minutes before sunset. The display will show:



Press **SELCT** and then **ENTER** to activate sunrise time.

NOTE: To turn load OFF at a preset OFF time, leave this field blank. Press **ENTER**. The display will show:

