

## Retrofit Fresno, Modesto or Tempe Bollards

Easily retrofit existing **Fresno, Modesto** or **Tempe** bollards with Spaulding Lighting's new LED bollard retrofit kit.

See reverse side for ordering information




Remove top cap allen screw and lift off top cover and acrylic lens



Remove three mounting screws, lift out existing unit and disconnect wires



Insert LED retrofit unit and connect wires, tighten three mounting screws

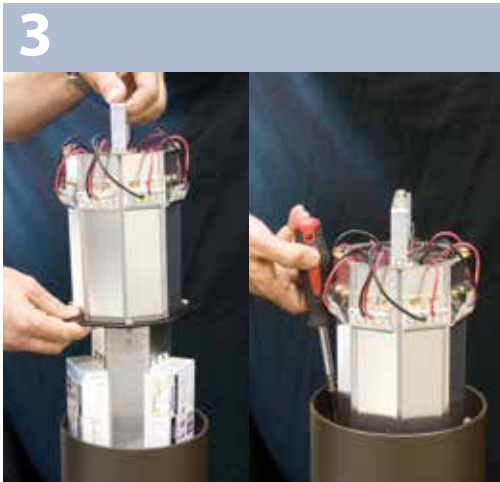

Replace acrylic lens\* and top cover, tighten top cap allen screw



\*NOTE: Modesto louvers must be removed and replaced with round or square lens, available as an accessory