


INSTALLATION INSTRUCTIONS for MFA126 on H-503012 or H-503024 HEATER

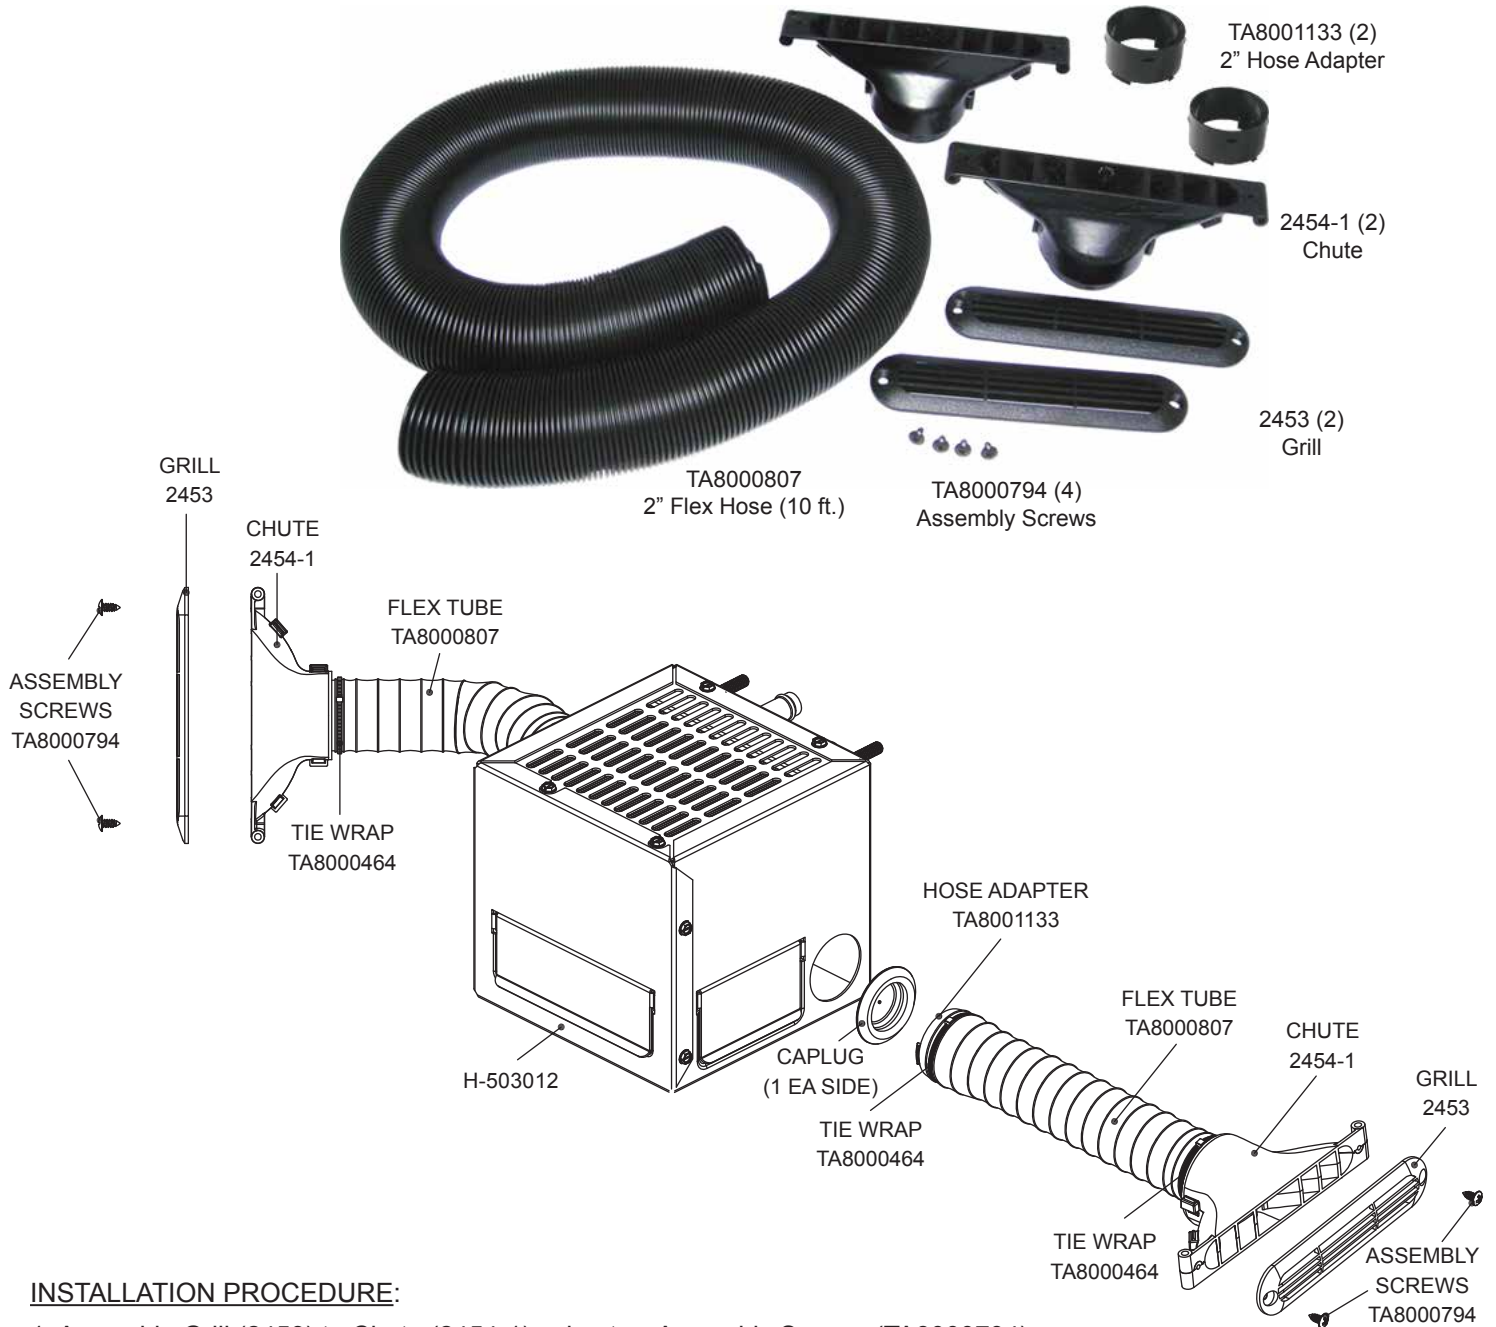

INSTALLATION PROCEDURE:

1. Assemble Grill (2453) to Chute (2454-1) using two Assembly Screws (TA8000794).
2. Assemble Flex Tube (TA8000807) over neck of Chute (2454-1) and secure in place with Tie Wrap (TA8000464). Assemble other end of Flex Tube over Adapter (TA8001133) and secure with Tie Wrap.
3. Repeat steps 1 and 2 for opposite side. Use extra Tie Wraps (TA8000464) to secure Hose to vehicle where needed.
4. Remove Caplug from each side of Heater Housing.
5. Snap Adapter into Housing.