


SPEEDAIRE 4ZK18A COMPACT AUTOMATIC FILTER DRAIN INSTALLATION INSTRUCTIONS

for
4ZK83A, 4ZK85A, 4ZL24A, 4ZL26A, 4ZL28A & 4ZL30A
 Compact Polycarbonate (with Guard) Filter/Regulator
 & Oil Removal (Coalescing) Filters

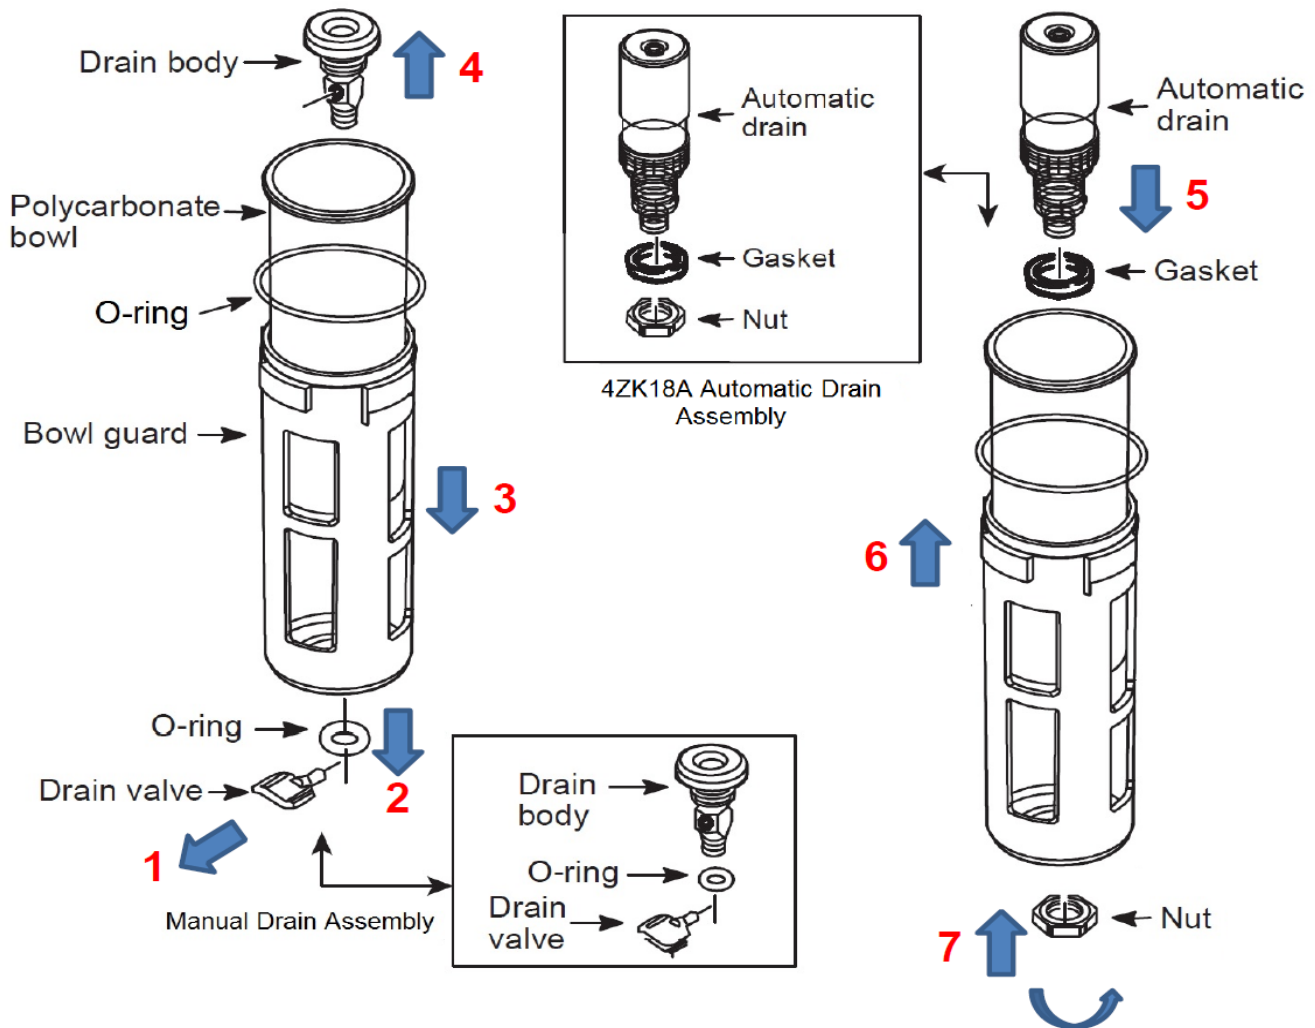

1. Remove the drain valve petcock with pliers.
2. Remove the O-ring from the drain stem with a screwdriver.
3. Separate the bowl guard from the polycarbonate bowl.
4. Lift the manual drain body up until it is completely out of the polycarbonate bowl.
5. Place the automatic drain with gasket into the body of the polycarbonate bowl and push it through until the threads are exposed out the bottom of the bowl.
6. Reassemble the bowl guard over the polycarbonate bowl.
7. Install the automatic drain nut. Tighten the nut until snug (do not over-tighten).