



# Fixed Mount


## Parts List:

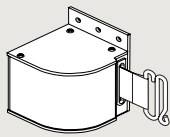

Fixed Mount



Wing Nut

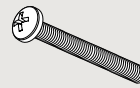

(1) 1" Bolt



Screw Driver



Goggles

## Required Tools

1. Familiarize yourself with all parts provided for assembly of unit to slotted upright. See Figure A.
2. Position unit behind slotted upright. Insert Wing Nuts on slotted upright. Rotate Wing Nut making sure it rests on both sides of slotted uprights. See Figure B.
3. Insert 1" bolt. See Figure C.
4. Tighten bolt with screwdriver. See Figure D.
5. Pull belt across isle to connect with another slotted upright. See Figure E.

