

EZ Purge®: How it Works

(U.S. patented and foreign patents pending)



Even for the world's largest water soluble purge dam 72", installation is just minutes!



In just three simple steps your purge dam is complete! The illustration is a large bore pipe, 24" in diameter.

Peel



Peel Liner To Expose Adhesive.

Insert





Insert EZ Purge® dam inside pipe.

Press



Press tape along circumference to inside of pipe wall.

The illustration is a small bore pipe, 6" in diameter.

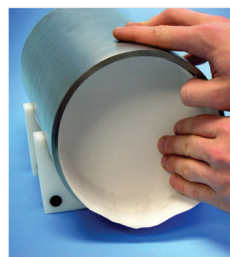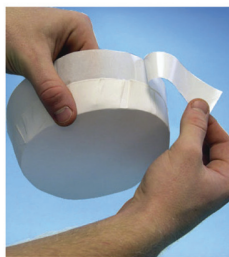

Helpful Hint:

If the water-soluble tape becomes dry, lightly moisten the tape with a dampened cloth or foam brush. The adhesive will be reactivated instantaneously.

