# AQUASPEC® FAUCETS

## MODEL - Z85700-XL SERIES KNEE ACTION VALVE



# TECHNICAL INFORMATION

**MAXIMUM PRESSURE: 125 PSI MAXIMUM TEMPERATURE**: 180° F CARTRIDGE STYLE - SELF CLOSING VALVE

**IMPORTANT** THE WATER SUPPLY LINES MUST BE THOROUGHLY FLUSHED BEFORE INSTALLATION TO PREVENT FOREIGN MATTER AND DEBRIS FROM CLOGGING AND/OR DAMAGING INTERNAL COMPONENTS AND THEREBY PRE-VENTING THE FAUCET FROM FUNCTIONING PROPERLY

♠ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

▲ ADVERTENCIA: Cáncer y daño reproductivo - www.P65Warnings.ca.gov

AVERTISSEMENT: Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov


#### INSTALLATION INSTRUCTIONS

- 1. SHUT OFF WATER SUPPLY AND DRAIN LINES.
- 2. DETERMINE ACTUAL MEASUREMENTS (WALL TO FRONT) AND USE MEASUREMENTS BELOW (FIGURE 1) AS A GUIDE.
- 3. PLACE COVER PLATE (#14) OVER VALVE BODY (#2) AND SECURE WITH WALL MOUNT SCREW (#3) AND NUT (#15)
- DRILL THREE (3) 9/32" DIAMETER HOLES IN WALL USING WALL BRACKET (#23) AS A GUIDE (FIGURE 2). MOUNT WALL BRACKET (#23) TO RECEIVE SUPLY PIPES FROM WALL TO CLAMP (#26).
- FIRMLY TIGHTEN SCREW (#24) AND WASHER (#25) INTO CLAMP (#26). ADJUST CLAMP (#26) IF NECESSARY FOR PIPE FIT.
- APPLY TEFLON TAPE OR PIPE JOINT COMPOUND TO THREADS. CONNECT WATER SUPPLY LINES, 1/2" NPT FOR 2 INLETS AND 1 OULTET ON VALVE BODY (#2).
- TURN ON WATER SUPPLY AND CHECK CONNECTIONS FOR LEAKING.
- TO ADJUST WATER FLOW, TIGHTEN ADJUSTMENT SCREW (#5) TO INCREASE FLOW. USE NUT (#6) TO LOCK AD-JUSTMENT SCREW IN PLÁCE.

# **MAINTENANCE**

YOUR ZURN FAUCET HAS A HIGHLY POLISHED NICKEL CHROME PLATED FINISH. CLEAN WITH SOAP AND WATER OR A MILD CLEANER WHICH IS SAFE FOR CHROME PLATING. DO NOT USE ACIDS OR TOILET BOWL CLEANER AS THEY WILL DAMAGE THE FINISH



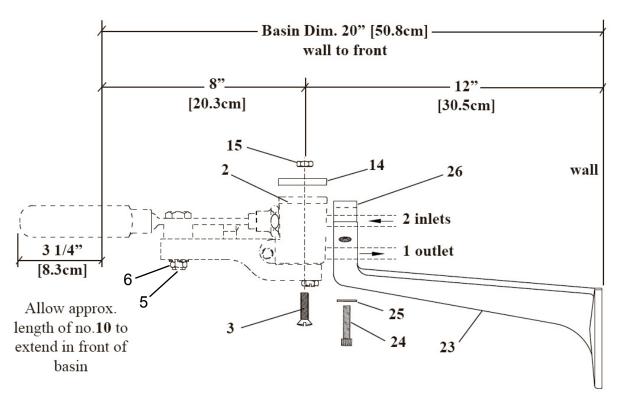

## **FIGURE 1**

