

Repair Parts Sheet

RC5 Series Hydraulic Cylinders RC51, RC53, RC55, RC57 & RC59

Document Number	Revision	Revision Date	Product Date Code Beginning With	
L4282	Rev. C	01/2022	С	

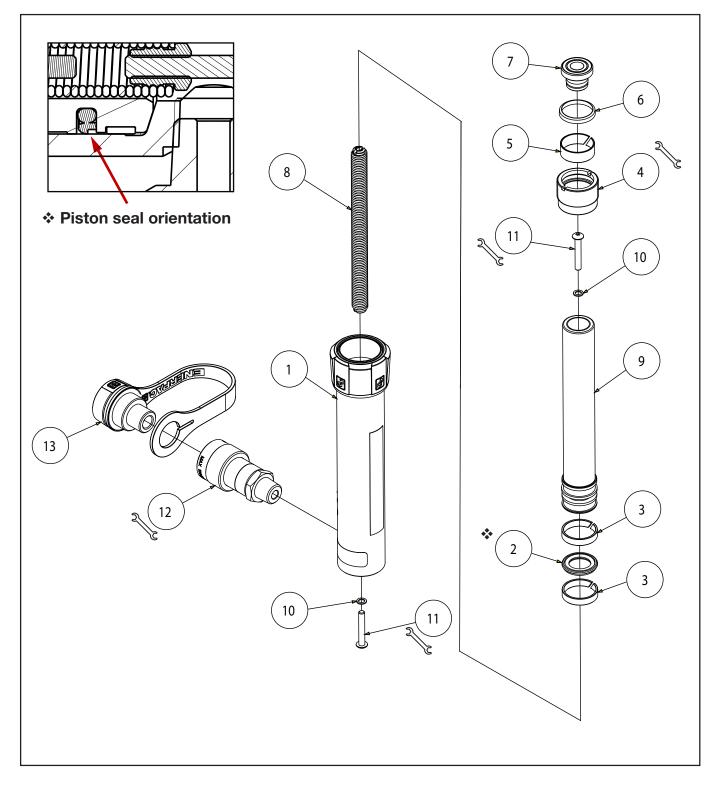


Figure 1, RC Hydraulic Cylinder, 5 Ton

	Repair Parts List, Figure 1										
Item	Description	Qty	RC51	Qty	RC53	Qty	RC55	Qty	RC57	Qty	RC59
1	Base	1	N/A								
2	Piston Seal	1	A •								
3	Wear Band, Plunger	1	A *	2	A *						
4	Stop Ring	1	RC5044								
5	Wear Band, Stop Ring	1	▲ *	1	▲ *	1	A *	1	A *	1	▲ *
6	Wiper	1	A X								
7	Saddle Assembly	1	A53G								
8	Spring Assembly	1	RC5K31	1	RC5K32	1	RC5K33	1	RC5K34	1	RC5K35
9	Plunger	1	RC51040	1	RC53040	1	RC55040	1	RC57040	1	RC59040
10	Copper Gasket	2		2		2		2		2	
11	Screw, #10-32 UNF x 1.25 inch Lg.	2	A								
12	Coupler	1	CR400								
13	Dust Cap ▲	1	CD411								
N/S	O-ring, coupler	1	A								
N/S	Enerpac Decal	1	A								
N/S	Warning Decal	1	A								
N/S	O-ring, saddle	1	A								
N/S	Thread Protector	1	A								

Notes:

- ▲ Indicated item included in and available as a part of the Repair Kit RC5NK0
- Indicated item included in and available as a part of the Spring Assembly
- Indicated item included in and available as packs of 10 units in Seal Kit RC5NKS (see below)
- ★ Indicated item included in and available as packs of 10 units in Wear Band Kit Plunger RC5NKB1 (see below)
- * Indicated item included in and available as packs of 10 units in Wear Band Kit Stop Ring RC5NKB2 (see below)
- ★ Indicated item included in and available as packs of 10 units in Wiper Kit RC5NKW1 (see below)

●★*

Kits only available in America



Item nr.	Torque/ remark
4	Secure with Loctite 222 and torque to 70-90 in-lbs [7.9-10.2 Nm]
11	Torque to 40-50 in-lbs [3.5-5.5 Nm]
12	Torque to 40-60 ft-lbs [54-81 Nm]
	Use Loctite 545 or Teflon Tape



www.enerpac.com