


## **Instructions For Use**



**Spring back** safety guards for safe top cuts




**3 Button** design for convenient tray cuts

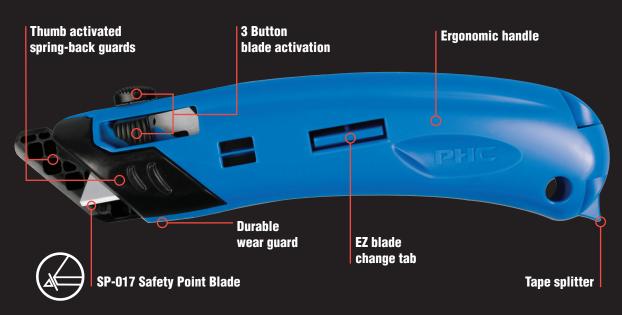

**Blade-less tape** splitting eliminates cut injuries

## EZ4 Guarded Spring-Back Safety Cutter AMBIDEXTROUS - For Right & Left Handed Users

## **Blade Change**



**Push quick change lever** and open safety cutter.



**Remove used blade** from blade retainer and dispose of safely.



Remove spare blade from blade compartment. Use only S Series replacement blades: #SP-017, SPD-017 or PBDSP017B.





**Insert new blade** underneath blade retainer, align blade notch with alignment tab. Close cutter.



For Information Call: (800) 229-2233 Email: info@phcsafety.com www.phcsafety.com



