



CHAIR ASSEMBLY INSTRUCTION GUIDE

for BEVCO INTEGRA CHAIRS 6000/9000 Series Tilt Models

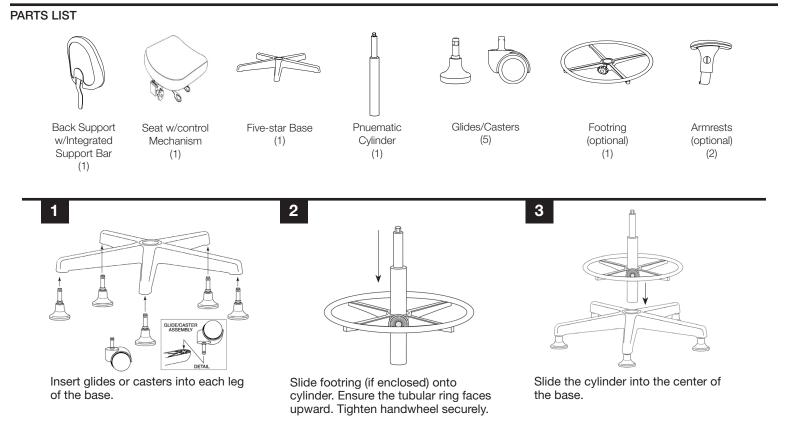

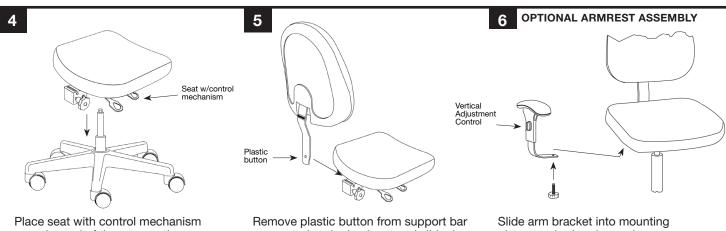



Place seat with control mechanism onto the end of the pneumatic cylinder. Sit on seat to secure fit onto cylinder. Remove plastic button from support bar connected to the backrest and slide the back support bar through the opening of the nylon insert on the control mechanism on back of seat. Tighten handwheel securely. Replace plastic button into hole in support bar. Slide arm bracket into mounting plate attached underneath seat. Tighten handwheel securely.