

Operating Instructions & Parts Manual

4WXT7

Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain instructions for future reference.

Speedaire® Pneumatic Hand Tapper 150 RPM

Description

Speedaire Pneumatic Hand Tapper has a die cast aluminum body with textured finish and taps holes from #10 to 7/16" diameter. Tool uses a system of quick change/quick release tap holders with clutches. Exhaust is directed away from the operator. The Speedaire Pneumatic Hand Tapper is an excellent tool for tapping beams, blocks and other large castings.

Unpacking

Check for shipping damage. If damage has occurred, a claim must be filed with carrier immediately. Check for completeness. Immediately report missing parts to dealer.

Specifications

Tap capacity	#10-7/16"
RPM	150
Spindle	B12
Operating pressure	70-100 PSI
CFM @ 90PSI	27
Min. hose size	3/8"
Quick connect stud	1/4" NPT
Length	9 5/8"
Height	7 1/16"
Width	1 13/16"
Weight	4.0 lbs

NOTE: Minimum required air compressor size for this tool is 3HP.

General Safety Information

▲ WARNING *For your own safety, read all of the instructions and precautions before operating tool.*

▲ CAUTION *Always follow proper operating procedures as defined in this manual—even if you are familiar with use of this or similar tools. Remember that being careless for even a fraction of a second can result in severe personal injury.*

▲ WARNING *Some dust created by power sanding, sawing, grinding, drilling and other*

construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm.

Some examples of these chemicals are:

- Lead from lead-based paints.
- Crystalline silica from bricks and cement and other masonry products.
- Arsenic and chromium from chemically-treated lumber.

Your risk from these exposures vary, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area and work with approved safety equipment. Always wear **OSHA/NIOSH** approved, properly fitting face mask or respirator when using such tools.

1. Read Operating Instructions. Become familiar with all the instructions and warnings before operating this tool.
2. Wear safety glasses complying with United States ANSI Z87.1. Everyday glasses have only impact resistant lenses. They are NOT safety glasses.
3. Hearing protection should be used when the noise level exposure equals or exceeds an 8 hour time-weighted average sound level of 85dBA. If you are unable to determine your noise level exposure, the use of hearing protection is recommended.
4. Avoid prolonged exposure to vibration. Pneumatic tools can vibrate during use. Prolonged exposure to vibration or very repetitive hand and

arm movements can cause injury.

Discontinue the use of any tool if you experience tingling, numbness, discomfort or pain in your hands or arms. Consult your physician before resuming use of tool.

5. Use only recommended tap holders (See Accessories, page 5).
6. Do not use oxygen, combustible gas or high pressure compressed gas as the air supply for the tool.
7. Do not use this tool in potentially explosive atmospheres.

Operation

Refer to Figures 1, 2 and 3.

AIR SUPPLY LINE

Refer to Figure 1.

▲ WARNING *Always disconnect tool from air supply when servicing or adjusting tool and when tool is not in use.*

1. The air tool operates on compressed air at pressures from 70 to 100 PSI.
2. Never exceed maximum pressure.
3. Air operated tools require clean, dry, lubricated, compressed air to ensure top performance, low maintenance and long life.
4. Dirt and abrasive materials present in all air lines will damage tool O-rings, valves and cylinders.
5. Moisture will reduce tool performance and life if not removed from compressed air.
6. A filter-regulator-lubricator system is required and should be located as close to tool as possible (see Figure 1). A distance of less than 15 feet is recommended.

E
N
G
L
I
S
H

Speedaire® Pneumatic Hand Tapper 150 RPM

E
N
G
L
I
S
H

Operation (Continued)

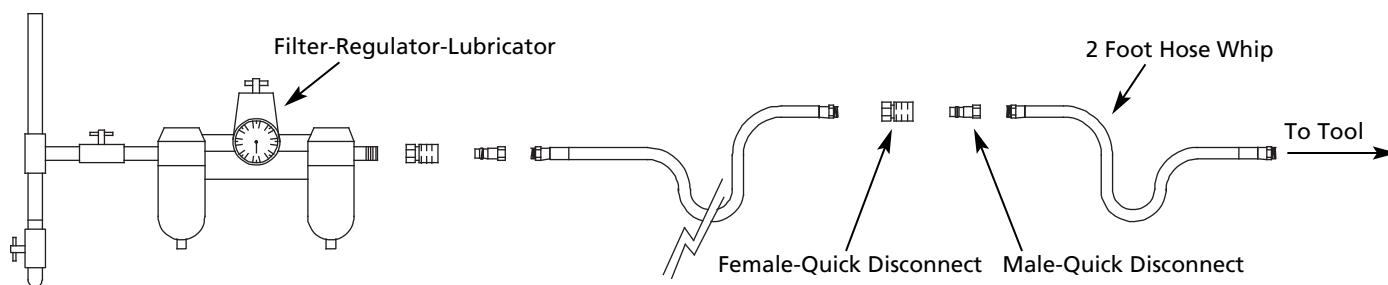


Figure 1 – Air Supply Line

7. Keep air filter clean. A dirty filter will reduce the air pressure to the tool causing a reduction in power and efficiency.
8. The air supply system must be able to provide air pressure of 70 to 100 pounds per square inch at the tool.
9. The lubricator should be filled with a non-detergent air tool oil.
10. All hoses and pipes in the air supply system must be clean and free of moisture and foreign particles.
11. The air pressure should be properly regulated.
12. Different workpiece materials and different tap sizes will require different operating pressure.
13. Be sure all connections in air supply system are sealed to prevent air loss.

ASSEMBLY

Refer to Figures 2 and 3.

1. Slide grip (Fig. 3, Ref. No. 5) over the chuck and onto the barrel (Figure 3, Ref. No. 7).
2. Position grip at 90° to the left of body and tighten grip in position by turning handle clockwise. (Position grip to the right if you are left handed).

3. Slide tap into tap holder (not included) until tap locks in place. Tap can be removed by simultaneously depressing flange and pulling out tap.

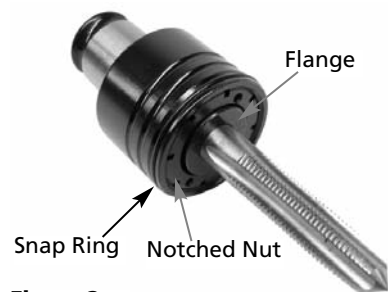


Figure 2

4. Insert tap holder with tap into chuck (Fig. 3, Ref. No. 1). Pull back chuck sleeve, insert tap holder with tabs aligned to slots in chuck sleeve, and then release sleeve.

OPERATING PROCEDURE

Refer to Figure 3.

1. Bring the hand tapper with tap to the hole to be tapped.
2. Place the tip of the tap on the hole and depress the operating lever (Ref. No. 33) to forward (F). The tap will self-center and begin cutting. Let the tapper guide the tap into the hole.

3. The speed is controlled by the amount the lever is depressed. However, this will also reduce the power.

4. The greatest potential for tap breakage is tipping the tool to one side. To prevent this from happening, hold the grip with your left hand and your left elbow against or supported on the workpiece. Use the right hand to pull the lever. This will greatly reduce the chance of tap breakage. (Reverse the above instructions if you are left handed.)

5. After tapping to the required depth, press lever to reverse (R). The tap will reverse out from the hole.

6. If the tap holder "clicks" or "ratchets", the tap holder clutch torsion needs to be adjusted.

ADJUST TAP HOLDER CLUTCH

Refer to Figure 2:

1. Remove the snap ring from the groove of the tap holder.
2. Turn the notched nut clockwise to increase torsion, counterclockwise to decrease torsion.
3. Replace snap ring into the groove of the tap holder.

Speedaire Operating Instructions and Parts Manual

Model 4WXT7**Operation (Continued)**

4. Consult machinery reference books or your machine tool dealer for information concerning tap lubricant types, tapping speeds and tap types.

OPERATING PRESSURE

1. Use only enough air pressure to perform the operation. Air pressure in excess of that which is required will make the operation inefficient and may cause premature wear or damage to the tool.

2. Maximum air pressure is 100 PSI.

Maintenance


Lubricate tool daily with quality air tool oil (Stock No. 4ZF22). If no air line lubricator is issued, place five to six drops of oil into inlet cap (Ref. No. 29) of tool every day.

**E
N
G
L
I
S
H**

Troubleshooting Chart

Symptom	Possible Cause(s)	Corrective Action
Tool runs slowly or will not operate	<ol style="list-style-type: none"> 1. Grit in tool 2. No oil in tool 3. Low air pressure 4. Air hose leaks 5. Pressure drops 6. Excessive pressure drop 7. Worn vanes in motor 8. Worn bearing in motor 	<ol style="list-style-type: none"> 1. Flush the tool with air tool oil 2. Lubricate the tool according to the lubrication instructions in this manual 3. Adjust regulator in air system to 90 PSI 4. Tighten and seal hose fittings 5. Shorten length of hose; long runs may require a hose with an I.D. of 1/2" or larger 6. Air compressor not large enough; must be at least 3HP 7. Replace vanes 8. Replace bearings
Moisture blowing out of tool exhaust	Water in air compressor tank	Drain tank (See air compressor manual)
Tool operates rapidly but will not tap	Damage to gears	Inspect and replace any damaged gears
Tool leaks air	<ol style="list-style-type: none"> 1. Damaged or worn trigger valve 2. Damaged or worn O-rings 	<ol style="list-style-type: none"> 1. Check and replace trigger valve (Ref. Nos. 30, 31 and 32) 2. Check and replace o-rings (Ref. Nos. 6 and 25)
Clutch slips and tap will not turn	<ol style="list-style-type: none"> 1. Tapholder clutch torsion needs to be adjusted 2. No tap lubrication 3. Dull tap 4. Hole and tap misaligned 5. Hole diameter too small 6. Wrong tap for workpiece material 	<ol style="list-style-type: none"> 1. Adjust tap holder clutch torsion 2. Apply lubrication to tap 3. Replace tap 4. Reposition hand tapper 5. Enlarge hole 6. Replace tap

SPEEDAIRE



For Repair Parts, call 1-800-323-0620

24 hours a day – 365 days a year

Please provide following information:

- Model number
- Serial number (if any)
- Part description and number as shown in parts list

**E
N
G
L
I
S
H**


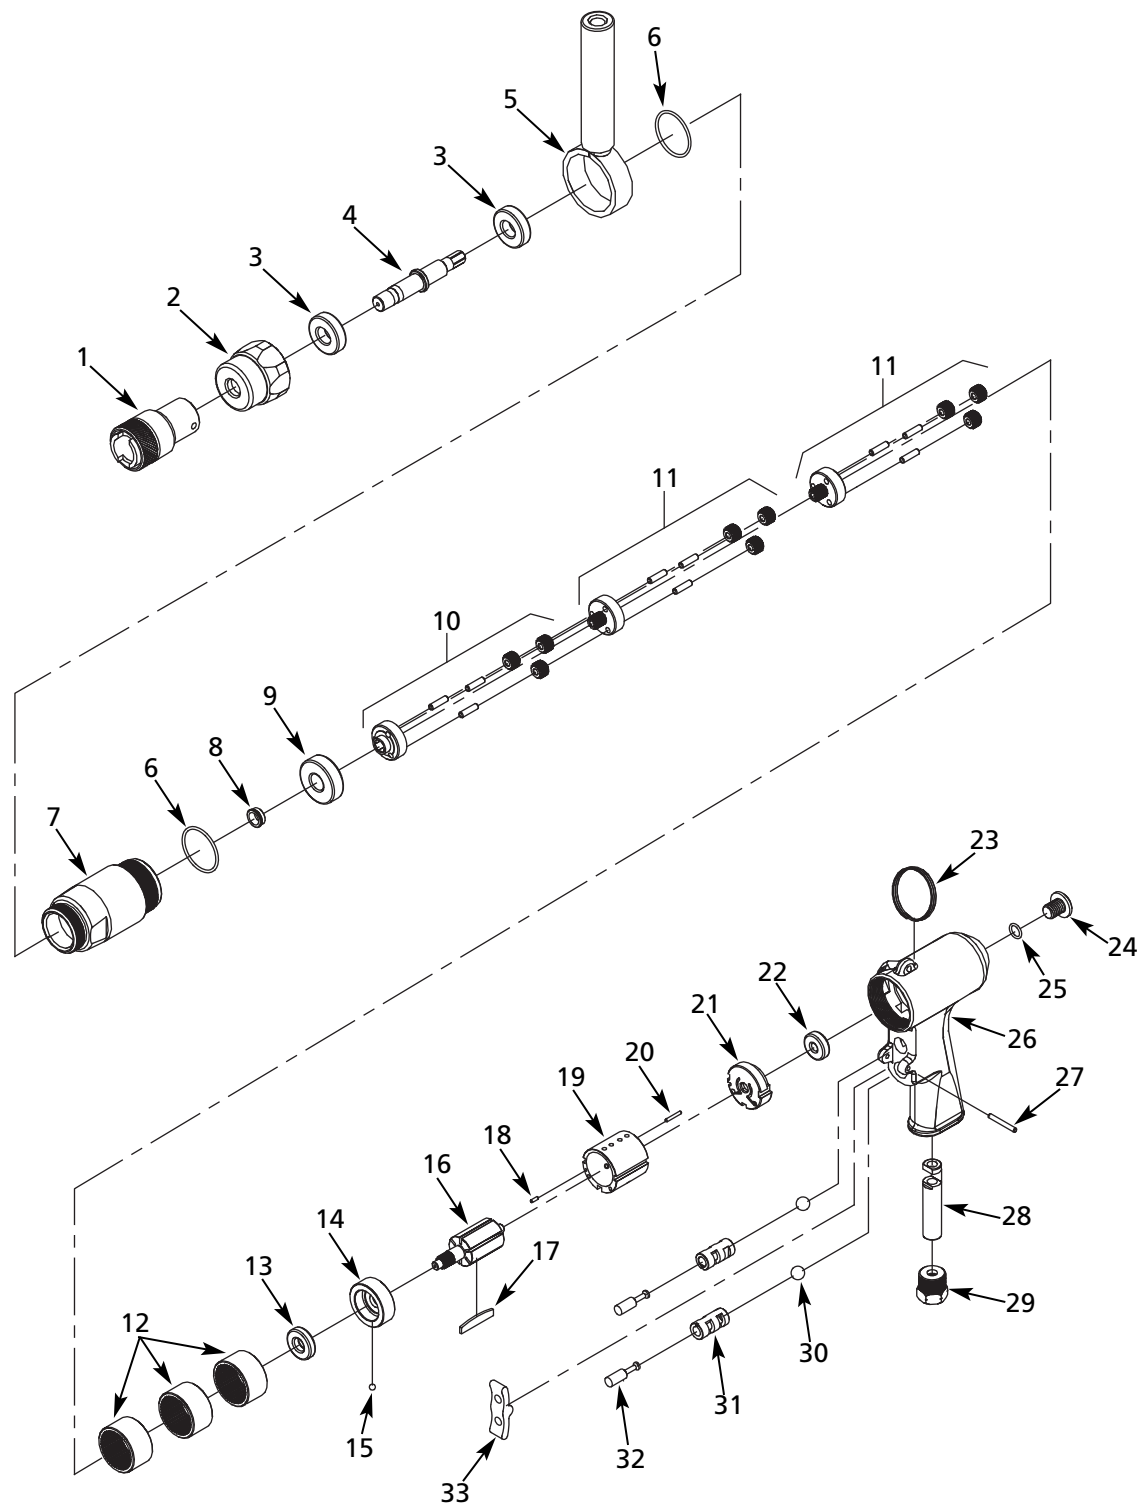


Figure 3 – Repair Parts Illustration for Pneumatic Hand Tapper 150 RPM



Speedaire Operating Instructions and Parts Manual

Model 4WXT7**Repair Parts List for Pneumatic Hand Tapper 150 RPM**


Reference Number	Description	Part Number	Quantity
1	Chuck	31287.00	1
2	Nose	31288.00	1
3	6001ZZ Ball bearing	1L011	2
4	Driver shaft	31289.00	1
5	Grip	31290.00	1
6	29.87 x 1.8mm O-Ring	31291.00	2
7	Barrel	31292.00	1
8	Bushing	31293.00	1
9	6201ZZ Ball bearing	1L014	1
10	Carrier assembly	31294.00	1
11	Planetary gear assembly	31295.00	2
12	Ring gear	31297.00	3
13	R6ZZ Ball bearing	1L038	1
14	Front plate	31299.00	1
15	4mm Steel ball	09346.00	1
16	Rotor	31300.00	1
17	Vane (set of 6)	31301.00	1
18	2 x 6mm Dowel pin	31302.00	1
19	Cylinder	31303.00	1
20	2 x 14mm Dowel pin	31304.00	1
21	Rear plate	31305.00	1
22	626ZZ Ball bearing	5U593	1
23	Hook	31306.00	1
24	Screw	31307.00	1
25	8 x 1.5mm O-Ring	31308.00	1
26	Body	†	1
27	3 x 24mm Spring pin	08082.00	1
28	Air hose	31309.00	1
29	Air inlet	31310.00	1
30	9mm Plastic ball	31311.00	2
31	Valve body	31312.00	2
32	Valve plunger	31313.00	2
33	Switch lever	31314.00	1
Recommended Accessories			
Δ	#10 Tap holder with clutch	4WXU5	1
Δ	#12 Tap holder with clutch	4WXU6	1
Δ	1/4" Tap holder with clutch	4WXU7	1
Δ	5/16" Tap holder with clutch	4WXU8	1
Δ	3/8" Tap holder with clutch	4WXU9	1
Δ	3/8" Drill chuck	4WXV2	1

(*) Standard hardware item, available locally.

(†) Not available as repair part.

(Δ) Not shown

E
N
G
L
I
S
H**SPEEDAIRE**
PNEUMATIC



Speedaire® Pneumatic Hand Tapper 150 RPM

E
N
G
I
N
E
E
R
S

LIMITED WARRANTY

DAYTON ONE-YEAR LIMITED WARRANTY. SPEEDAIRE® PNEUMATIC HAND TAPPER 150 RPM, MODELS COVERED IN THIS MANUAL, ARE WARRANTED BY DAYTON ELECTRIC MFG. CO. (DAYTON) TO THE ORIGINAL USER AGAINST DEFECTS IN WORKMANSHIP OR MATERIALS UNDER NORMAL USE FOR ONE YEAR AFTER DATE OF PURCHASE. ANY PART WHICH IS DETERMINED TO BE DEFECTIVE IN MATERIAL OR WORKMANSHIP AND RETURNED TO AN AUTHORIZED SERVICE LOCATION, AS DAYTON DESIGNATES, SHIPPING COSTS PREPAID, WILL BE, AS THE EXCLUSIVE REMEDY, REPAIRED OR REPLACED AT DAYTON'S OPTION. FOR LIMITED WARRANTY CLAIM PROCEDURES, SEE "PROMPT DISPOSITION" BELOW. THIS LIMITED WARRANTY GIVES PURCHASERS SPECIFIC LEGAL RIGHTS WHICH VARY FROM JURISDICTION TO JURISDICTION.

LIMITATION OF LIABILITY. TO THE EXTENT ALLOWABLE UNDER APPLICABLE LAW, DAYTON'S LIABILITY FOR CONSEQUENTIAL AND INCIDENTAL DAMAGES IS EXPRESSLY DISCLAIMED. DAYTON'S LIABILITY IN ALL EVENTS IS LIMITED TO AND SHALL NOT EXCEED THE PURCHASE PRICE PAID.

WARRANTY DISCLAIMER. A DILIGENT EFFORT HAS BEEN MADE TO PROVIDE PRODUCT INFORMATION AND ILLUSTRATE THE PRODUCTS IN THIS LITERATURE ACCURATELY; HOWEVER, SUCH INFORMATION AND ILLUSTRATIONS ARE FOR THE SOLE PURPOSE OF IDENTIFICATION, AND DO NOT EXPRESS OR IMPLY A WARRANTY THAT THE PRODUCTS ARE MERCHANTABILITY, OR FIT FOR A PARTICULAR PURPOSE, OR THAT THE PRODUCTS WILL NECESSARILY CONFORM TO THE ILLUSTRATIONS OR DESCRIPTIONS. EXCEPT AS PROVIDED BELOW, NO WARRANTY OR AFFIRMATION OF FACT, EXPRESSED OR IMPLIED, OTHER THAN AS STATED IN THE "LIMITED WARRANTY" ABOVE IS MADE OR AUTHORIZED BY DAYTON.

Technical Advice and Recommendations, Disclaimer. Notwithstanding any past practice or dealings or trade custom, sales shall not include the furnishing of technical advice or assistance or system design. Dayton assumes no obligations or liability on account of any unauthorized recommendations, opinions or advice as to the choice, installation or use of products.

Product Suitability. Many jurisdictions have codes and regulations governing sales, construction, installation, and/or use of products for certain purposes, which may vary from those in neighboring areas. While attempts are made to assure that Dayton products comply with such codes, Dayton cannot guarantee compliance, and cannot be responsible for how the product is installed or used. Before purchase and use of a product, review the product applications, and all applicable national and local codes and regulations, and be sure that the product, installation, and use will comply with them.

Certain aspects of disclaimers are not applicable to consumer products; e.g., (a) some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you; (b) also, some jurisdictions do not allow a limitation on how long an implied warranty lasts, consequently the above limitation may not apply to you; and (c) by law, during the period of this Limited Warranty, any implied warranties of implied merchantability or fitness for a particular purpose applicable to consumer products purchased by consumers, may not be excluded or otherwise disclaimed.

Prompt Disposition. A good faith effort will be made for prompt correction or other adjustment with respect to any product which proves to be defective within limited warranty. For any product believed to be defective within limited warranty, first write or call dealer from whom the product was purchased. Dealer will give additional directions. If unable to resolve satisfactorily, write to Dayton at address below, giving dealer's name, address, date, and number of dealer's invoice, and describing the nature of the defect. Title and risk of loss pass to buyer on delivery to common carrier. If product was damaged in transit to you, file claim with carrier.

Manufactured for Dayton Electric Mfg. Co., 5959 W. Howard St., Niles, Illinois 60714-4014 U.S.A.

**Manufactured for Dayton Electric Mfg. Co.
Niles, Illinois 60714 U.S.A.**

SPEEDAIRE®

