

CTX200 / *CTX 200P


POCKET CAT™ NETWORK CABLE TESTER

Tests CAT3, 5, 5e, 6, 6A, & 7 Ethernet Cables to TIA568 Specs • Tests COAX Cables • Locates Cables*

**BNC Terminator
Included**



Cable Diagrams Inside

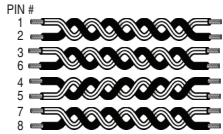

**WARNING!!!
DO NOT USE ON LIVE CIRCUITS!!**

LIMITED WARRANTY

The manufacturer warrants to the original consumer that this product is in good working order for a period of one year from the date of manufacture or the date of purchase. During this period, the product will be repaired or replaced without charge for either parts or labor. **The warranty DOES NOT cover damage caused by connecting tester to high voltage sources such as telephones or Power over Ethernet (PoE).** Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser.

FEATURES

- ✓ Tests and tones both RJ45-CAT5/6 and coax cables.
- ✓ Ruggedized for field use. Small and easy to carry.
- ✓ PASS/FAIL results appear in one second.
- ✓ Each pair's status is highlighted.
- ✓ Complete TIA568 test performed. Continuity, opens / shorts, reversals and split pairs.
- ✓ Full featured probe for tracing cables and troubleshooting.
- ✓ Auto-off (12 seconds) to conserve battery life.
- ✓ Low battery indicator.
- ✓ Belt clip, battery (9V) and pouch included.

QUICK START: CABLE TESTING

Purpose

Ethernet cables have 4 pairs of wires ("twisted pairs"). It is important that the pairs correctly go to connector pins 1,2 ; 3,6 ; 4,5 ; and 7,8. The Pocket CAT tests for the proper pairing and if there is an error it will report it to you ("split pairs").

Connecting cables to the Tester

Installed cables: Connect the Main unit to the wall jack, then connect the Remote to the patch panel or far-end wall jack.

Patch cables: Attach the Main unit and Remote directly to the cable ends.

Power ON and Test

Press the ON button. Press again to begin test. When the PASS/FAIL LEDs light, press the FAULT CHECK button to isolate any problems to an individual pair.

Coax Testing Coax is displayed using the 4/5 LEDs. The coax remote is in the pouch.

QUICK START: CABLE LOCATING WITH TONE

Purpose

Tone is used to locate a cable's far end. A tone is placed on the cable's "near end" by the Pocket CAT Main unit. The probe locates the tone at the far end of the cable.

Connecting cables to the Tester

Plug the cable into the tester's Main unit.


Power ON and Tone:

Press the ON button. Hold the TONE button for 7 secs to turn ON the tone. Press the TONE button repeatedly to select the pair you wish to tone. The tone is loudest when you select the entire cable (including the shield).

CONNECTING THE POCKET CAT


Testing patch cables

Slide Remote Connector out from base of Pocket CAT, then connect one end of the cable to the Remote Connector, and the other end to the Pocket CAT.

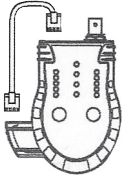

Testing installed cables

Slide Remote Connector out from base of Pocket CAT, then connect the far end of the cable to the Remote Connector, and the other end to the Pocket CAT. **NOTE:** The Remote Connector for COAX testing is located in the pouch.



POCKET CAT FACEPLATE

Pass/Fail Indicator

- FAIL
- PASS

Pair/Shield Tested (Coax uses 4/5)

- 1 & 2
- 3 & 6
- 4 & 5 (COAX)
- 7 & 8
- SHIELD

ON TEST (press to test all pairs automatically)

FAULT CHECK TONE (press to test pairs individually. Hold 7 secs for tone. Press again to select pair.)

Remote Connector (push to slide or remove)

Legend:

- OPEN: A wire is disconnected
- SHORT: A wire makes contact with another wire
- CROSS (REVERSAL): A twisted pair gets flipped on one side of the cable
- SPLIT: One wire from each of two different pairs gets swapped on both ends of the cable.


TESTING RJ45 AND COAX CABLES

Power ON and TEST: Press the ON button. Press again to commence the test. The bright, blue PASS LED indicates the cable has passed. If the FAIL LED lights, press the FAULT CHECK button to isolate problems to an individual pair. See back for more examples.

EXAMPLE: CABLE PASSED TEST. ALL 4 PAIRS AND SHIELD ARE WIRED.

LEDs

- ON
- OFF
- BLINK

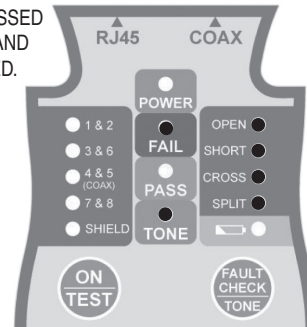

Coax cable: LEDs 4/5 are used for testing.

If FAIL, press FAULT CHECK to isolate problem to an individual pair(s).


USING TONE TO LOCATE A CABLE END

Power ON and TONE: Hold the TONE button for 7 secs to turn ON the tone. Press the TONE button repeatedly to select the pair(s) you wish to tone (or select them all). Coax cable uses pair 4/5 for tone. Note: Requires an inductive probe to detect tone (included in this kit).

EXAMPLE: TONE "ON" (ALL PAIRS + SHIELD)

LEDs

- ON
- OFF
- BLINK

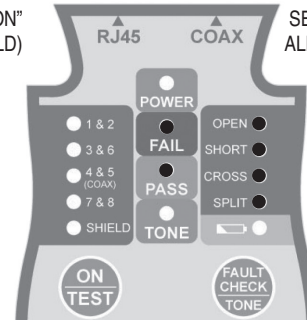

SELECT A SINGLE PAIR OR ALL PAIRS USING THE TONE BUTTON.

Hold 7 secs for tone. Press again to select pair(s).

POCKET CAT PROBE OPERATION*




*CTX200P comes with the probe. The filtered probe detects the tone from the Main unit.

- Ultrabright LED shines from the tip of the probe.
- Volume control is on the back of the probe.
- Press to activate the probe's circuitry and light the ultrabright LED on the tip
- The "Tone" LED is a visual indication that the tone is detected.
- "60HZ" LED warns that 60HZ (AC voltage) is present and should be avoided.
- 9V battery


TESTING EXAMPLES: COAX

The Pocket CAT uses LED 4&5 to display the status of a coax cable test. Connect the near end of the cable to the BNC connector. Connect the far end to the coax terminator (pouch).

Good Cable

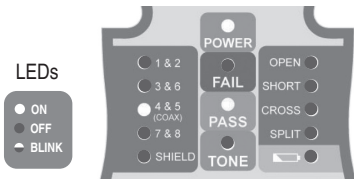


Short in Cable

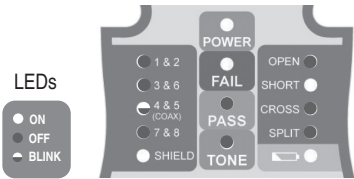



TESTING EXAMPLES: ETHERNET

Ethernet cables have 4 pairs of wires ("twisted pairs"). It is important that the pairs correctly go to connector pins 1,2; 3,6; 4,5; and 7,8. The Pocket CAT tests for the proper pairing and if there is an error it will report it to you. The following examples are based on EIA/TIA 568B (the most popular ethernet wiring standard).



RJ45 SOCKET/PLUG
PIN DIAGRAM

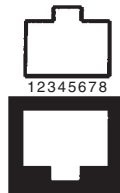



Good Cable

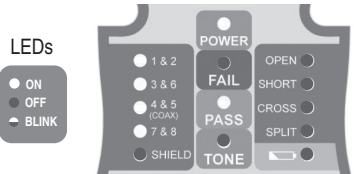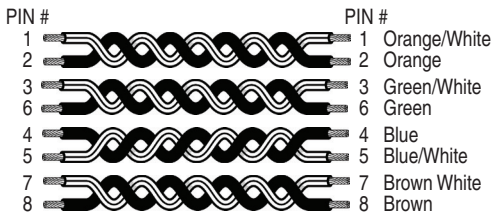



Open on Pair 1-2

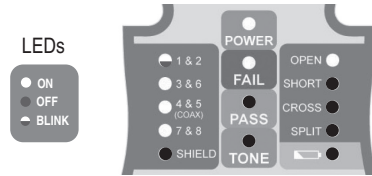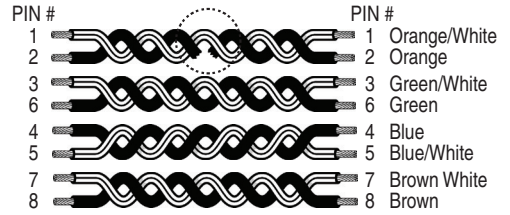

Split Pairs (1-2 & 3-6)

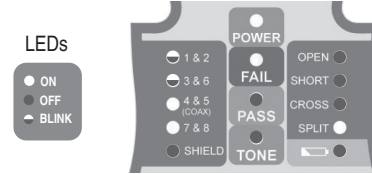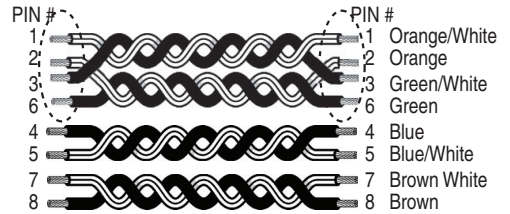

Short on Pair 3-6

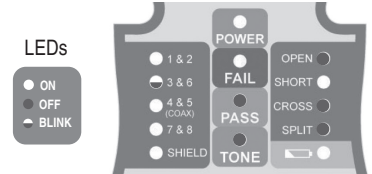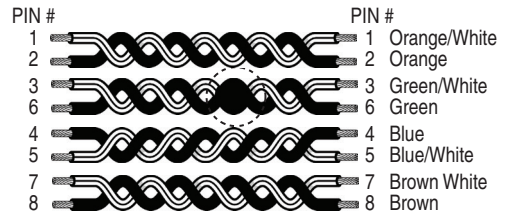

Crossed Pairs (4-5 & 7-8)

