

Handheld Digital Tachometer DT-2100 Specialized Software

Instruction Manual

Be sure to read before use.

Precaution

- All the rights including copyrights related to the tachometer "DT-2100", specialized software, and its relevant documents belong to NIDEC-SHIMPO CORPORATION.
- For other precautions, refer to the terms of use described in this instruction manual.
- Some specifications differ depending on the sales area of the DT-2100.

Contents

1. Introduction	2
2. Software Operation Requirements	2
3. Installation	3
4. Starting Application	5
5. Main Screen	6
5.1 USB Connection Status	6
6. Continuous Data Import Screen	7
6.1. Measurement Display	8
6.2 Measurement Results	9
6.3 CSV File Operation	12
7. Graph Screen	13
7.1. Graph Drawing	14
8. Continuous Data Import Screen	16
8.1 Continuous Memory	16
8.2 Each Memory	17
8.3 Statistics Memory	17
8.4 CSV File Operation	17
9. SET_USER Screen	18
10. SET_SYSTEM Screen	19
11. SEL_USER Screen	20
12. Error Message List	21
13. Terms of Use	24
14. Communication Commands	25

1. Introduction

Thank you for purchasing the Handheld Digital Tachometer "DT-2100" (hereinafter referred to as the DT-2100).

This instruction manual summarizes the operation procedure of the DT-2100 specialized software.

2. Software Operation Requirements

The software operation requirements for the DT-2100 specialized software is as follows:

Software Operation requirements

- DOS/V compatible machines
- Microsoft Windows® 7* (Japanese/English environment) (32 bit/64 bit)
- Microsoft Windows® 8* (Japanese/English environment) (32 bit/64 bit)
- Required Memory 2GB RAM

*Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Communication method: RS-232C (Virtual COM port)

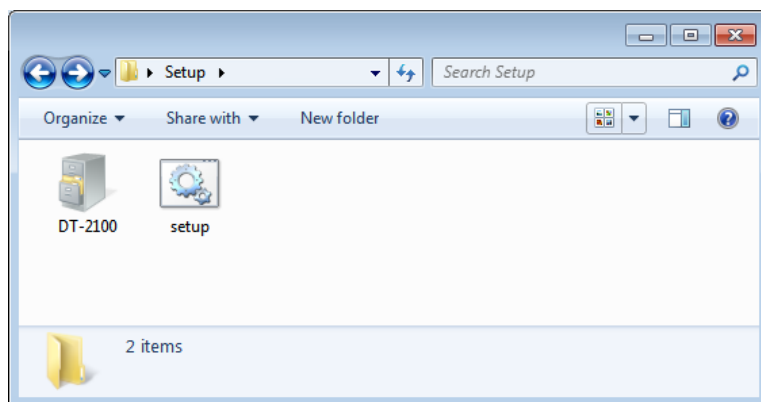
Communication protocol

Baud rate	38400bps
Data	8bit
Parity	None
Stop bit	1bit
Flow control	None


3. Installation

(1) Application installation

Double click setup.bat in the installation media "setup" folder to execute installation.



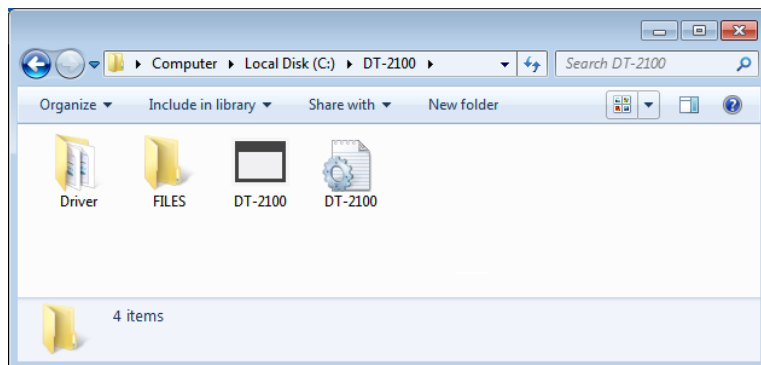When installation is completed, the following files and folders are created under "C:\DT-2100".



(2) File configuration


Installation destination	Folder		Remark
C drive	C:\DT-2100	DT-2100.exe	Execution file
		DT-2100.ini	Setting value save file
		FILES	Used for saving the CSV file Initial folder to be specified at the time of saving
		Driver	USB driver

(3) USB driver installation


When connecting a USB device to the PC where the DT-2100 has been installed, the USB driver is automatically installed.
Wait for several minutes until the installation is completed.

(4) COM port setting

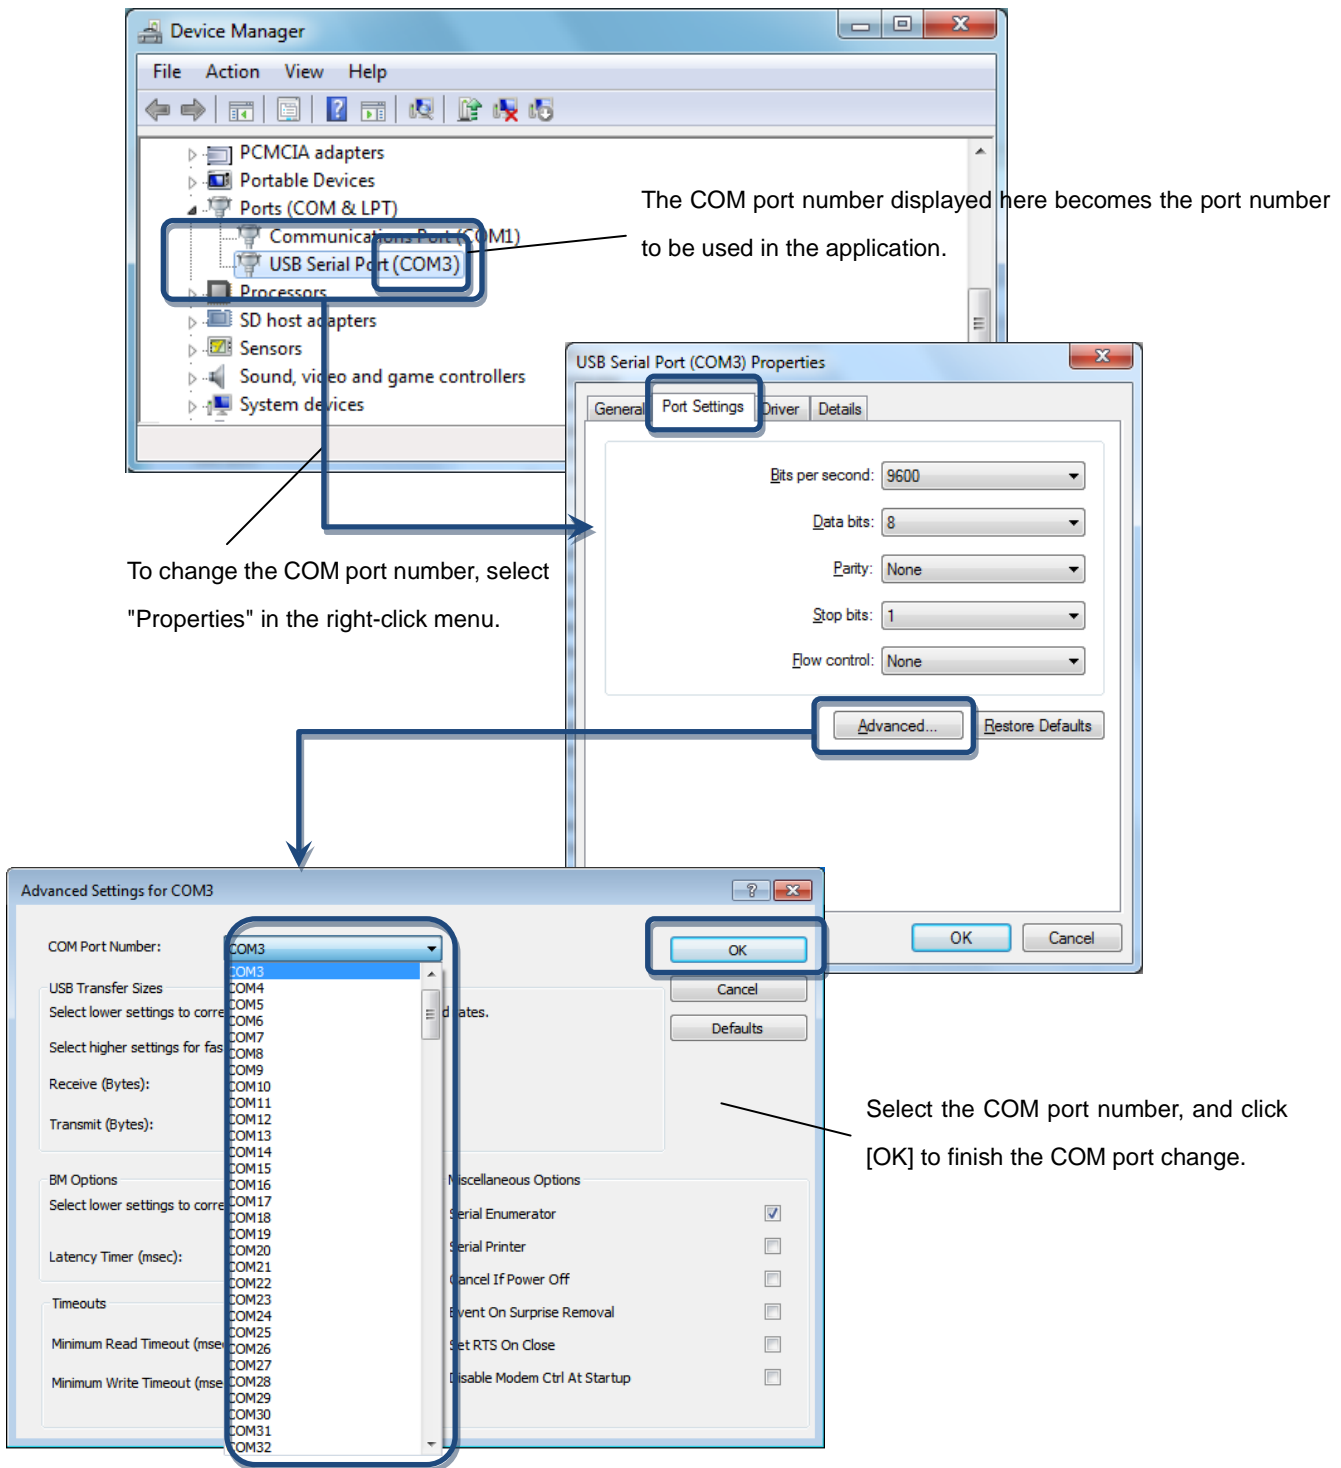Select "USB Serial Port" created under [Control Panel] - [Device Manager], and start to set the port.




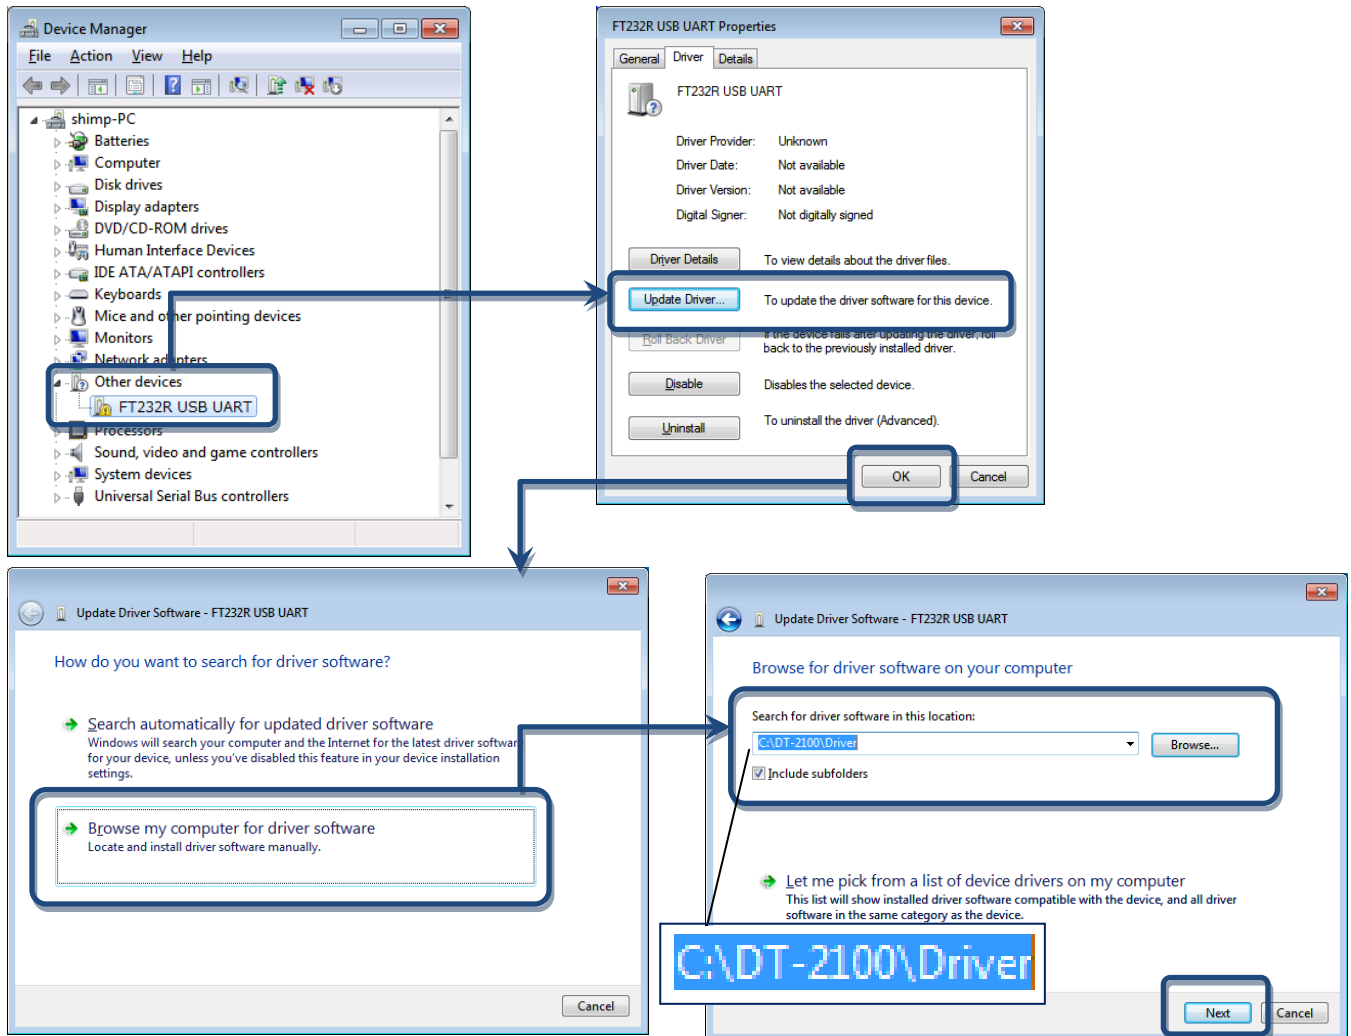If the driver is not recognized correctly, perform [Update Driver] according to the following procedure.



4. Starting Application

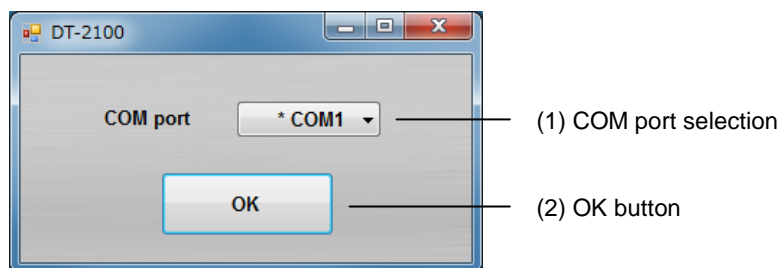Double click "DT-2100.exe" in the installation folder to start application.




(1)COM port selection*	Select from among COM1 to COM15. Detects the available ports automatically, and attaches "*" before the COM number.
(2)OK button	Opens the selected COM port, and displays the main screen.

*Label and message descriptions depend on the language setting. (same as those for other screens)

*The initial language setting is English. From the next startup, the application starts with the language set when last closed.

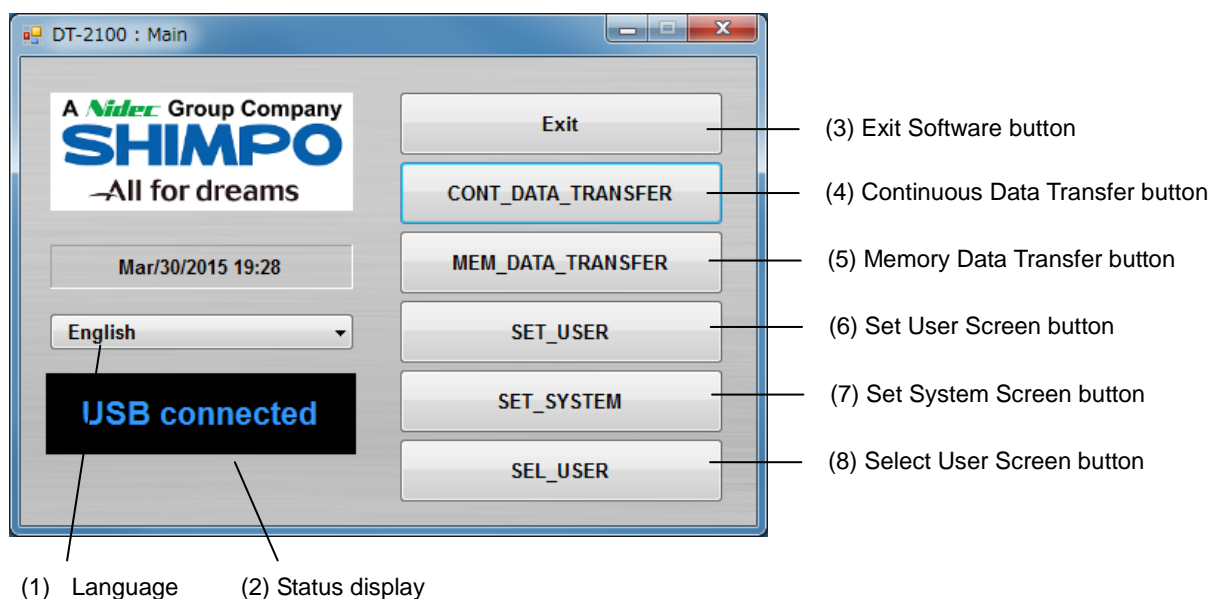5. Main Screen



(1) Language selection	Select the language from Japanese or English.
(2) Status display	Displays the USB connection status.
(3) Exit button	Exits the application.
(4) CONT_DATA_TRANSFER button	Displays the Continuous Data Mode screen.
(5) MEM_DATA_TRANSFER button	Displays the Memory Mode screen.
(6) SET_USER button	Displays the SET_USER screen.
(7) SET_SYSTEM button	Displays the SET_SYSTEM screen.
(8) SEL_USER button	Displays the SEL_USER screen.

5.1 USB Connection Status

Check the connection status with the DT-2100 in the status display screen.

USB connected

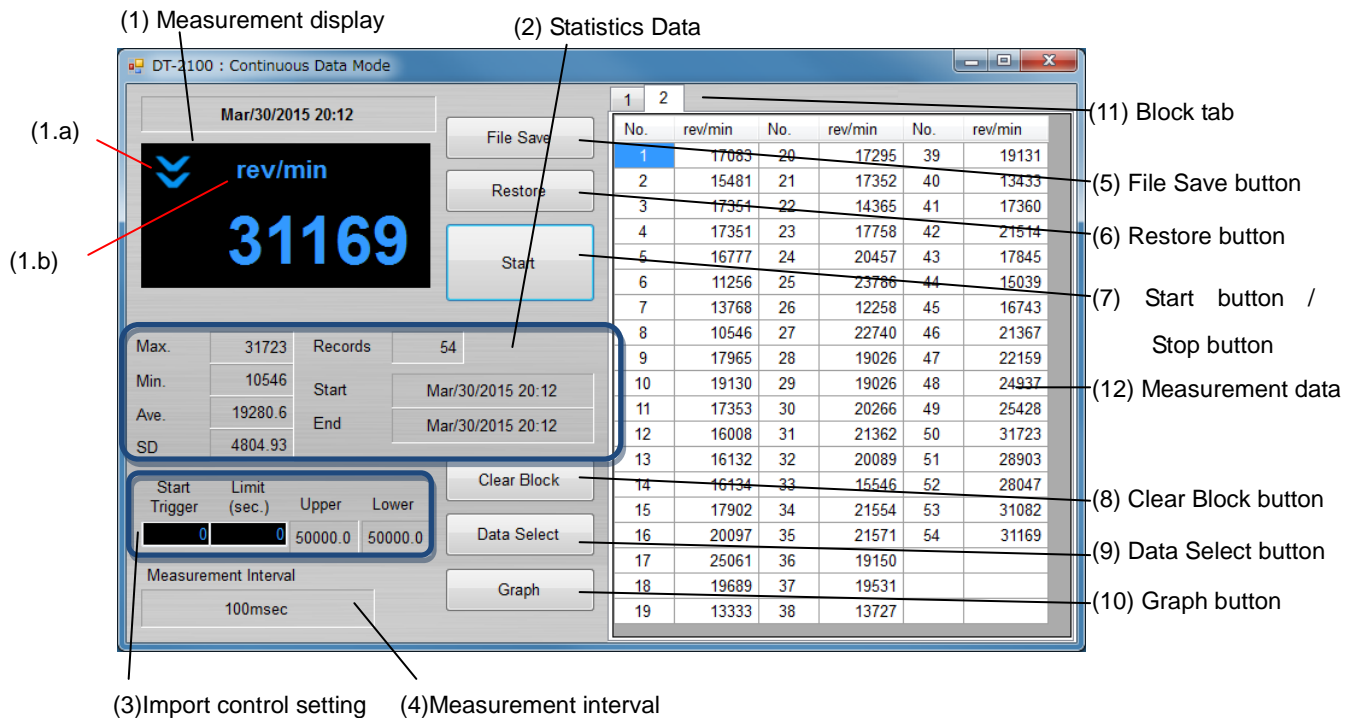
Connected

USB disconnected

Disconnected

6. Continuous Data Import Screen

Select the "CONT_DATA_TRANSFER" button in the menu to display the continuous data import screen.



(1) Measurement display	<p>(1.a) Upper/lower judgment marks: Compared to the values specified in the user setting, indicates the upper limit mark when the upper limit value is less than the measurement value, and the lower limit mark when the lower limit value is more than the measurement value.</p> <p>(1.b) Measurement unit: Indicates the unit specified in the user setting, and indicates "OVER" when the measured value exceeds the measurement range.</p> <p>Measurement value: Indicates the measurement value (6 digits + decimal point). When the measurement value exceeds 999999, indicates "-----" (hyphens).</p>
(2) Statistics Data	<p>For the imported measurement data, indicates the maximum value, minimum value, average value, standard deviation, the number of measurement data, and the measurement start, end time. Updates during measurement.</p> <p>For the average value, when the integer part of the calculated result has x digits, the number of digits after decimal point becomes 6-x.</p>
(3) Import control setting	<p>Import start trigger: After the measurement value exceeds the user defined Start Trigger, importation of data begins</p> <p>Import time limit: Importation ends when the user defined limit (sec), setting value has elapsed.</p> <p>Upper/lower judgment values: Indicates the upper/lower judgment values specified in the user setting screen.</p>
(4) Measurement interval	Indicates the measurement interval specified in the system setting.
(5) File Save button	<p>Generates the save destination folder selection screen.</p> <p>Saves the measurement data being displayed and statistics data (Max./Min./Ave./SD) to the file in the CSV format.</p>
(6) Restore button	<p>Indicates the file selection screen.</p> <p>Creates a new block, and reads the selected measurement data into it.</p>

(7) Start button /Stop button	Press the Start button to start importing the data. The Start button then becomes the Stop button. Press the Stop button to finish importing the data. The Stop button then becomes the Start button. During data import, buttons other than the Stop and Graph buttons, as well as the selection columns are disabled.
(8) Clear Block button	Click this button to display the confirmation screen. Click OK to delete the block that has been selected. When there are blocks No.1 to 4 and you delete block No.3, block No.4 is changed to No.3.
(9) Data Select button	Click this button to keep only the data that has been selected.
(10) Graph button	Click this button to display the Graph screen.
(11) Block tab*	Indicates the measurement data for every measurement. Up to 1000 block. Creates a new block for every measurement by pressing the Start button. You cannot switch data tabs while taking measurement.
(12) Measurement data*	Indicates the measurement value. Up to 65535 data points can be imported. Importing ends automatically when the maximum number of data points is attained.

*The measurement data and block tab are synchronized with the graph screen.

6.1 Measurement Display

Indicates the data importing status during measurement.

(1) Measurement value

- Indicates the measurement value (6 digits + decimal point).



- When the measurement value exceeds 999999, indicates "-----" (hyphens).



(2) Upper/lower limit judgment marks

- Indicates the upper limit mark when COMPARATOR UPPER_LIMIT in the user setting is less than the measurement data.

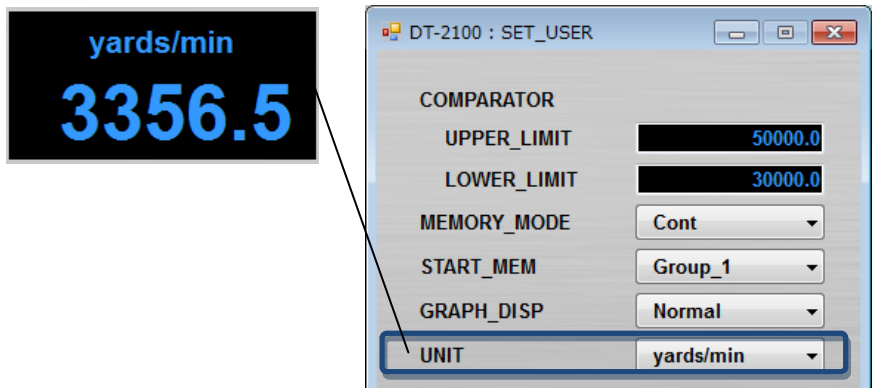


- Indicates the lower limit mark when COMPARATOR LOWER_LIMIT in the user setting is more than the measurement data.



(3) Measurement unit

- Indicates the unit specified in the SET_USER.



- Indicates "OVER" when the measured value exceeds the measurement range.



6.2 Measurement Results

(1) Measurement data

Measurement operation - 1

The sequence of screenshots shows the measurement operation. The first screenshot shows the "DT-2100 : Continuous Data Mode" window with the "Start" button highlighted. The second screenshot shows the same window with the "Stop" button highlighted. The third screenshot shows the same window with the "Start" button highlighted. Arrows indicate the flow of the operation. Text annotations explain the steps: "Press the Start button to start importing data. It then becomes the Stop button during measurement." and "Press the Stop button to finish importing data." The third screenshot also shows a table of measurement data.

The statistics data is calculated even during data import.

No.	rev/min	No.	rev/min	No.	rev/min
1	25985	20	14705	39	34528
2	25808	21	20290	40	36353
3	19885	22	18174	41	33280
4	22674	23	18650	42	33280
5	29496	24	16090	43	29451
6	21921	25	19774	44	22193
7	23974	26	17361	45	22721
8	20352	27	18176	46	26949
9	21118	28	16349	47	22712
10	17600	29	16461	48	25564
11	17977	30	15237	49	23849
12	17977	31	20939	50	20661
13	24837	32	24964	51	16717
14	17893	33	17312	52	19255
15	22956	34	16118	53	22304
16	23902	35	22574	54	19721
17	18094	36	33203	55	21634
18	19347	37	16547		
19	23773	38	10156		

Measurement operation - 2

Adds a new block for every data import by pressing the Start button. Measurement data is retained.

The screenshots illustrate the process of adding new data blocks to the DT-2100 Continuous Data Mode. Each screenshot shows the 'rev/min' display, statistical fields, and a table of data points. The 'Start' button is used to add a new block, and the 'Stop' button is used to end the measurement.

Screenshot 1: Initial State

rev/min: 21634

Max: 36353, Min: 10156, Ave: 21814.7, SD: 5375.99, Records: 55

Start: Mar/30/2015 20:22, End: Mar/30/2015 20:22

Start Trigger: 0, Limit (sec.): 0, Upper: 30000.0, Lower: 10000.0

Measurement Interval: 100msec

No.	rev/min	No.	rev/min	No.	rev/min
1	25985	20	14705	39	34528
2	25808	21	20290	40	36353
3	19885	22	18174	41	33280
4	22674	23	18650	42	33280
5	29496	24	16090	43	29451
6	21921	25	19774	44	22193
7	23974	26	17361	45	22721
8	20352	27	18176	46	26949
9	21118	28	16349	47	22712
10	17600	29	16461	48	25564
11	17977	30	15237	49	23849
12	17977	31	20939	50	20661
13	24837	32	24954	51	16717
14	17893	33	17312	52	19255
15	22956	34	16118	53	22304
16	23902	35	22574	54	19721
17	18094	36	33203	55	21634
18	19347	37	16547		
19	23773	38	10156		

Screenshot 2: After First Import

rev/min: 19353

Max: 28808, Min: 17573, Ave: 23000.5, SD: 2936.92, Records: 52

Start: Mar/30/2015 20:25, End: Mar/30/2015 20:26

Start Trigger: 0, Limit (sec.): 0, Upper: 30000.0, Lower: 10000.0

Measurement Interval: 100msec

No.	rev/min	No.	rev/min	No.	rev/min
1	17573	20	23322	39	23792
2	21611	21	23721	40	19533
3	24435	22	26321	41	21427
4	28169	23	24278	42	20334
5	25397	24	22824	43	21178
6	21519	25	23302	44	20353
7	22902	26	25492	45	26974
8	20479	27	28808	46	26422
9	19791	28	28096	47	22183
10	22534	29	21768	48	25526
11	26426	30	22754	49	23382
12	25125	31	18266	50	21126
13	23405	32	18369	51	28716
14	20837	33	20909	52	19353
15	23297	34	20343		
16	25317	35	22123		
17	19599	36	25295		
18	19599	37	18132		
19	27888	38	25704		

Screenshot 3: After Second Import

rev/min: 19895

Max: 33173, Min: 18627, Ave: 24961.5, SD: 3890.97, Records: 32

Start: Mar/30/2015 20:26


Start Trigger: 0, Limit (sec.): 0, Upper: 30000.0, Lower: 10000.0

Measurement Interval: 100msec

No.	rev/min	No.	rev/min
1	22342	20	32101
2	22144	21	29624
3	24397	22	30564
4	18627	23	23953
5	20659	24	28666
6	21530	25	33173
7	26320	26	28117
8	28837	27	22086
9	21118	28	20502
10	21120	29	27725
11	24221	30	29523
12	24390	31	19703
13	24390	32	28166
14	25562	33	22708
15	22120		
16	18930		
17	23250		
18	27914		
19	26995		

(2) Statistics Data

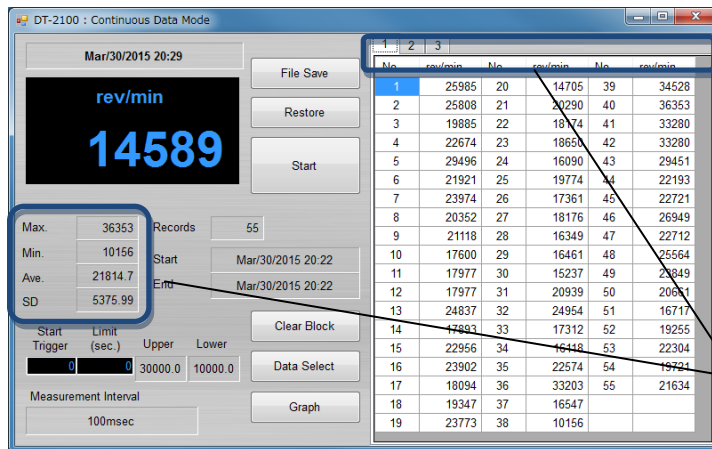
From the measurement data, calculates the maximum value/minimum value/average value/standard deviation (Max./Min./Ave./SD). Indicates and retains the data for every import.




Calculate and holds the statistics data for every import.

(3) Exporting the measurement data

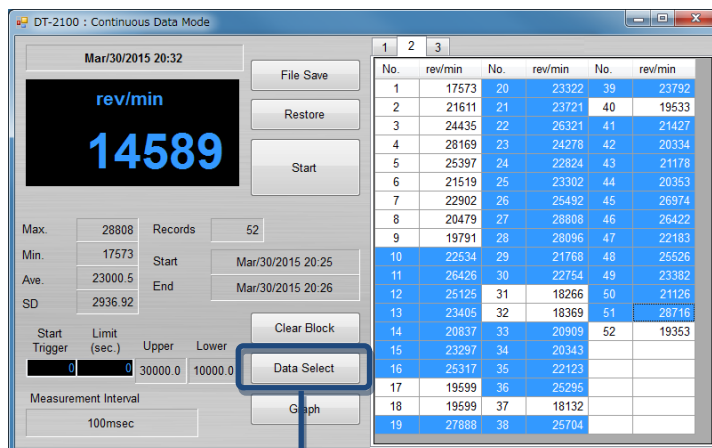Select the arbitrary measurement data. Click the Data Select button to export the selected data.




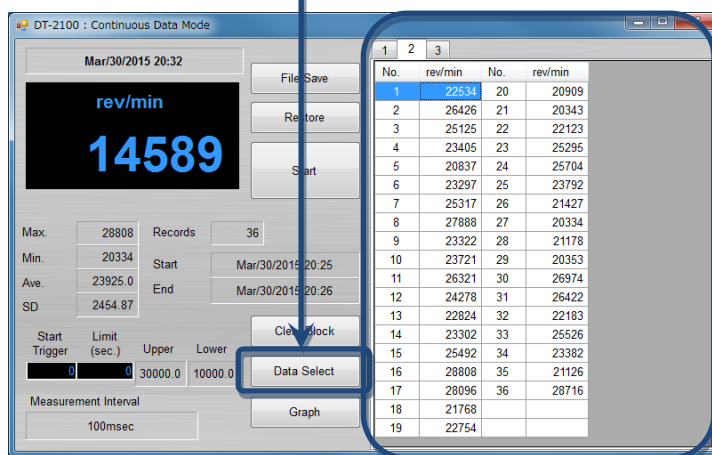*Multiple data may be selected when you press and hold the Ctrl key while clicking cells with the mouse button. Groups may be highlighted and selected by dragging the mouse while holding the Ctrl key.



(4) Deleting the measurement data

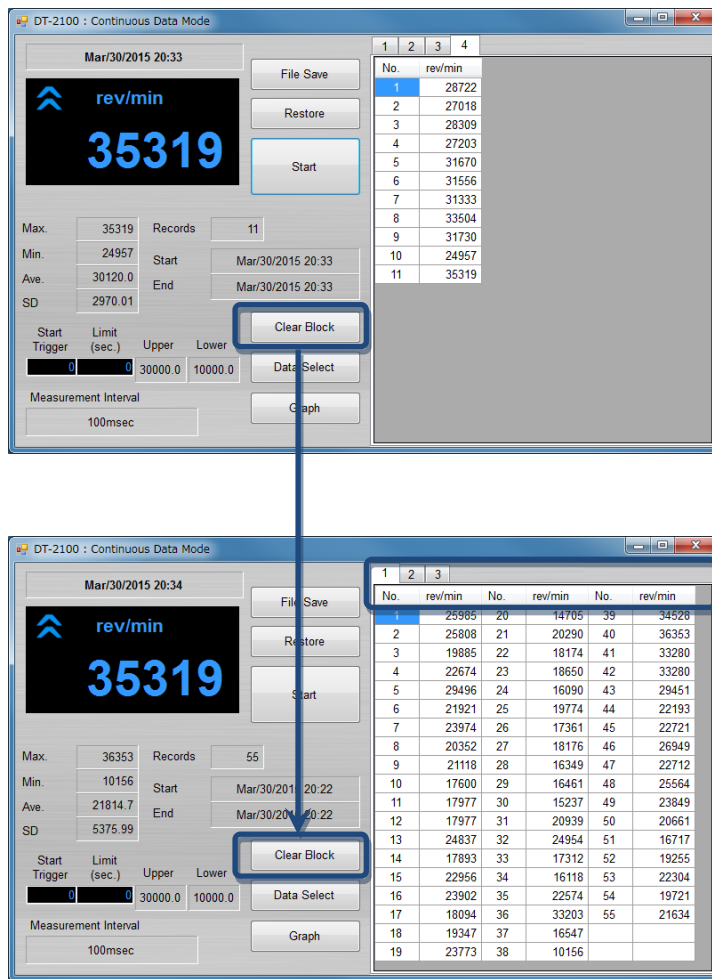Click the Clear Block button to delete the block tab that has been selected.



6.3 CSV File Operation

The measurement results can be saved in or read from the arbitrary CSV file.

- Save the measurement results in the CSV file

Click the File Save button to display the "Save as" dialog window.

Specify the arbitrary file name and save destination and click the save button to save the setting contents.

- Read the measurement results from the CSV file

Click the File Save button to display the "Open" dialog window.

Select the CSV file you want to open and click the "Open" button.

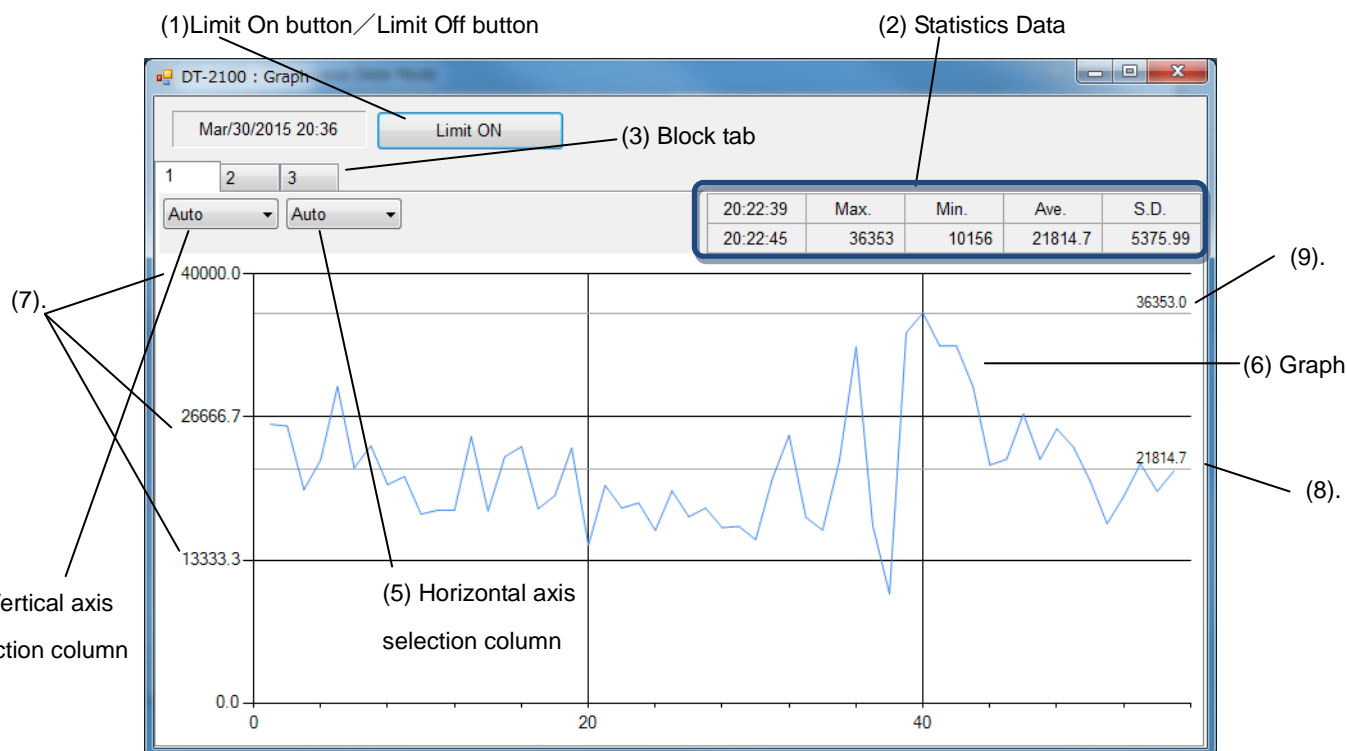
A new block tab is created and the measurement data as well as statistics data are displayed in the tab.

Only CSV files that have been saved with this application can be opened here.


If you try to open files other than those specified above, they cannot be opened normally.


7. Graph Screen

Select the "Graph button" in the continuous data import screen to display the graph screen.



(1)Limit On button / Limit Off button	<p>Press the Limit On button to draw the upper/lower limit graph. The Limit On button then becomes the Limit Off button</p> <p>Press the Limit Off button to erase the upper/lower limit graph lines. The Limit Off button then becomes the Limit On button</p>
(2) Statistics data	<p>For the imported measurement data, indicates the maximum value/minimum value/average value/standard deviation, the number of measurement data, and the measurement start/end time. Updates during measurement.</p> <p>For the average value, when the integer part of the calculated result has x digits, the number of digits after decimal point becomes 6-x.</p>
(3) Block tab	Synchronized with the block tab in the continuous data import screen, stores the measurement data and statistics data.
(4) Vertical axis selection column	<p>Select the maximum value on the vertical axis and specify the measurement data range.</p> <p>Ranges depend on each unit setting.</p> <p>If the measurement data does not fit within the range, the scroll bar becomes enabled to allow you to scroll up or down the column.</p> <p>If the Auto setting is selected, it switches the range automatically based on the measured data.</p>

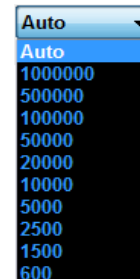

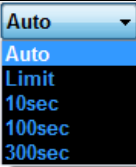
(5) Horizontal axis selection column	<p>Select the maximum value on the horizontal axis.</p> <p>Auto: Automatically adjusts to the time during measurement.</p> <p>Limit: Applies the Limit setting in the USB main screen. When the Limit is 0, the range setting is same as that for the Auto.</p> <p>10sec, 100sec, 300sec: Sets to the specified measurement time. If the measurement data exceeds the setting range, the scroll bar becomes enabled to allow you to scroll up and down the column.</p>	
(6) Graph	Indicates the real-time graph.	
(7) Graph values	Indicates the maximum graph value divided into three	
(8) Average value	Indicates the average value of measured data	
(9) Max value	Indicates the maximum value of measured data	

7.1 Graph Drawing


(1) Synchronization of measurement data and statistics data with the continuous data import screen

The graph and statistics data to be displayed are synchronized with the block tab in the continuous data import screen.

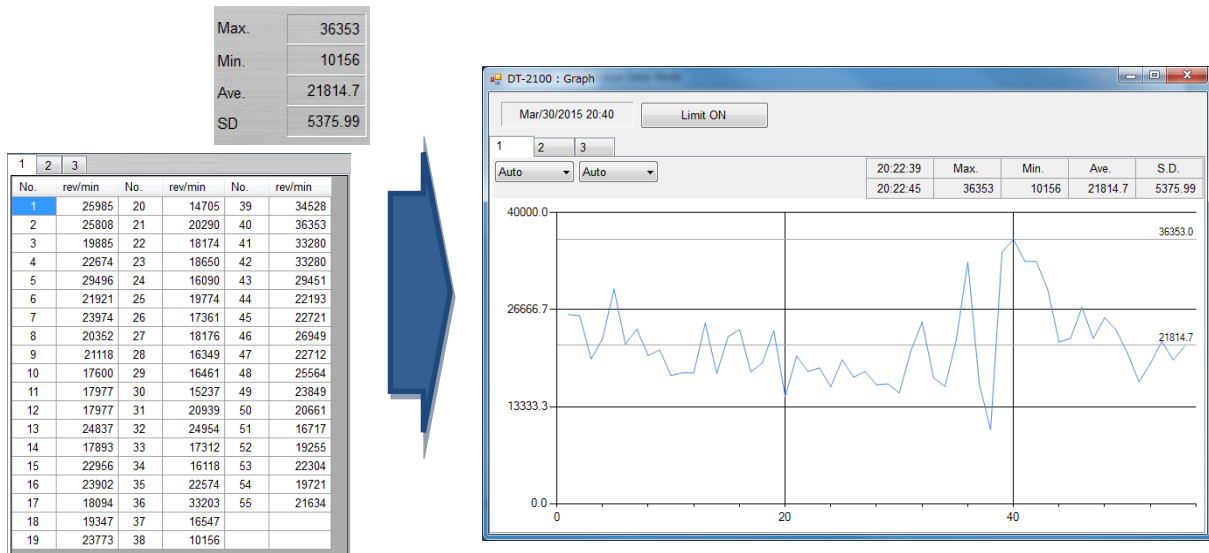The 1st measured data



The 3rd measured data

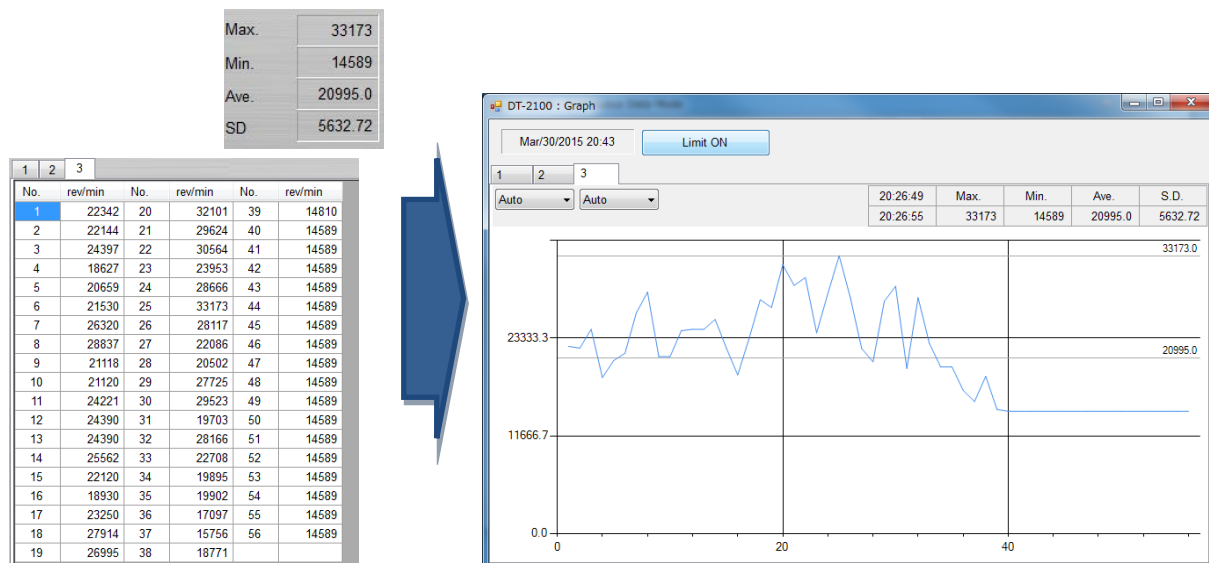

(2) Switching the display of the upper/lower limit graph

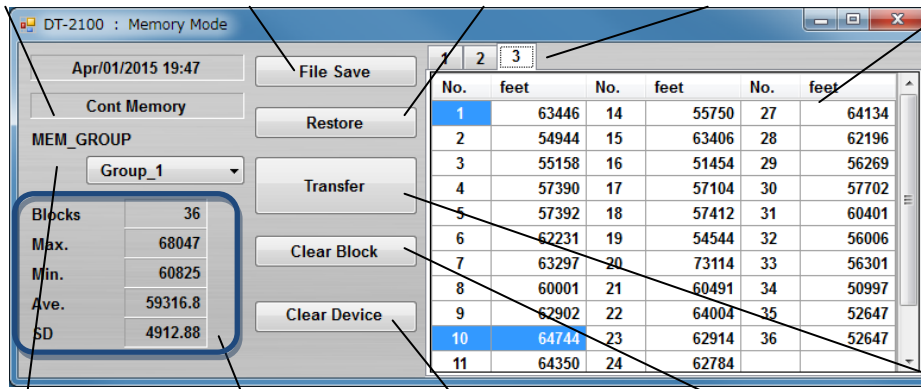
Use the Limit On button/Limit Off button to switch between displaying and hiding of the upper/lower limit graph.



8. Memory Data Import Screen

Select the "MEM_DATA_TRANSFER" button in the menu to display the memory data import screen.

- (1) Memory mode (2) File Save button (3) Restore button (4) Block tab (5) Memory data




- (6) MEM_GROUP (7) Statistics data (8) Clear Device button (9) Clear Block button (10) Transfer button

(1) Memory mode	Indicates the memory mode specified in the user setting.
(2) File Save button	Indicates the save destination folder selection screen. Saves the memory data being displayed to the file in the CSV format.
(3) Restore button	Indicates the file selection screen. Creates a new block, and reads the selected memory data into it.
(4) Block tab	Indicates the measurement data every time the memory data is read from the DT-2100. Up to 1000 blocks.
(5) Memory data	Indicates the memory data that has been read. The contents depend on the measurement mode (continuous memory/each memory/statistics memory).
(6) MEM_GROUP	Select the MEM_GROUP.
(7) Statistics Data	Indicates the maximum value, minimum value, average value, and standard deviation for the selected block number. Indicates the number of memory data in Blocks.
(8) Clear Device button	Click this button to display the confirmation screen. Click OK to delete the memory data for the MEM_GROUP that has been selected.
(9) Clear Block button	Click this button to display the confirmation screen. Click OK to delete the block that has been selected.
(10) Transfer button	Reads the memory data for the MEM_GROUP that has been selected.

8.1 Continuous Memory

Displays "No." and the corresponding "measurement value" recorded on the first row of the memory data, and the serial number and memory data below them.

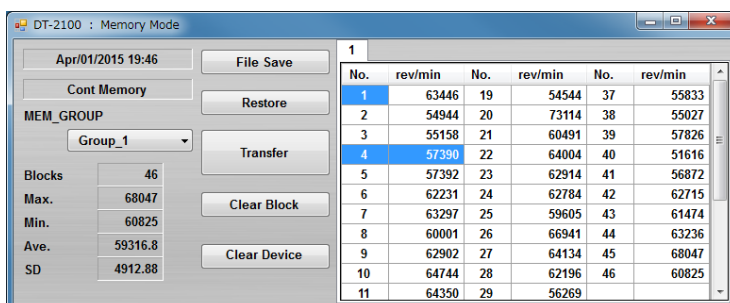Indicates the statistics data corresponding to the memory data on the statistics data column.



8.2 Each Memory

Displays "No." and the corresponding "measurement value" on the first row of the memory data, and the serial number and memory data below them.

Indicates the statistics data corresponding to the memory data on the statistics data column.

No.	rev/min	No.	rev/min	No.	rev/min
1	63424	14	57265	27	55004
2	59182	15	56351	28	56890
3	57476	16	57399	29	62097
4	62145	17	47073	30	50118
5	58363	18	56880	31	53979
6	50532	19	53808	32	52540
7	56911	20	49502	33	54444
8	60397	21	49722	34	53208
9	57446	22	43067	35	51773
10	47010	23	55156		
11	56707	24	51603		

8.3 Statistics Memory

Indicates "No.", "MAX", "MIN", "AVE", and "SD" on the first row of the memory data, and the serial number and memory data below them.

Indicates the selected memory data on the statistics data column.

No.	MAX	MIN	AVE	SD
1	64015	55130	60071.3	4937.94
2	65674	63753	61556.0	3861.07
3	65231	53925	58093.2	4492.53
4	61056	56036	57399.8	3297.56
5	60241	57858	57074.3	4727.04

8.4 CSV File Operation

The measurement results can be saved in or read from the arbitrary CSV file.

• Save the measurement results in the CSV file

Click the File Save button to display the "Save as" dialog window.

Specify the arbitrary file name and save destination. Click the save button to save the setting contents.

• Read the measurement results from the CSV file

Click the File Save button to display the "Open" dialog window.

Select the CSV file you want to open and click the "Open" button.

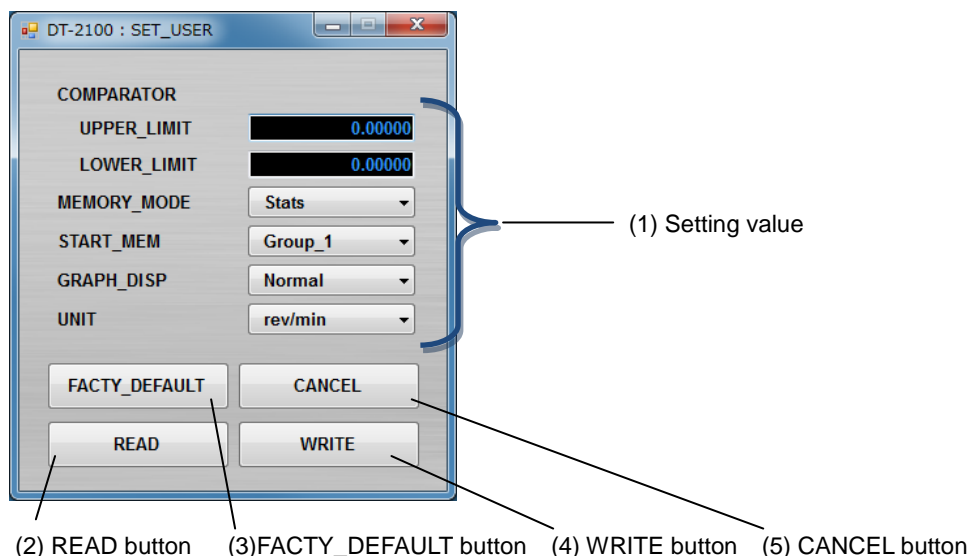
A new block tab is created and the measurement data as well as statistics data are displayed in the tab.

Only CSV files that have been saved with this application can be opened here.

If you try to open files other than those specified above, they cannot be opened normally.

9. SET_USER Screen

Select "SET_USER button" in the menu to display the SET_USER screen.




(1) Setting value	COMPARATOR	—
	UPPER_LIMIT	Enter 0.00000 to 999999 (0.00000)
	LOWER_LIMIT	Enter 0.00000 to 999999 (0.00000)
	MEMORY_MODE	Select from Cont , Each, or Stats
	START_MEM	Select from Group_1 , Group_2, Group_3, Group_4, or Group_5
	GRAPH_DISP	Select from Normal , Graph_1, Graph_2, or Graph_3
	UNIT	Select from the following items rev/min , m/min, cm/min, inch/min, feet/min, yards/min, rev/sec, m/sec, cm/sec, inch/sec, km/h, miles/h, cm, m, km, inch, feet, yards, or STP
(2) READ button	Reads the current user setting information from the DT-2100.	
(3) FACTY_DEFAULT button	Indicates the factory default values.	
(4) WRITE button	Saves the user setting in the DT-2100 and returns to the main screen. If the MEMORY_MODE value is different from the current setting value in the DT-2100, the confirmation message (OK/Cancel) is displayed.	
(5) CANCEL button	Returns to the main screen without saving the changed content.	

Note: default value indicated in bold letters

10. SET_SYSTEM Screen

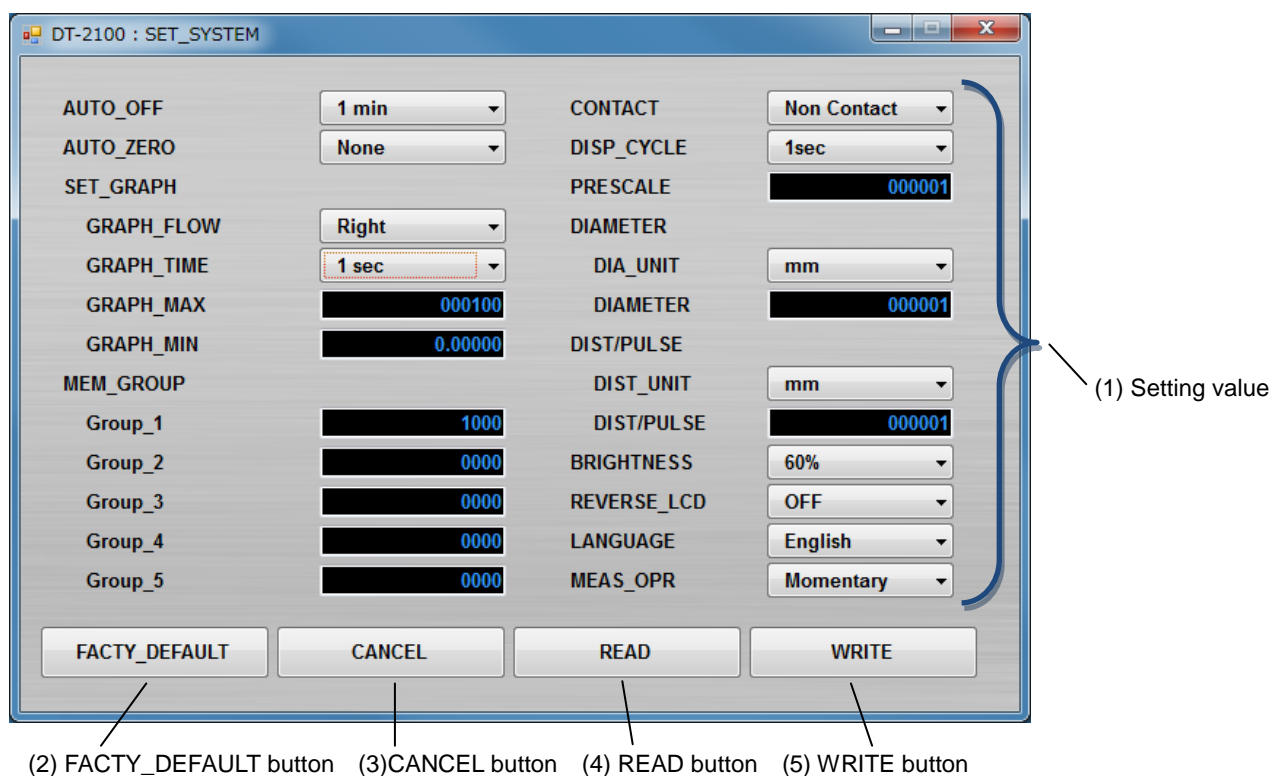Select "SET_SYSTEM button" in the menu to display the SET_SYSTEM screen.




(1) Setting value	AUTO_OFF	Select from 1min , 10min, or 30min
	AUTO_ZERO	Select from 1sec, 10sec, 30sec, 60sec, or None
	SET_GRAPH	—
	RAPH_FLOW	Select Right or Left
	GRAPH_TIME	Select from 1sec , 10sec, 50sec, or 100sec
	GRAPH_MAX	Enter 0.00001 to 999999 (000100)
	GRAPH_MIN	Enter 0.00000 to 999999 (0.00000)
	MEM_GROUP	—
	Group_1	0 to 1000 /100/100 (Cont/Each/Stats)
	Group_2	0 to 1000/100/100 (Cont/Each/Stats)
	Group_3	0 to 1000/100/100 (Cont/Each/Stats)
	Group_4	0 to 1000/100/100 (Cont/Each/Stats)
	Group_5	0 to 1000/100/100 (Cont/Each/Stats)
	CONTACT	Select from Contact, Non Contact , Auto, or Contact(Low)
	DISP_CYCLE	100msec, 500msec, 1sec , 5sec
	PRESCALE	Enter 0.00001 to 999999 (000001)
	DIAMETER	—
	DIA_UNIT	Select from mm , cm, m, inch, feet, or yards
	DIAMETER	Enter 0.00001 to 999999 (000001)

	DIST/PULSE	—
	DIST_UNIT	Select from mm , cm, m, inch, feet, or yards
	DIST/PULSE	Enter 0.00001 to 999999 (000001)
	BRIGHTNESS	Select from 20%, 40%, 60% , 80%, or 100%
	REVERSE_LCD	Select OFF or ON
	LANGUAGE	Select Japanese or English
	MEAS_OPR	Select Momentary or Continuous
(2) FACTY_DEFAULT button	Overrides the factory default values.	
(3) CANCEL button	Returns to the main screen without saving the changed content.	
(4) READ button	Reads the current system setting information from the DT-2100.	
(5) WRITE button	Saves the system setting in the DT-2100 and returns to the main screen.	

Note: default value indicated in bold letters








11. SEL_USER Screen







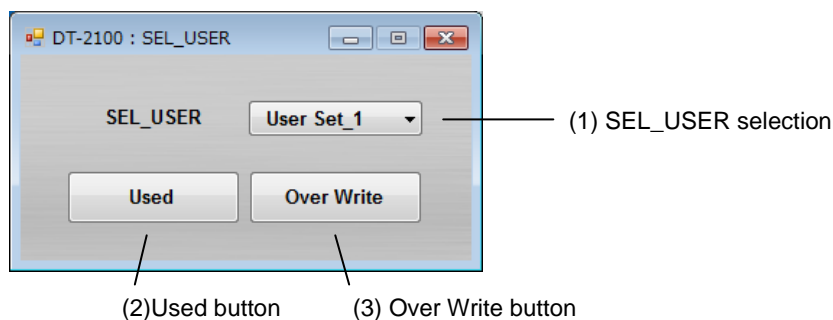
Select "SEL_USER button" in the menu to display the SEL_USER screen.











(1) SEL_USER selection	Select SEL_USER from User Set_1, User Set_2, or User Set_3.
(2) Used button	Reads the user setting and system setting contents for the selected SEL_USER.
(3) Over Write button	Writes the contents specified in the user setting and system setting for the selected SEL_USER.

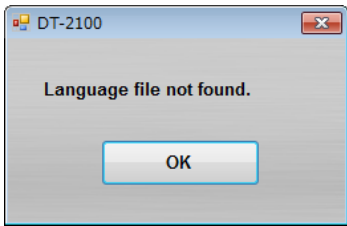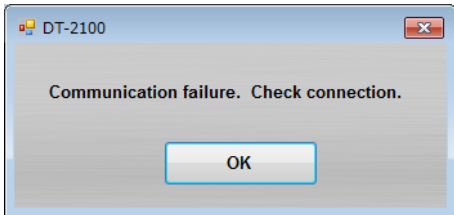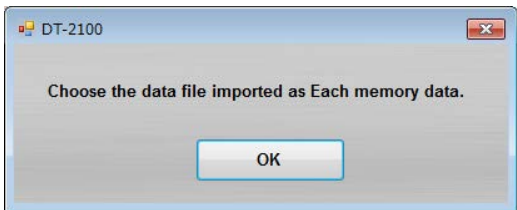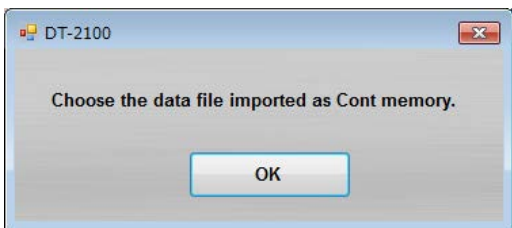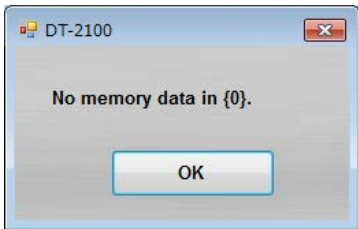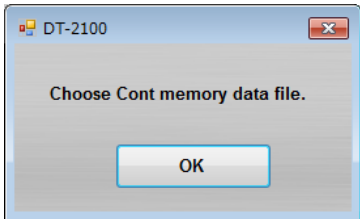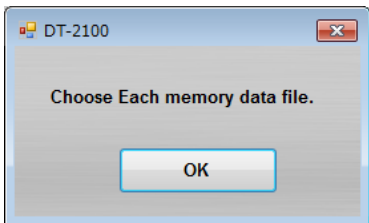12. Error Message List

Error Message	Cause	Countermeasure
	A valid localized file does not exist in the "lc" folder	Perform reinstallation of this application.
	The DT-2100 cannot communicate normally with PC Or the COM port number is incorrect	<ul style="list-style-type: none"> · Check communication between the DT-2100 and PC, as well as the power supply. · Check the COM port number from the Device Manager.
	Tried to open continuous data CSV file in the MEM_DATA_TRASFER screen.	Open the measurement data saved in the memory data import screen.
	Tried to open memory data CSV file in the CONT_DATA_TRASFER screen.	Open the measurement data saved in the measurement data import screen.
	There is no memory data in the group where the memory is imported	<p>Create the memory data.</p> <p>*The target group is shown in {0}.</p>
	In the memory data import screen (continuous memory mode), tried to open the measurement data saved in modes other than the continuous memory mode	Open the measurement data saved in the continuous memory mode
	In the memory data import screen (each memory mode), tried to open the measurement data saved in modes other than the each memory mode	Open the measurement data saved in the each memory mode

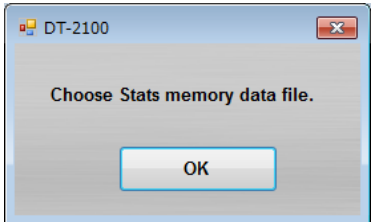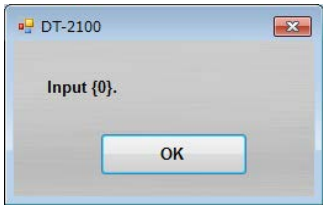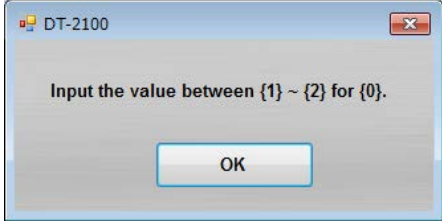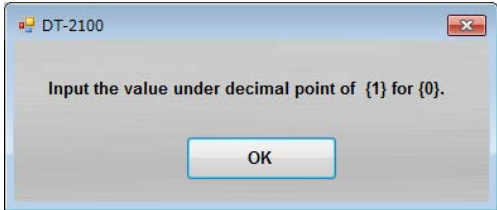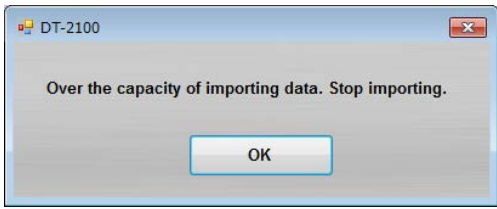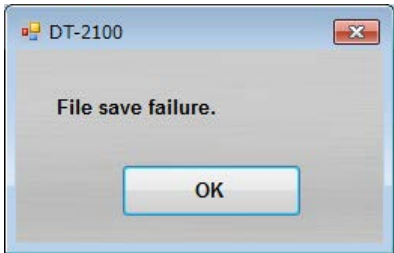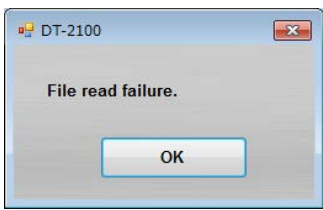	<p>In the memory data import screen (statistics memory mode), tried to open the measurement data saved in modes other than the statistics memory mode</p>	<p>Open the measurement data saved in the statistics memory mode</p>
	<p>There is a blank in the input item of the user setting screen and/or system setting screen</p>	<p>Enter the value in the item. *The target item name is shown in {0}.</p>
	<p>There is the value beyond the specified range in the input item of the user setting screen and/or system setting screen</p>	<p>Enter the correct value within the specified range. *The target item name is shown in {0}. *The lower limit value of the range is shown in {1}. *The upper limit value of the range is shown in {2}.</p>
	<p>There is a wrong input item of the user setting screen and/or system setting screen</p>	<p>Enter the correct value.</p>
	<p>When reading files for data measurement and continuous data, the number of tab blocks exceeds the maximum number</p>	<p>Delete the existing tab blocks so that the maximum number of the tab blocks does not exceed 1000.</p>
	<p>An error occurred while saving a file.</p>	<ul style="list-style-type: none"> · Check that the save destination folder exists. If not, create a folder. · Check that you have write permission into the save destination folder. If not, perform the write permission setting. · Check that the free space is sufficient on the drive. If not, secure the free space.
	<p>An error occurred while reading a file</p>	<p>The file may be corrupt. Select the file in the correct format.</p>

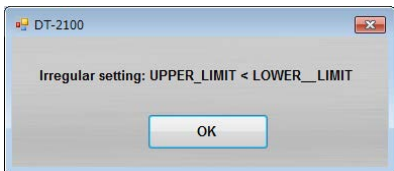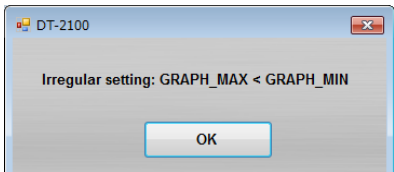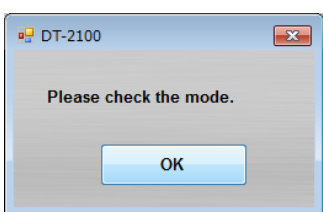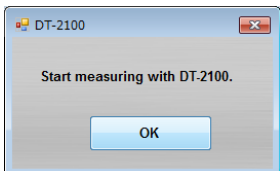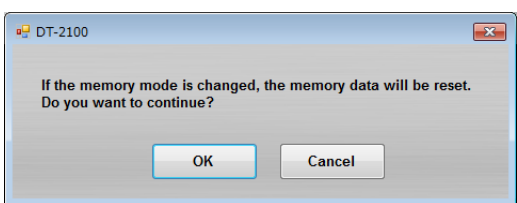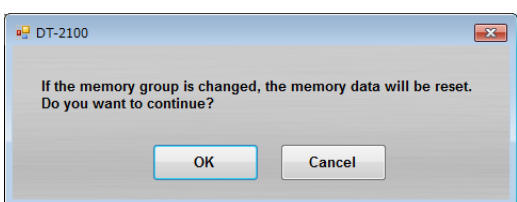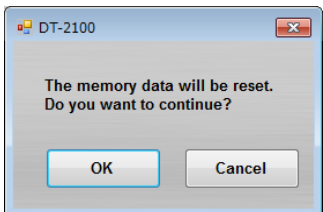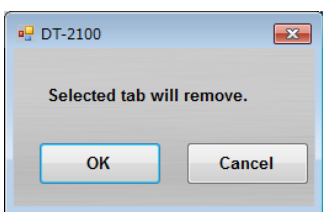	<p>In the user setting screen, the LOWER_LIMIT value is higher than the UPPER_LIMIT value</p>	<p>Set the UPPER_LIMIT value higher than the LOWER_LIMIT value.</p>
	<p>In the system setting screen, the GRAPH_MIN value is higher than the GRAPH_MAX value</p>	<p>Set the GRAPH_MAX value higher than the GRAPH_MIN value.</p>
	<p>Measurement data cannot be imported correctly from the DT-2100</p>	<p>Check that the DT-2100 is in the correct mode for measurement.</p>
	<p>The Start button was pressed when the DT-2100 was not in the measurement mode</p>	<p>Start measurement.</p>
	<p>This message is displayed when you have changed the memory mode value in the user setting screen, and have clicked the WRITE button.</p>	<p>Select "OK" to initialize the memory data, and switch the memory mode. Select "Cancel" to avoid switching the memory mode.</p>
	<p>This message is displayed when you have changed the memory group value in the system setting screen, and have clicked the WRITE button.</p>	<p>Select "OK" to initialize the memory data, and change the memory group. Select "Cancel" to avoid changing the memory group.</p>
	<p>This message is displayed when you have clicked the Clear Device button in the memory data import screen.</p>	<p>Select "OK" to initialize the memory data. Select "Cancel" not to initialize the memory data.</p>
	<p>This message is displayed when you have clicked the Clear Block button in the memory data import screen.</p>	<p>Select "OK" to delete the selected tab. Select "OK" not to delete the selected tab.</p>

13. Terms of Use

Please read the conditions of use below carefully before using this Special software of Handheld Digital Tachometer DT-2100 (hereinafter referred to as "this software"). By using this software, the user shall be subject to the terms and conditions below.

1. Rights

Nidec-Shimpo Corporation (hereinafter referred to as "the company") shall grant the user a license to use this software only for our company's products; provided, however, that the company shall retain all rights including, but not limited to, the copyrights related to this software and applicable documentations.

2. Restrictions

- (1) Acts such as modification, alteration, extraction, reverse engineering, decompilation or disassembly of this software shall be entirely prohibited. The company shall provide no warrants for such acts by the user.
- (2) Acts including, but not limited to, replication, reproduction, editing, distribution and selling of this software shall be entirely prohibited.
- (3) The user of this software shall not be allowed to transfer the use of this software or its copy to a third party, or to permit the use of this software or its copy by a third party, regardless of whether compensation is received or not.

3. Exemption of Liability

- (1) The installation and use of this software shall be entirely based on the user's decision and responsibility, and the company shall be no part of such acts.
- (2) The user shall be entirely responsible and/or liable for any damages caused to the user or a third party as a result of using this software, and the company shall bear no responsibility and/or liability for such damages. Also, the company shall pay no compensation for direct and/or indirect damages caused by such damages.
- (3) The company shall not guarantee that this software is accurate, appropriate or suitable for the user's purpose for using this software, and the company shall bear no responsibility for this software.
- (4) The company shall bear no obligation to modify or correct any possible flaw or defect of this software.

4. Modifications to This Software and the Terms of Service

This software and the terms of service are subject to changes and/or modifications without prior notice.

5. Export Control

The user shall comply with export control-related laws and regulations both inside and outside Japan when he/she takes this software out of the country.

6. Cancellation of License

The user's license to use this software shall be automatically cancelled if the user violates any of the terms of service above. Should such violation occur, the user shall either dispose of or delete this software.

14. Communication Commands

For communication commands, refer to the "RS232C Command List".

NIDEC-SHIMPO AMERICA CORPORATION

1701 Glenlake Avenue Itasca, IL 60143 USA
Phone: (800) 237-7079 FAX: (630) 924-7639