# **DPM R312-R412 Series Digital Panel Meter**

# **Operating Instructions Manual**

Sku Numbers: 12G514, 12G517, 12G518, 12G522, 12G525.

### **Features**

- R312 Indicates 3 & 1/2 Digit Display(means 0-1999)
- R412 Indicates 4 & ½ Digit Display(means 0-19999)
- Aux. Supply 85-250VAC
- Easy Installation by Using Stackable Mounting Bracket
- 3-1/2 and 4-1/2 Digit, 0.5" (12.7mm) High LCD Display with Optional Negative Image, Bright Red Backlighting
- Limited Range Display Scaling and Adjustable Offset
- Easy Installation by Using Standard Screw Terminals
- Minimum Depth Indicator Less than 2.5" (60mm) of Space Required Behind the Panel



These DPMs give high quality, accuracy and reliability in a compact, 60mm deep case.

All units have user-selectable decimal point, auto zero and limited scaling capabilities.


These DPM offer a 3-1/2 digit and 4-1/2, 0.5" (12.7mm) LCD display and also provide a bright red, negative image, backlight option.

For vertical or horizontal stacking of multiple indicators, a unique mounting bracket is provided.

All DPM units possess a 3/64 DIN, high-impact plastic case.

The Standard units have a clear viewing window, and a red window is provided for the units with optional negative image, red backlighting have a red window.


### Installation Details

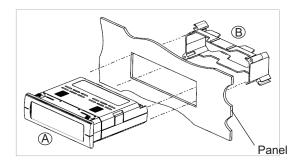

## **Mounting Requirements**

Insert the DPM (A) through the panel, and then slide the mounting bracket (B) Onto the DPM. The mounting bracket allows DPM units to be stacked side-to-side or top-to-bottom and maintain the DIN standard panel arrangements in 24mm by 72mm multiples. Panel cutout instructions are provided under "stacking features" (for stacking multiple units).

# **Panel Cutout Details**

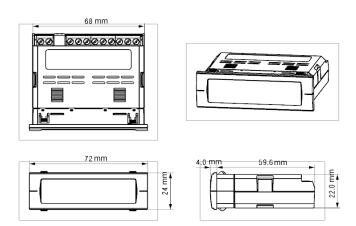

# **Specifications**

**DISPLAY** 

Type: 7-segment LCD(Non backlight or

negative image red)

Height: 0.5" (12.7mm)

**Decimal point:** 

R312: 3-position selectable R412: 4-position selectable

Over-range indication:

Most significant digit = "1"

**Backlighting:** 

Optional negative image

red backlight

Polarity:

Auto with "-" indication, "+" implied

**POWER REQUIREMENTS** 

AC Volt: 85-250VAC @40-440Hz

Power Consumption: (Non Fused)

85-250VAC: 2.5VA min/4VA max

Isolation:

250 Vrms Max

**NOISE REJECTION** 

CMRR: 86dB typical

**R312** 

**ENVIRONMENTAL** 

**Operating Temperature:** 

0 to 55°C

Storage Temperature:

10 to 60°C

**Relative Humidity:** 

0 to 85% non condensing @ 40°C

**Temperature Coefficient:** 

(0.2% of reading ±0.5 digits)/°C

Warmup time:

Less than 20 minutes

ANALOG TO DIGITAL CONVERSION

Technique:- Integrating

Rate:- 3 samples/second-typical

**MECHANICAL** 

**Bezel:** 0.95" x 2.84"

(24mm x 72mm)

**Depth:** 2.36" (60mm)

**Panel Cutout:** 0.88" x 2.68"

(22.2mm x 68mm)

**Weight:** 3.5oz (99.2g)

Case Material:


94-0, UL-rated, glass-filled thermoplastic



**R412** 



**Connections Details** 

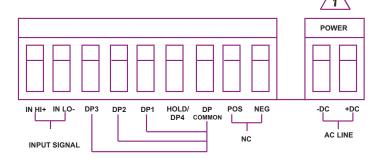

**WARNING:** These instruments are designed for maximum safety to the operator when mounted in a panel according to

instructions. They are not to be used unmounted or for exploratory measurements in unknown circuits.

Input Signal: Connect the signal to be monitored to the IN HI+ and IN LO- input terminals.

Input Power: For AC power, connect the AC POWER LINE to the AC LINE inputs. For optional DC power, connect the DC

Supply to the DC inputs. Observe polarity.

**Decimal Point:** 

To select a decimal point, connect the appropriate DP input pin (DP1 - DP3) to the DP COMMON output. Unused DP inputs may remain unconnected (open).


**Hold Option:** 

Connect the DP COMMON output to the **HOLD** input. If this feature is not required, the HOLD pin may remain unconnected. Dp4 replace HOLD in R412.


LCD Backlight Option:

Negative image, bright red backlighting is available in the R412. This illumination allows the unit to be read in Low ligh areas. Backlighting power is supplied by the R412, so no additional external power is Required.

# **Display Scaling**

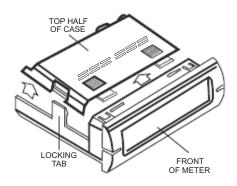

Spread the tabs on each side of the case, using a screwdriver or thumbnail to unlock the top half. Lift the rear of the top half and slide it away from the front of the meter.

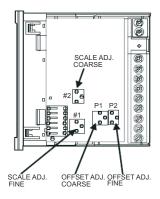

**Note:** Any physical damage to the Meter during calibration will void the warranty.

#### Range Adjustment:

There are no optional connections required for limited range coarse and fine adjustments for display scaling.

A bounded range of scaling values can be set with the help of #2("Coarse" adjustment). The meter can be scaled up to 2 times, or

down to ½ the value of the input, or a maximum reading of 1.999, whichever is lower.

Example: A maximum reading of 1.999 counts can be set for a 2 volt input so you cannot double the 2 volts, but you can make a 1 volt input read 1.999. The #1, "fine" calibrator, allows for an approximate

Apply the full scale input to the meter. Adjust #2 to within 1% of the desired scaled value, then use #1 to obtain the final desired result.

range of 1% of the "coarse" calibration.

#### **Offset Adjustment:**

DC Process indicators only possess Offset adjustment .

To adjust the offset, apply the offset input signal (e.g. 4mA on 4-20 mA input).

Use P1 for a "coarse" adjustment of the offset.

The offset can be scaled Up or down approximately 250 counts.

Adjust P1 To within 1% of the desired scaled value, then use P2 to obtain the final desired result.


# **Stacking Features**


Multiple units can be mounted in a single opening, allowing perfect alignment by using mounting brackets, included with every DPM (which can be connected together).

To punch one hole for multiple units, be sure to adjust the standard panel cutout dimensions as shown here; otherwise the meters will not fit properly in the hole.

Mounting multiple units is quick and easy. Install the first meter (bottom unit first if stacking vertically). Position the next mounting bracket snugly against the first one, and slide the second meter into place. Repeat for remaining units.

#### Vertical Standard cutout

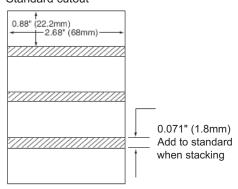

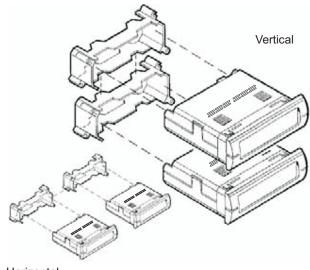

Horizontal

#### Horizontal Standard cutout



#### **Ordering Information:**

Sku	MODEL	Input Range	Accuracy	Display	Display	Input	Maximum	Power
Number	IVIODEL	input Nange	Accuracy	Span	Display	Impedence	Overload Allowed	Requried
12G514		0 to 10VDC		0 to 100%				
12G517	R312 Process	01010000	+/-0.2% of reading +/-1count	0 to 100%	Red LCD	10 M-ohm	250 VDC	85-250VAC
12G518		0 to 100VDC		1999	Red LCD			
						Voltage Drop		
12G522	R312 Process	4 to 20mADC	+/-0.2% of reading +/-1count	0 to 100%	<b>Gray LCD</b>	200 mVDC	60 mA	85-250VAC
12G525				0 to 100%	Red LCD			

# Safety Symbols



The WARNING sign denotes a hazard. It calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury.



The CAUTION sign denotes a hazard. It calls attention to an operating procedure, practice, or the like, which, if not correctly adhered to, could result in damage to or destruction of part or all of the instrument.

## LIMITED ONE-YEAR WARRANTY

If this product fails to perform satisfactorily due to a defect or poor workmanship within **ONE YEAR** from the date of purchase, return it to the place of purchase and it will be replaced free of charge. Incidental or consequential damages are excluded from this warranty.